

Universal Vent Tab Installation Instructions


Notice: The original tab comes with 4 "legs", but two have been removed so the tab will fit your vehicle.



Tools needed: 

O-ring pick (shown here) or some other "hook" which can be used to pull the back of the tab toward you. One common approach is to bend the end of a coat hanger or paper clip. O-ring picks can be purchased on automotive stores for around \$5-10


Step 1: Slide two pieces together until at least 2 snaps are engaged

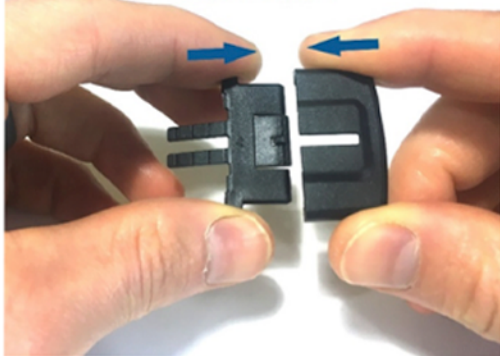

1 Slide tabs together until you hear 2 "clicks"



2 Slide tab onto louver

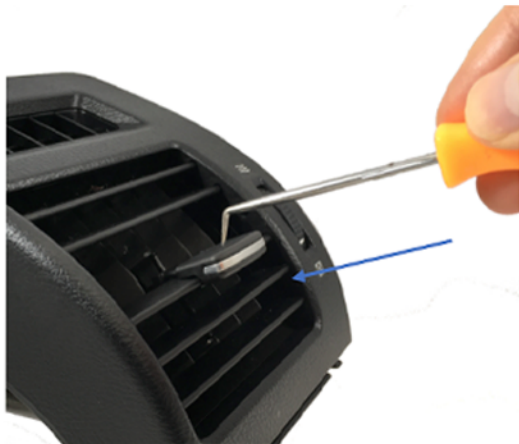

3 Insert "hook" behind back of tab



4 Push front of tab while pulling on back of tab. Tab will slide together and lock onto the louver.

Use for:

- BMW E70 X5 Rear
- BMW E83 X3
- Honda Civic
- Hyundai Accent
- Hyundai Verna
- Kia Optima
- Kia Sportage
- Mazda 3
- Toyota Corolla
- Toyota Land Cruiser
- Toyota Prado 150
- Toyota Prius 2004-09

Looking for dependable replacement dash panels? Rely on Vent Tabs for quality and long-lasting products.