




Installation Instructions: Vicrez VZR1 Front Bumper Lip Splitter vz101671 | Corvette C8

Required:

- Drill and Bits 3/16
- Brackets, Lug nuts, Screws, & Self-Tapping Screws (Included)



(1) Install the winglets with the hardware provide (screws, nuts, & brackets)

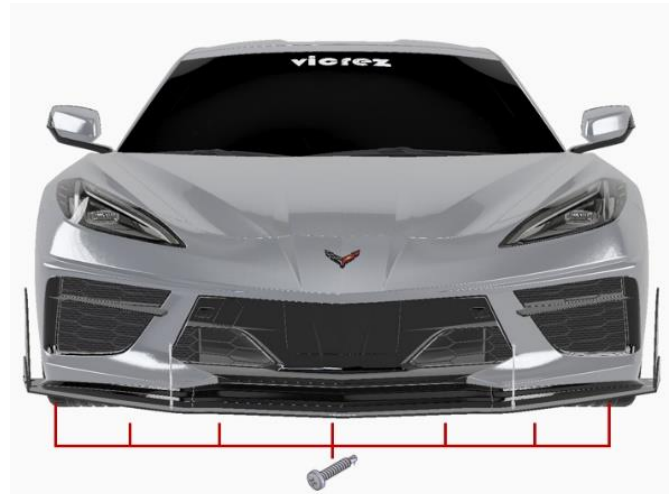

(2) Align the splitter w/ bumper & proceed to install front splitter using drilling screws or existing OEM hardware



(3) Support rods can be installed in any placement of the bumper. However, it is not required for installation



(4) Final result – how the front splitter should look