



Steering Wheel Covers VPASWC

INSTALLATION INSTRUCTIONS

HELPFUL HINTS:

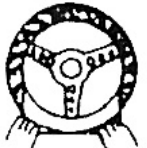


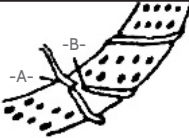
Do not unravel long lace. Heat cover for a more pliable and stretchy installation. Cover is delicate and can tear easily if not heated up. Stretch the lace approximately 25% as you wind. Carefully stretch cover over steering wheel, holding fingers together and straight. Use flat part of fingers to distribute tension. Do not use finger tips, you may tear holes.

CLEANING TIPS:

Use a vinyl-type cleaner or soap and water.

CAUTION:

Covers are not recommended for steering wheels with horn buttons built into the rim.

1	Place cover over steering wheel with longest part of lace at bottom. Be sure cover is stretched evenly around the wheel.	
2	 Stretch steering wheel cover over wheel with lace through the first "A". Front edge over, back edge under.	
3	Stretch lace firmly as you wrap around the wheel. Space evenly over non perforated areas.	
4	 When entire wheel is laced, insert long lace through hold "B" and pull it out of hole "A".	
5	Tie ends together with a double knot and cut off excess. Tuck knot back into hole.	