

Installation Instructions for kit number 119206

Audi A4 09-13 2.0L

Audi A5 11-13 2.0L

1. Disconnect the negative battery cable.



2. Loosen the clamp holding the factory air duct to the factory box.



6. Remove the factory bracket assembly from the fender.



3. Disconnect the MAF sensor harness from the MAF sensor.



7. Remove the factory rubber mounts from the stock air box.



4. Remove the air intake ducting from the factory air box.



8. Press the rubber mounts back into the stock location.



5. Remove the factory air box by pulling up and out.

9. Clamp the Filter onto the Volant air duct.

Installation Continued



10. Press the duct through the hole in the air box.



14. Attach the 3 to 2.5 reducer onto the inlet



11. Using the T-20 Torx bit remove the factory MAF sensor.



15. Press the Volant box into the factory rubber grommets and into the factory scoop.




12. Replace the factory sensor gasket with the supplied Volant gasket.



16. Attach the air duct to the reducer using the #48 clamp



13. Attach the MAF sensor to the Volant air duct.

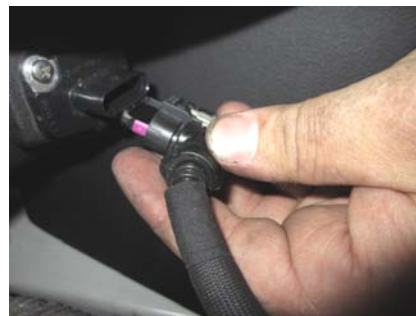

17. Attach the MAF sensor harness and negative battery cable.