


# VOLANT COOL AIR INTAKES
## PART NO.: 17861
## INSTALLATION INSTRUCTIONS

| 17861 PARTS LIST | | | |
|---|---|---|---|
| 1 | VOLANT FILTER BOX | 3 | 1/4" WASHERS |
| 1 | VOLANT FILTER BOX LID | 1 | 1/4" LOCK WASHER |
| 1 | VOLANT AIR DUCT | 1 | 1/4" NUT |
| 1 | RAM FILTER W/CLAMP | 4 | 1/4"-20 TRUSS HEAD SCREWS |
| 2 | #056 CLAMPS | 4 | 1/4" RUBBER WASHERS |
| 1 | 3 1/4" X 3" SLEEVE | 1 | 1/2" RUBBER GROMMET |
| 1 | 1/4"-20 BOLT | 1 | VOLANT BRACKET |
| 1 | | 1 | 1/2" X 15" BREATHER HOSE |

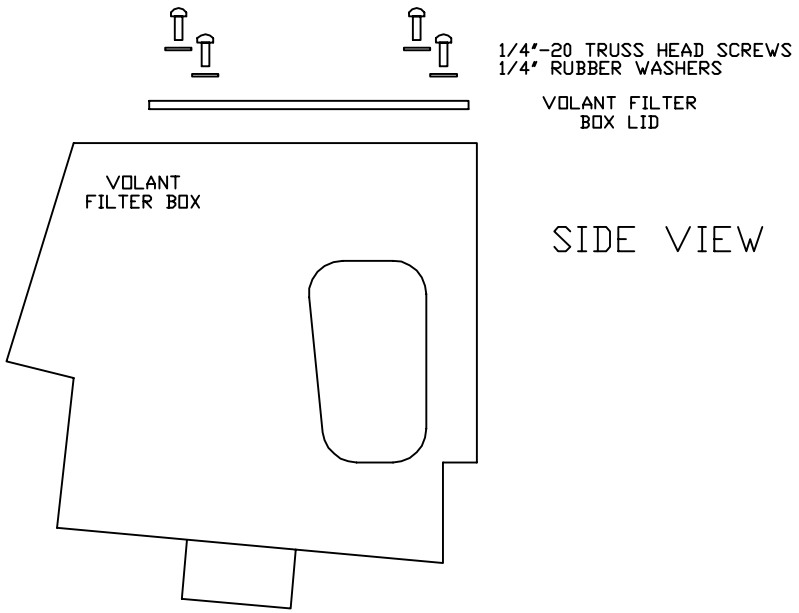



SIDE VIEW

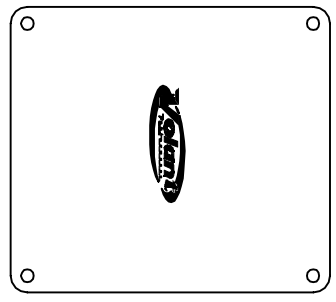

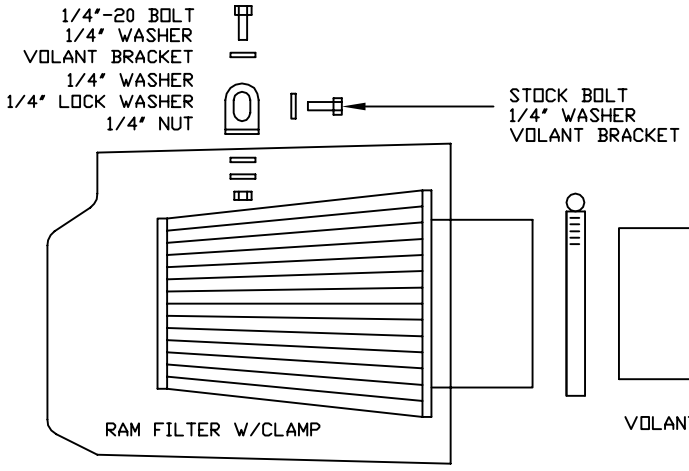


TOP VIEW

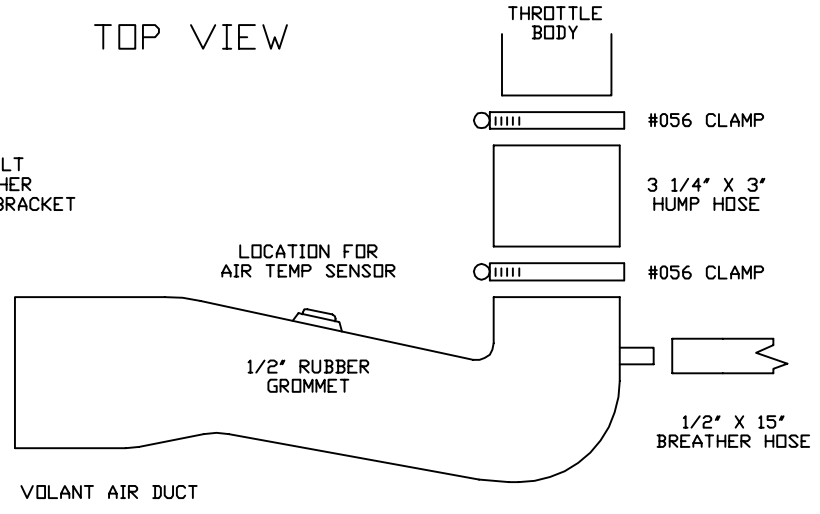

# 17861 install instructions

1. Disconnect the negative battery cable.



2. Loosen the clamp holding the duct to the throttle body



3. Un clip the ATS sensor harness from the sensor.




4. Loosen the clamp holding the duct to the box.



5. Remove the factory air duct.

6. Remove the breather hose from the air box and crankcase.

7. Remove the factory air box top and filter.

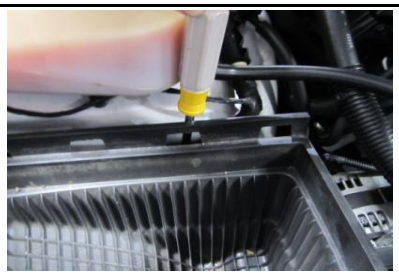

8. Remove the bolt holding the air box down.



9. Un clip the ram inlet from the front of the air box.

10. Remove the factory air box.





11. Remove the grill pins and remove the grill.



12. Install the volant bracket.



13. Install the volant air box.



14. Attach the box to the volant box.



15. Install the scoop into the volant box.



16. Re install the grill.



17. Slide the filter through the air box.



18. Press the volant duct into the filter.



19. tighten the clamps holding the duct to the filter and the throttle body.




20. Attach the breather hose to the crankcase vent hose and the motor.




21. Attach the air box lid.



22. Remove the ATS sensor.

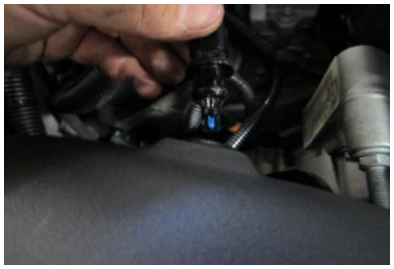

23. Press the ATS sensor into the volant duct and attach the harness.



24. Re attach the negative battery cable.