

# Installation Instructions

## Tape-On Wind Deflectors

### Important Safety Information



- CAUTION - Before driving, insure that the vent visor is properly secured to vehicle.
- Do not use automatic "brush-style" car washes.
- Do not use cleaning solvents of any kind.
- Periodically check all components to make sure they are secure.

### Contents - 2 Piece Set



Front Driver  
Side Visor



Front Passenger  
Side Visor



Alcohol Pad x2



Scotch Brite Pad

### Contents - 4 Piece Set



Front Driver  
Side Visor



Front Passenger  
Side Visor



Rear Driver  
Side Visor



Rear Passenger  
Side Visor



Alcohol Pad x4



Scotch Brite Pad

### Tools Required



Car Wash Supplies



Clean Towel

### Preparation Before Painting / Installation

- A trial fit is recommended to ensure proper positioning and fit.
- Check fit of parts before painting as we will not accept the return of modified or painted parts.
- Wash your vehicle to remove any debris and/or dirt from installation area.
- Dry the installation area with a clean towel.

## Installation Steps

**NOTE:** Actual application may vary slightly from illustrations.



Scuff rubber trim with Scotch Brite scuff pad. Clean trim/mirror cap with alcohol pad.



rubber window trim

mirror cap

1

Peel back tape liner on front and rear end flanges.

lateral flange

rear end flange

front end flange

2

Align driver side vent visor with previously cleaned area and apply pressure to exposed tape

Position over mirror cap

3

Remove remaining tape liner.

4

Apply pressure along length of vent visor to secure.



5

Repeat installation procedure for passenger side front vent visor.

## Installation Steps

**NOTE:** Actual application may vary slightly from illustrations.


### 4 piece Set



Alcohol  
Pad


Scuff rubber trim with Scotch Brite scuff pad. Clean trim along top of door with alcohol pad.

6

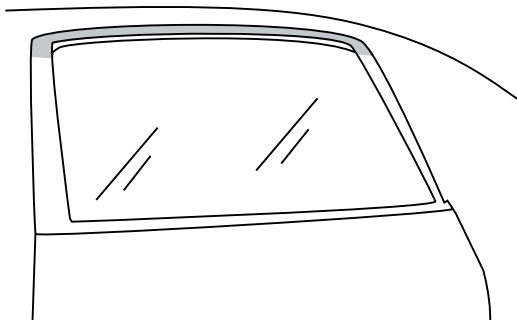


Remove tape liner from front and rear flanges. Peel back 2" of tape liner from each end.

7




Align vent visor with previously cleaned area and apply pressure to exposed tape. Remove remaining tape liner.

8

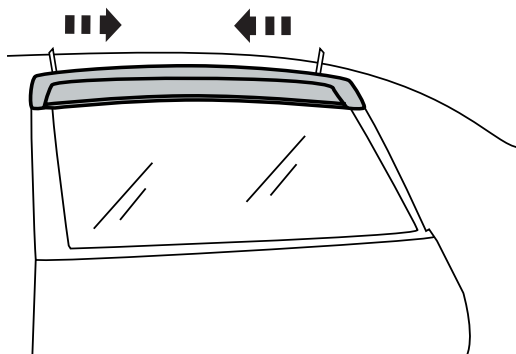

Apply pressure along length of vent visor to secure.

9

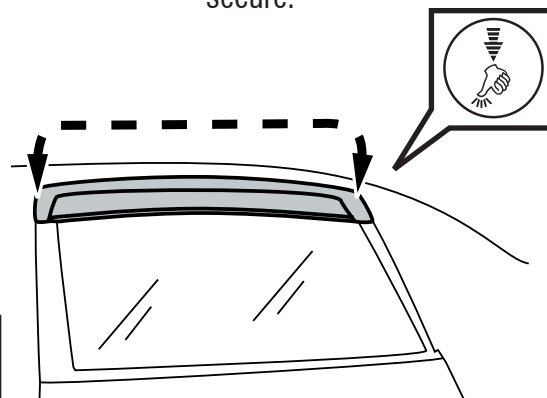

Repeat installation procedure for passenger side rear vent visor.

## Care and Cleaning

- Wash only with mild soap & dry with a clean cloth.

## Congratulations!