




WAGNER TUNING

INSTALLATION INSTRUCTION FOR

INTERCOOLER - KIT VAG 1,6-2,0 TDI

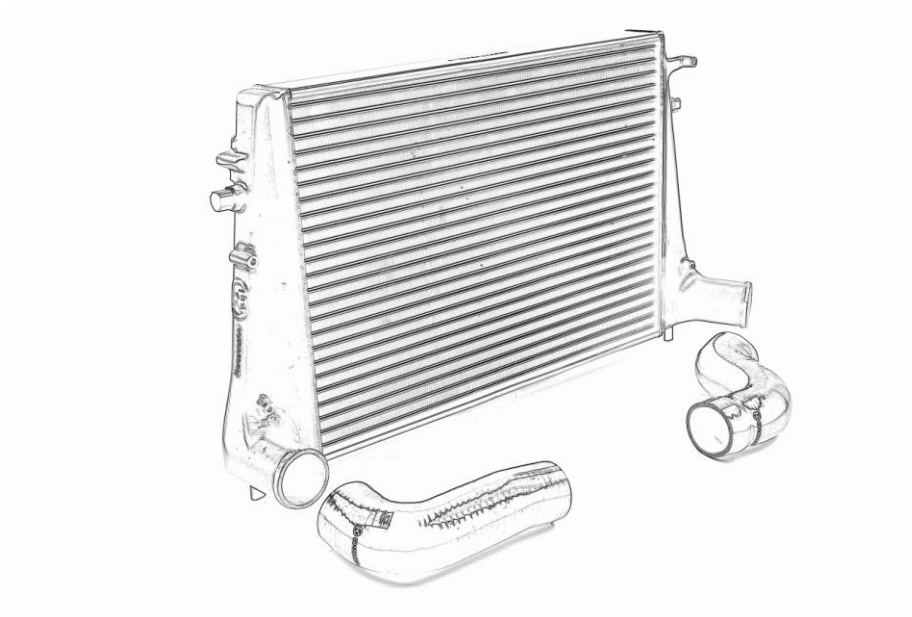

Congratulations on your purchase of our intercooler kit. We have developed a product that offers the best possible fit for your vehicle. This information is intended to assist installation in your vehicle. We recommend fitment by a qualified mechanic.

Partlist:

- | | | |
|---|-----------|--|
| 1 | 001001030 | VAG 1,6-2,0 TDI (<i>intercooler</i>) |
| 2 | 001004050 | <i>silicon hose</i> |
| 1 | 001004051 | <i>silicon hose</i> |
| 2 | 32016080 | <i>60-80 hose clamp</i> |
| 8 | 1151616 | M6x16 <i>allen screw</i>) |
| 8 | 23016 | <i>washer</i> |

(Step 1):


components to remove:

- underbody
- frontbumper
- cross member
- headlight
- radiator support



(Step 2):

- loosen hose clamps from the intercooler.
- deduct charge air hoses and remove them.
- loosen 5 screws AC-cooler.
- loosen 4 screws on watercooler.
- remove the OEM intercooler.

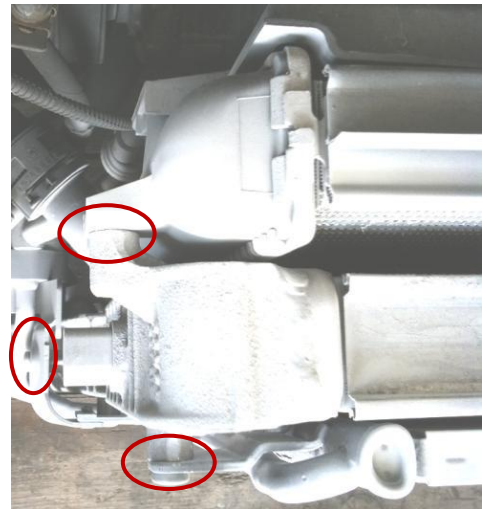

(Step 3):

- bring the Wagner-Tuning intercooler into position and mount the water+AC-cooler. It may come as a result of manufacturing tolerances, that the mounting holes are need to be modified on the water- or AC-cooler.



(Step 4):

- *Insert the radiator package into the radiator support.*
- *remount the radiator support to the vehicle.*
- *install the supplied silicon hoses.*
- *remount the cross member.*
- *remount the headlights.*
- *check everything for tight fit.*
- *remount the front bumper.*
- *remount the underbody.*

