



WAGNERTUNING

Installation Instruction

Intercooler

BMW F07 F10 F11



Kit-Nr.: 200001069

WAGNERTUNING Intercooler

Important Notes!

These Installation Instructions have to be read carefully before beginning installation work. The company Wagner Tuning bears no liability for damage caused by incorrect installation!

As manufacturer, we are obliged to point out that any changes you make to a vehicle licensed for use on public roads require approval by a test centre and registration in the vehicle documents.

Installation Time (1 unit = 5 minutes)

*The installation time is around **10 units**, which may vary depending on vehicle condition and equipment level.*

Tools Required

- various spanners
- various screwdrivers


WAGNERTUNING Intercooler

1x intercooler painted black

2x stainless steel bracket

4x allen screw M6x16

4x washer

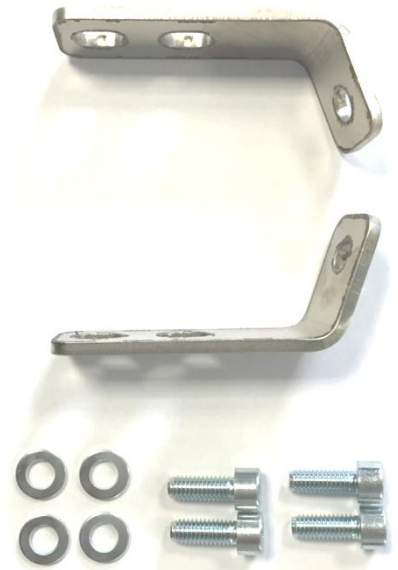

WAGNERTUNING Intercooler

1. demounting

The dismantling of the charge air cooler made according to the guidelines of the automobile manufacturer.

Remove the underfloor protection.

Remove plastic cover.

Release the charge air hoses on the intercooler, pull off and lay aside.

Remove the stock intercooler.



2. Installation

Move the WAGNER TUNING intercooler from below into position. For attachment use the stainless steel brackets, the allen screw M6 and washers.

Connect the air charge hoses to the intercooler on both sides. Pay attention, that the metal clamps lock at the right position.

Inspect all parts for proper fit. Re-install underfloor protection.