



WAGNERTUNING

Installation Instruction

Intercooler

Ford F-150 3,5 Ecoboost 2015-



Kit-Nr.: 200001087

WAGNERTUNING

Important Notes!

These Installation Instructions have to be read carefully before beginning installation work. The company WAGNERTUNING bears no liability for damage caused by incorrect installation!

As manufacturer, we are obliged to point out that any changes you make to a vehicle licensed for use on public roads require approval by a test center and registration in the vehicle documents.

Installation Time (1 unit = 5 minutes)

*The installation time is around **12 units**, which may vary depending on vehicle condition and equipment level.*

Tools Required

- various spanners*
- various screwdrivers*
- sharp-bladed cutter*

WAGNERTUNING

Part list

- 1 *intercooler (black coated)*
- 1 *silicone hose (black)*
- 2 *sheet metal brackets stainless steel*
- 2 *hose clamps 80-100 mm*
- 2 *rubber-metal-buffer M8*
- 2 *washer 8mm*
- 2 *M8 hexagon lock nut*
- 4 *allen screw M8x12*
- 1 *washer 5mm*
- 1 *allen screw M5x12*



WAGNERTUNING

1. demounting


The deinstallation of the intercooler is done according to the guidelines of the automobile manufacturer.

Uninstall the lower cross member and remove all charge air hoses from the stock intercooler. After this, you can remove the stock intercooler.

Now ~~uninstall the upper cross member (1)~~ and remove the additional frame of the air guide (2).

Cut a rectangular hole inside the cover to the engine compartment. Width 24in. Depth results by the extended line from frame of air guide (front) and visible fold at the cover (rear).

Remove the left sided charge air hose with click-connection.

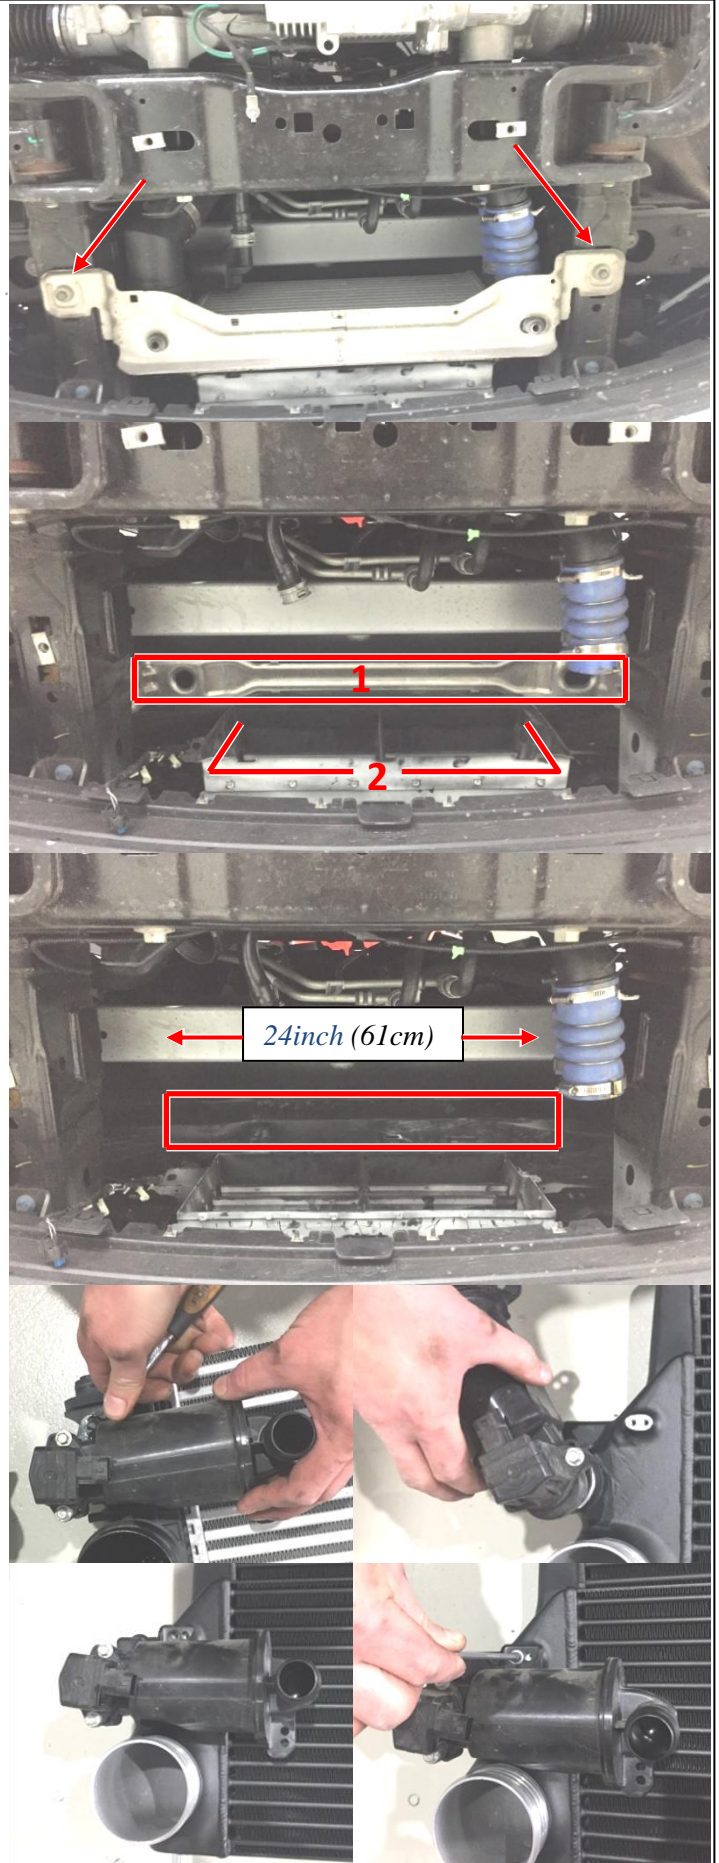

2. preparation

Remove divert air valve from stock intercooler and install it to the WagnerTuning intercooler. For fixing use the supplied M5 allen screw and washer.

WAGNERTUNING

2. installation

Screw in rubber-metal-buffer M8 to the mounting points (ri./le.) of upper cross member. Then place the stainless steel brackets as shown and fix them with supplied M8 hexagon lock nuts and washer. Please note! Do not fully tighten, this will allow an easier installation of intercooler.

Place the WagnerTuning intercooler from below to the before installed stainless steel brackets and fix the intercooler with the supplied M8 allen screws. Now you can tighten the M8 hexagon lock nuts.

Install the supplied silicon hose and all other charge air hoses to the WagnerTuning intercooler. At least install back the lower cross member. Please note! Don't forget to replace the stock rubber bearing (3)!

