

Installation Instruction

Intercooler

Ford F-150 3,5 Ecoboost 2017-



Kit-Nr.: 200001118

GENERAL NOTES



WAGNERTUNING

Important Notes!

These Installation Instruction have to be read careful before beginning installation work. The company WAGNERTUNING bears no liability for damage caused by incorrect installation!

As manufacturer, we are obliged to point out that any changes you make to a vehicle licensed for use on public roads require approval by a test center and registration in the vehicle documents.

Installation Time (1 unit = 5 minutes)

The installation time is around 18 units, which may vary depending on vehicle condition and equipment level.

Tools Required

- various spanners
- various screwdrivers
- sharp-bladed cutter
- car body saw or similar

COMPONENTS SUPPLIED



WAGNERTUNING

Part list

- 1 intercooler (black coated)
- 1 silicone hose (black)
- 2 sheet metal brackets stainless steel
- 2 hose clamps 80-100 mm
- 2 rubber-metal-buffer M8
- 2 plain washer 8mm
- 2 M8 hexagon lock nut
- 4 allen screw M8x12
- 1 washer 5mm
- 1 allen screw M5x12
- 2 additional bracket oil cooler
- 2 allen screw M6x20
- 2 plain washer 6mm



INSTALLATION INSTRUCTION



WAGNERTUNING

1. demounting


The deinstallation of the intercooler is done according to the guidelines of the automobile manufacturer.

Uninstall the lower cross member and remove all charge air hoses from the stock intercooler. After this, you can remove the stock intercooler.

Now uninstall the upper cross member (1) and remove the additional frame of the air guide (2).

Cut a rectangular hole inside the cover to the engine compartment. Width 24in. Depth results by the extended line from frame of air guide (front) and visible fold at the cover (rear).

Remove the left sided charge air hose with click-connection.

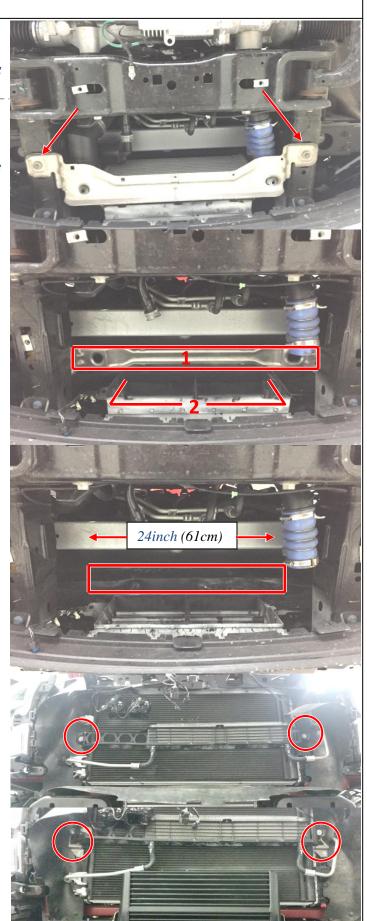

2. relocate oil cooler

Remove the front grille to reach the oil cooler. Than relocate the oil cooler while using the supplied stainless steel brackets. Note, the pipes of oil cooler needs to be movable. If necessary please bend the pipes a bit.

INSTALLATION INSTRUCTION



WAGNERTUNING

The position of the horn needs to be adjusted.

Therefore use the existing horn bracket and edit the bracket in this way so the horns can be mounted again above the oil cooler.

Hint: Cut the marked flap from horn bracket and bend the bracket.(see the pictures)



Remove divert air valve from stock intercooler and install it to the WagnerTuning intercooler. For fixing use the supplied M5 allen screw and washer.

4. installation

Screw in rubber-metal-buffer M8 to the mounting points (ri./le.) of upper cross member. Then place the stainless steel brackets as shown and fix them with supplied M8 hexagon lock nuts and washer. Please note! Do not fully tighten, this will allow an easier installation of intercooler.





Place the WagnerTuning intercooler from below to the before installed stainless steel brackets and fix the intercooler with the supplied M8 allen screws. Now you can tighten the M8 hexagon lock nuts.



Install the supplied silicon hose and all other charge air hoses to the WagnerTuning intercooler. At least install back the lower cross member. Please note! Don't forget to replace the stock rubber bearing (3)!