




Protecting Your Adventure Lifestyle

91635 Spare Tire Spacer INSTALLATION INSTRUCTIONS

NOTE: The 91635 Spare Tire Spacer is not directly compatible with the backup camera if your FJ Cruiser is equipped with one. Some modification may be required on behalf of the end user to make these necessary adjustments, however Warrior does not provide documentation on how to accomplish this.

INSTALLATION:

1. Remove the 3 lug nuts holding the factory spare tire to the factory spare tire carrier.
2. Remove the spare tire and set aside.
3. It is necessary to cut off the 'spare tire rest' to allow the 91635 Spare Tire Spacer to sit flush against the factory spare carrier.
4. Decide which orientation you require for your spare tire to be positioned. By rotating the Spare Tire Spacer you can move it up, down, left or right.
5. Slide the holes of the Spare Tire Spacer over the studs of the factory spare tire carrier and locate it in the direction needed to properly space the spare tire.

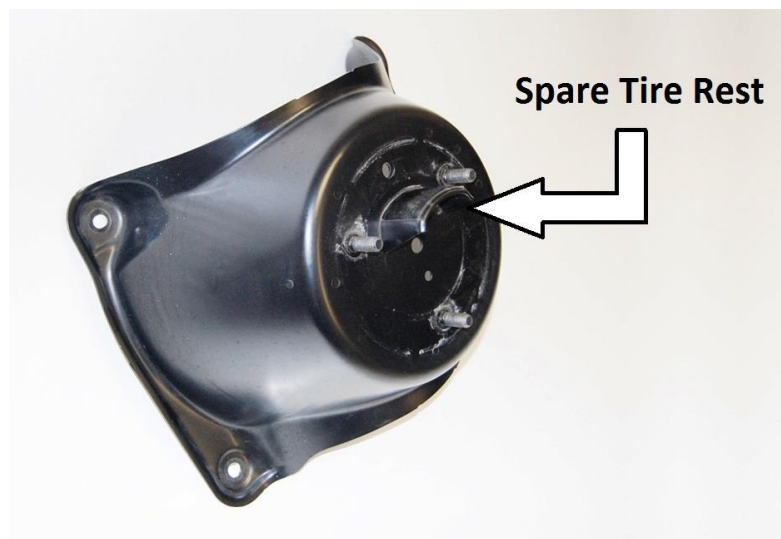

6. Use the supplied nuts (and washers in some kits) to attach the Spare Tire Spacer to the factory spare tire carrier.
7. Slide the spare tire back onto the studs of the Spare Tire Spacer and re-attach using the lug nuts removed in step #1. Your installation is now complete.

THANK YOU FOR PURCHASING WARRIOR PRODUCTS

Check out a selection of spare tire covers and carriers offered in our online store.