



Protecting Your Adventure Lifestyle

3516 '10-'13 FJC Warrior Front Bumper Skidplate Installation Instructions

NOTE: This Skidplate is only compatible with the 3520 & 3530 Warrior FJC Front Bumper.


KIT CONTENTS:

Description	Qty	Description	Qty
Front Bumper Skidplate	1	5/16" Hex Nut	5
5/16" Stainless Steel Button Head Screw	5	5/16" Lock Washer	5

INSTALLATION:

1. Locate and remove the four 12mm bolts that affix the factory skidplate to the front and secondary cross members. Pivot the factory skidplate off the two forward 'hooks' and temporarily set aside.
2. Looking at the front cross member of the FJ you should now see two 14mm bolts. Remove these two bolts and set aside. (Fig. 1)
3. Set the Warrior skidplate into place with the lower two tabs through the narrow sheet metal structure where you accessed the 14mm bolts. The five holes along the top edge of the skid plate should also line up with the lower holes in the Warrior FJC front bumper. **Loosely** thread the 5/16" screws with the lock washers and nuts on the inside through the bumper and top edge of the skid plate and the factory 14mm bolts through the skidplate lower tabs.

Note: On some early versions of the 3520-3530 Warrior front bumper there may be some clearance issues with the two outermost mounting holes and the bumper's inner winch plate support structure. Utilizing a cut-off tool to trim the two outermost 5/16" screws shorter will alleviate this issue.

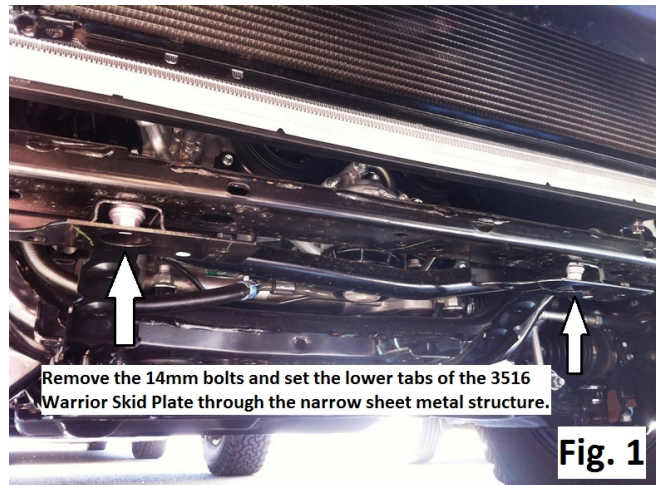

4. Once the skidplate has been positioned and all bolts have been threaded, tighten all hardware. Take the factory skidplate and reinstall onto the front and secondary cross members with the factory 12mm bolts.
5. Double check fitment and that all hardware is tight. The installation of your 3516 FJC Warrior Front Bumper Skidplate is now complete.