


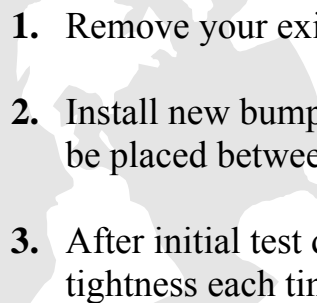

ROCK CRAWLER BUMPER
WITH RECEIVER
INSTALLATION INSTRUCTIONS
WAR 575- 576- 577- 580

- 
1. Remove your existing bumper, or bumperettes, from your vehicle.
 2. Install new bumper using the 7/16” lock nuts and washers provided. Washers should be placed between the nut and the frame.
 3. After initial test drive, check all bolts for tightness. You should check all bolts for tightness each time before using the receiver hitch for towing.

Enjoy your new bumper !

.....
“Your Knight in Shining Armor!”