




Protecting Your Adventure Lifestyle

ALUMINUM HALF DOORS
INSTALLATION INSTRUCTIONS
WAR 914DOOR
TOYOTA FJ-40 LANDCRUISER

Read all instructions before proceeding.

NOTE: You will need to purchase a pair of Bestop Paddle Handles #245.46P and follow their instruction for its installation. Modify the striker pin as needed.

1. On the inside of each door, install foam molding per Diagram.
2. Install Paddle Handle and modify striker as needed.
3. Hang door on your vehicle and check for proper fit. Close door slowly onto paddle striker being sure that the paddle and striker line up correctly. You may need to “tweak” the hinges to get a perfect fit.

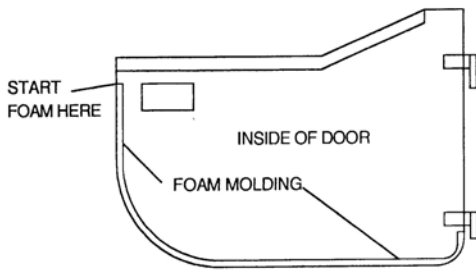

Enjoy your new Warrior half doors!

THANK YOU FOR PURCHASING WARRIOR PRODUCTS