



Protecting Your Adventure Lifestyle

3860 FJ Cruiser Platform Rack

Kit Contents:

<u>Item</u>	<u>Qty</u>	<u>Item</u>	<u>Qty</u>
Main Platform	1	M8 SS Button head cap screw	12
Front Mount (SMALL) - LEFT	1	5/16" Lockwasher	12
Front Mount (SMALL) - RIGHT	1	5/16" Washer (SMALL)	12
Rear Mount (LARGE) - LEFT	1	3/8" x 1" Hex Bolt	12
Rear Mount (LARGE) - RIGHT	1	3/8" Washer (LARGE)	24
		3/8" Nyloc Nut	12

Installation Instructions:

1. Locate the 6 mounting points on the roof of the vehicle by removing the existing roof rack, or by removing the covers in the roof trim.
2. Remove the 2 bolts and the bracket from each mounting point, leaving only the channel with 2 plastic sleeves remaining (Figure 1). Loosen BOTH bolts before you remove either bolt. Do not remove a bolt without first loosening the bolt next to it. Failing to follow this procedure may cause damage to the brackets inside the roof.
3. On each side of the vehicle, attach the small mount to the front mounting point, and the large mount to the rear two mounting points on each side of the roof with the upper tabs of the bracket facing inboard, toward the center of the vehicle roof (as shown in Figure 2). Place the mounting bracket into the channel so that the plastic sleeves are positioned in the holes of the mount. Attach the mounts with the supplied M8 Button Head cap screws, lock washers, and small washers. Fully tighten all twelve mounting screws.

(Optional: You may want to apply some silicon or other gasket material around the plastic sleeves in the roof to ensure a water proof installation.)



Figure 1

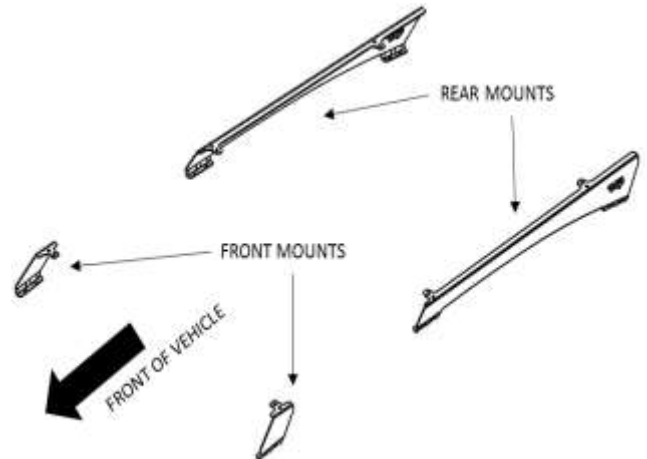



Figure 2



Protecting Your Adventure Lifestyle

***NOTE:** If your mounting brackets do not fully seat into the mounting channel you may have to slide the trim, or cut it with a hack saw to provide clearance.

- Next, with all four mounting brackets positioned and fully tightened, carefully place the main platform on top of the mounting brackets with the curved end forward, and the corner plates and mounting plate surfaces on the bottom side of the rack. (Note: this will be much easier with the help of a friend)
- Loosely install all twelve $3/8"$ x $1"$ Hex bolts to attach the main platform to the mounting brackets. You may have to flex the mounting brackets inward or outward to get the holes to align properly. Due to the taper of the FJ Cruiser roof and mounting point locations, the bolts must be placed in the appropriate mounting holes. Please refer to Figure 3 (below) for the correct mounting bolt placement.
- Fully tighten all hardware to secure the rack in place.

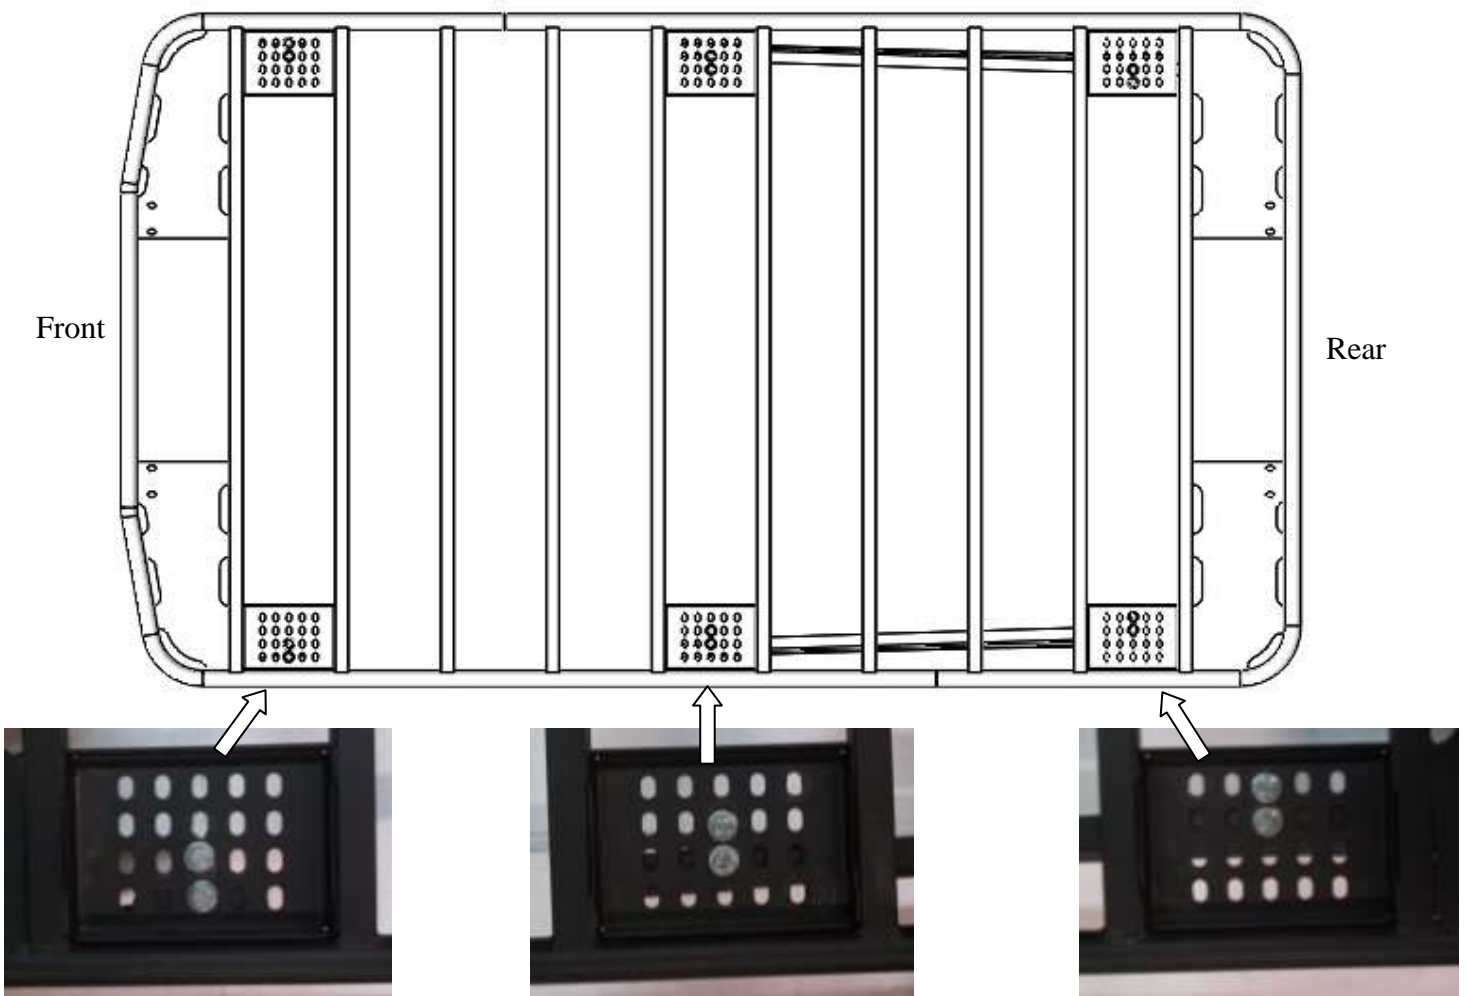

Discover other roof racks and cargo carriers on our website.