



Recommended Air Filter Cleaning Intervals: 3000 Miles.

Part #'s Hyper Intake : 906-113 / Dragon Intake : 806-113

Application : 2000-04 Subaru Forester / 00-01 Impreza / 00-04 Legacy / 01-04 Outback  
(2000-2002 FORESTER/ IMPREZA/ LEGACY 2.5L #D-489-2 ONLY) Parts List :


1 x Weapon\*R Intake pipe. / 1 x Weapon\*R [Air Filter](#) / 2 x 10mm x 24" Hose / 1 x 2.75" coupler  
1 x Intake System Bracket kit / 3 x 3" Clamp / 1 x Grommet

**Note: Additional Parts needed when you have a Dragon Filter, 1 x 2.75"-3" Coupler / 2 x 3" Clamp**

- 1 Remove bolts securing OEM air cleaner box, loosen clamps on OEM rubber intake pipe.
- 2 Remove the PCV hoses from OEM intake and engine.
- 3 Remove the OEM rubber intake tube, remove the OEM air cleaner box by pulling upwards.
- 4 Wipe the throttlebody clean of any grease, install the 2.75" coupler onto throttlebody, secure with OEM clamp.
- 5 Insert Weapon\*R intake pipe into the 2.75" coupler, secure with clamp.
- 6 Measure from valve cover PCV ports to Tee fitting, and from Tee fitting to intake pipe. Replace with supplied 10mm hoses.
- 7 Measure from crankcase PCV port to 10mm port on intake pipe. Replace with supplied 10mm hose.
- 8 **Note: Later models may have an AIT sensor. Drill a 3/8" hole at least 3" from throttlebody, insert supplied grommet, and insert AIT sensor into grommet.**
- 9 Install the Weapon\*R Hyper filter onto end of intake pipe.  
**Note: Dragon / Secret Weapon Filter Option : Disregard installation on Hyper filter.**
- 10 Stretch the 2.75-3" coupler onto Dragon or Secret Weapon air filter, secure with supplied clamp.
- 11 Install filter assembly onto the Weapon\*R Intake Pipe, secure with clamp.
- 12 Install U-shaped part of intake system bracket under the clamp on air filter.
- 13 Install the rubber mounting grommet to the closest hole to the Weapon\*R air filter.
- 14 Bend the straight portion of the intake system bracket to the Rubber mounting grommet.
- 15 Secure with washer and nut included in bracket kit.
- 16 Position air intake pipe for clearance, making sure no parts are touching any part of the vehicle.
- 17 Check for hood clearance, re-adjust intake tube for perfect fitment and clearances.
- 18 Place Weapon\*R CARB Sticker on a visible place in engine compartment. ( If Applicable )

**WARNING: EO# LABEL IS REQUIRED TO AID IN THE PASSING THE SMOG CHECK INSPECTION.**

**Note:** Returned Products may be subject to a 25% restocking charge. **INSTALLED PRODUCTS ARE NON-REFUNDABLE !**  
Report any defective or missing parts to the authorized Weapon\*R dealer you purchased this product from.  
Installation does require some mechanical skills. We recommend a qualified mechanic to install this product.

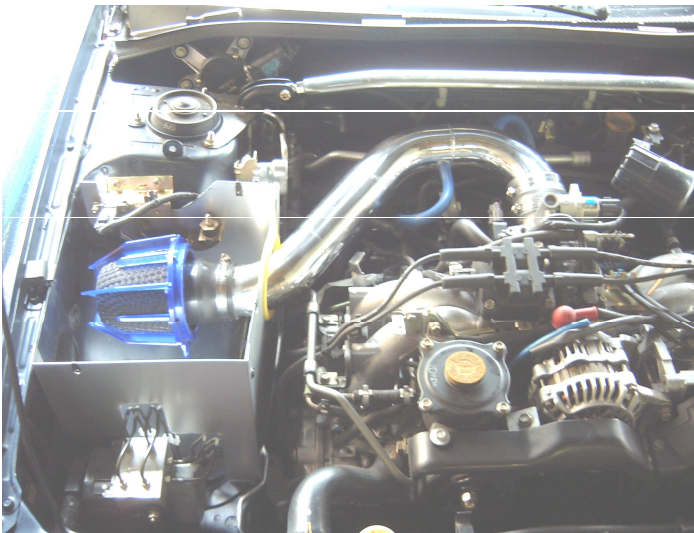

Dragon intake installed inside Aluminum air box ( flexi glass top cover upgrade not show ) Ram air kit install shown on top pic.