

Part #'s Hyper Intake : 907-145 / Dragon Intake : 807-145

Application : 1997-2000 ESCORT / TRACER 2.0L SPLIT PORT INJECTION

Parts List : 1 x Intake pipe. / 1 x Weapon*R Air Filter 3" / 1x 2.5-3" Coupler / 2x 15mm x 12" Hose
1 x Intake System Bracket kit / 2 x 3" Clamp / 1 x AFM-NS2 Adapter Kit / 1 x 10mm x 12"
1x3"-3" coupler/ 1x 1/2 " plastic "T" fitting


Note: Additional Parts needed when you have a Dragon Filter.

1 x 3"-3" Coupler / 2 x 3" Clamps

PIC#1




PIC#2

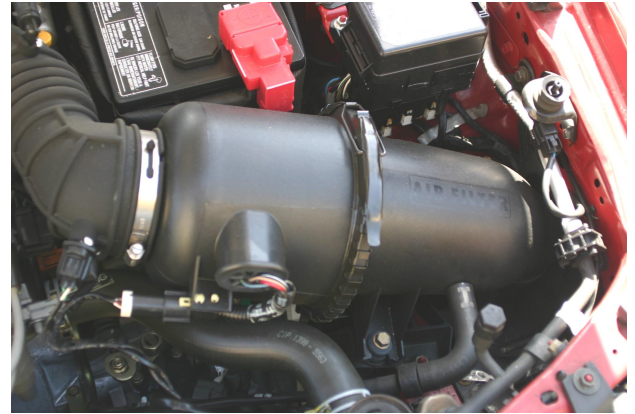


1. Disconnect the 2 vacume lines from the OEM intake tube
2. Disconnect the 1 vacume line from the bottom air box put aside
3. Remove AIT sensor that is inside OEM intake tube put aside
4. Unclamp the 2 clamps on each end of the OEM intake tube and remove stock OEM intake tube.
5. Unclamp the hold down clamp on the OEM air box
6. Unplug Mass air sensor harness
7. Remove OEM airbox from chasis of car
8. Unbolt Mass air sensor from top of OEM airbox by removing 4 bolts holding it to the OEM air box.

PIC#3

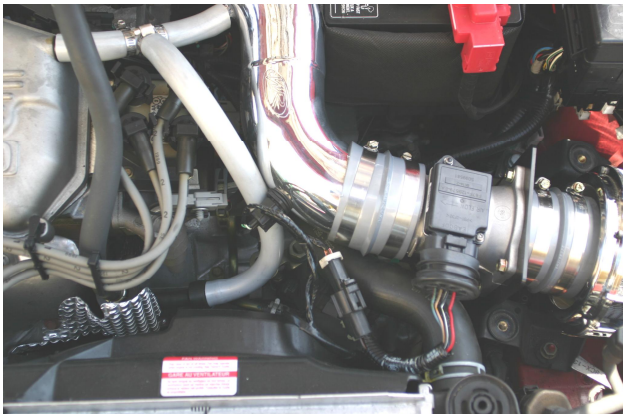

PIC #4

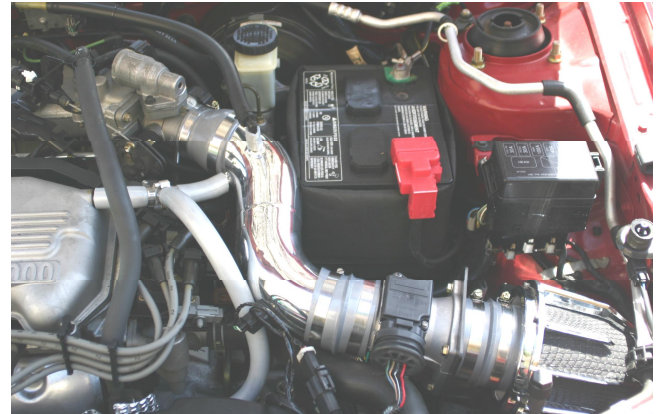

9. Take 2.5"-3" reducer and clamp 2.5" side to throttle body
10. Place WR intake tube into 3" side of reducer and clamp down, Insert 3"-3" coupler into other end of WR intake tube and clamp down.
11. Take AIT sensor and place into black grommet in WR intake tube.(PIC#3)
12. Use "T" fitting ,and 15mm hose connect PCV port , Intake port , and Vacuum hose from bottom of OEM box all together(PIC#3)
13. Use 2' long 10mm vacume stub to reconnect 10mm vacume line to WR intake tube.(PIC#4)
14. Take Mass Air Plate and mark 4 holes according to the Mass Air Sensor bolt pattern , and drill out .
15. Bolt plate to Mass air, then slide Mass Air Sensor into 3" coupler and clamp down.
16. Plug OEM Mass Air Sensor back into Mass Air Sensor.
17. DRAGON FILTER : Clamp 3"-3" coupler to botom base of dragon filter, then clamp other 3" side of coupler to Mass air plate.