



CARB PENDING

Recommend filter cleaning intervals: 3000 miles

Part #'s **Hyper Intake : 907-158 / Dragon Intake : 807-158**

Application : **95-01 LUMINA 3.1L&3.4L / 98-03 MALIBU 3.1L / 99-03 MONTE CARLO 3.4L/98-03 3.8L**

**00-04 IMPALA 3.4&3.8L/ 94-98 ACHIEVA 3.1L/ 94-03 AURORA 4.0L/ 95-96 CIERA 3.1, 88-03 BONNEVILLE 3.8L**


Parts List : **1 x Weapon\*R Intake pipe. / 1 x Weapon\*R Air Filter 3" / 1 x 10mm x 12" Hose  
2 x 3-3" Coupler / 1 x 3"-3.5" Coupler/ 1 x Intake System Bracket kit / 1 x 3" Clamp/ 1 x Grommet**

**Note: Additional Parts needed when you have a Dragon Filter, 1 x 3"- 3" Coupler / 2 x 3" Clamps**

- 1 Remove bolts securing OEM air cleaner box, loosen clamps on OEM rubber intake pipe.
- 2 Remove PCV hose from OEM intake and engine.
- 3 Disconnect the MAF sensor harness, carefully remove MAF sensor from OEM airbox,
- 4 Remove the OEM rubber intake tube, remove the OEM air cleaner box by pulling upwards.
- 5 Wipe the throttlebody clean of any grease, install the 3"-3" coupler onto throttlebody, secure with OEM clamp.
- 6 Insert Weapon\*R intake pipe into the 3"-3" coupler, secure with clamp.
- 7 Vehicles with no MAF install 3"-3" coupler onto end of intake pipe, secure with clamp.
- 8 Vehicles MAF sensor install the 3"-3" coupler, secure with clamp.
- 9 Install the MAF into the 3"-3" coupler clamp down
- 10 Vehicles with AIT sensors must drill 3/4" hole in side of tube for sensor grommet. Insert AIT into grommet.
- 11 Measure the OEM PVC hose, replace with supplied 10mm hose, install from PVC port to intake pipe.  
**SOME VEHICLES MAY NEED TO USE THE 3"-3.5" COUPLER ON THEIR THROTTLE BODY, OR MAF SENSOR MODELS WITH ECU IN OEM AIRBOX. REMOVE ECU FROM AIRBOX AND LAY DOWN ECU. IT'S OK TO LAY ECU DOWN**
- 13 Install the 3"-3" coupler onto WR filter , secure with supplied clamp.
- 14 Install filter assembly onto the end of MAF sensor, secure with OEM clamp.
- 15 Install U-shaped part of intake system bracket under the clamp on air filter.
- 16 Install the rubber mounting grommet to the closest hole to the Weapon\*R air filter.
- 17 Bend the straight portion of the intake system bracket to the Rubber mounting grommet.
- 18 Secure with washer and nut included in bracket kit.
- 19 Position air intake pipe for clearance, making sure no parts are touching any part of the vehicle.
- 20 Check for hood clearance, re-adjust intake tube for perfect fitment and clearances.
- 21 Place Weapon\*R CARB Sticker on a visible place in engine compartment. ( If Applicable )

**WARNING: EO# LABEL IS REQUIRED TO AID IN THE PASSING THE SMOG CHECK INSPECTION.**

**Note:** Returned Products may be subject to a 25% restocking charge. **INSTALLED PRODUCTS ARE NON-REFUNDABLE !**  
Report any defective or missing parts to the authorized Weapon\*R dealer you purchased this product from.  
Installation does require some mechanical skills. We recommend a qualified mechanic to install this product.

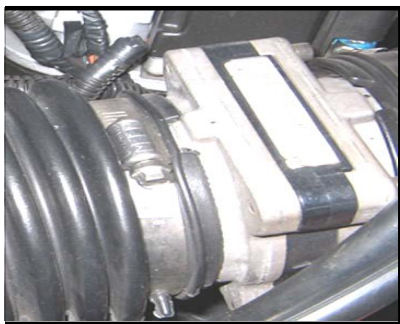

1994-03 Aurora V8 4.0L installed pictured above

