



Recommended [Air Filter](#) Cleaning Intervals: 3000 Miles.


Part # 's **Dragon Intake : 807-159**

Application : **1994-1996 CHEVY IMPALA V8**

**Parts List : 1 x Weapon*R 3.5" Intake pipe. / 1 x Weapon*R 4" Air Filter / 1 x 3.5"-3.5" Coupler
2 X 3.5"-4" Couplers/ 1 x 3"-3.5" Coupler/ 1 x Intake System Bracket kit / 6 x 4" Clamp
1 x 4mm hose, 1 x 15mm , 1 x AIT grommet**

- 1 Remove bolts securing OEM air cleaner box, loosen clamps on OEM intake box.
 - 2 Remove OEM intake box top.
 - 3 Remove bolts securing bottom OEM air cleaner box, and remove bottom portion.
 - 4 Disconnect the MAF sensor harness, carefully remove MAF sensor from OEM intake pipe.
 - 5 Carefully unplug the AIT sensor from OEM tube and remove sensor from tube.
 - 6 Remove 4mm hose from OEM tube and remove OEM intake tube from car
 - 7 Remove 15mm Oem hose from upper airbox and put aside.
 - 8 install 3.5"-4" Coupler onto throttle body and clamping 4" side to throttle body
 - 9 Install WR tube into 3.5" side of throttle body coupler and clamp down
 - 10 Install the 3.5"-3.5" coupler onto end of WR tube and clamp down
 - 11 Install MAF unit onto 3.5" coupler at end of WR tube and clamp down
 - 12 Install 3.5"-4" coupler onto 3.5" side of MAF and secure with a clamp
 - 13 Reinstall vacume hoses to WR tube ports
- Note: Secret Weapon Filter Option :**
- 14 Install the 4" WR filter into 4" side of coupler , secure with supplied clamp.
 - 15 Install U-shaped part of intake system bracket under the clamp on air filter.
 - 16 Install the rubber mounting grommet to the closest hole to the Weapon*R air filter.
 - 17 Bend the straight portion of the intake system bracket to the Rubber mounting grommet.
 - 18 Secure with washer and nut included in bracket kit.
 - 19 Position air intake pipe for clearance, making sure no parts are touching any part of the vehicle.
 - 20 Check for hood clearance, re-adjust intake tube for perfect fitment and clearances.
 - 21 Place Weapon*R CARB Sticker on a visible place in engine compartment. (If Applicable)

WARNING: EO# LABEL IS REQUIRED TO AID IN THE PASSING THE SMOG CHECK INSPECTION.

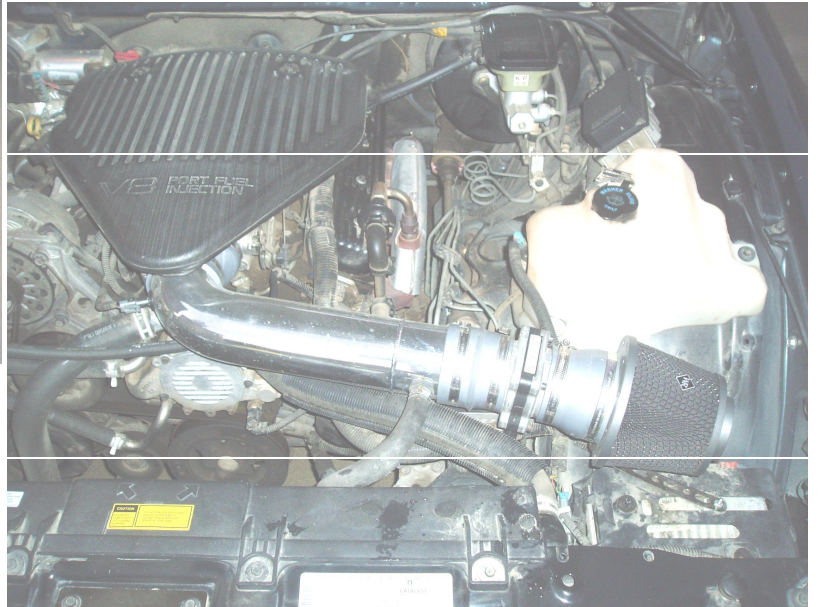

If you have any Question about this Product, Please refer to our website @ WWW.WEAPON-R.COM

Note: Returned Products may be subject to a 25% restocking charge. **INSTALLED PRODUCTS ARE NON-REFUNDABLE !**
Report any defective or missing parts to the authorized Weapon*R dealer you purchased this product from.
Installation does require some mechanical skills. We recommend a qualified mechanic to install this product.