



VAN STORAGE SOLUTIONS

FOR THE WAY YOU WORK™

INSTALLATION MANUAL

Replacing Bulkhead Window Panels for 96101-3-01, 96121-3-01 or 96201-3-01 Bulkheads

ATTENTION: PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS AND WARNINGS BEFORE ASSEMBLING, INSTALLING OR USING THIS PRODUCT.

- These instructions cover replacement of window panels for WEATHER GUARD® model 96101-3-01, 96121-3-01 or 96201-3-01 Bulkheads.
- Installation will be faster if all tools and parts required to change the window panels are readily available and close to the installer.
- Always use personal protection equipment when installing WEATHER GUARD® van products and especially when power tools are used.

PARTS LIST

Replacement window panel	2
Mounting screws	12

TOOLS REQUIRED

Installation may require all or some of these items:


Power Drill

$\frac{3}{16}$ " drill bit

$\frac{1}{8}$ " hex driver bit or wrench -OR-

T25 star driver or bit

Hand or powered bit driver (optional)

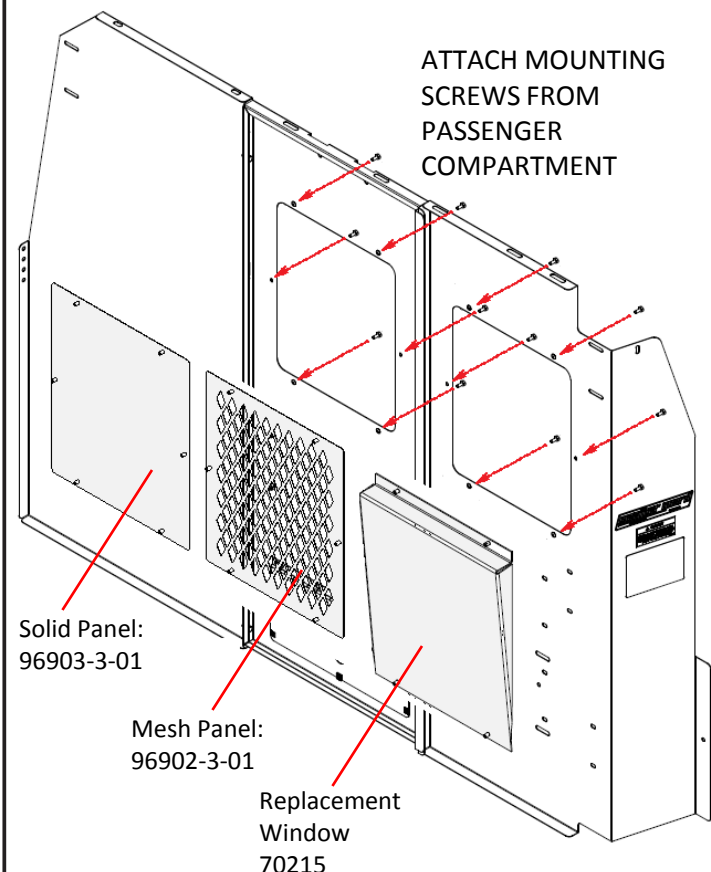

STEP 1: Remove existing windows from the bulkhead panels.
Some windows may be riveted to the bulkhead panels. In this case, carefully drill out the rivets with a $\frac{3}{16}$ " drill bit.

STEP 2: Working from the cargo-side of the bulkhead, place the new window, vent, or solid panel over the opening in the bulkhead.

STEP 3: Working from the passenger side of the bulkhead, insert the mounting screws through the bulkhead and engage with the threaded nuts pressed into the new window, vent, or solid panel.

IMPORTANT:

DO NOT MOUNT REPLACEMENT PANEL WITH SCREWS FACING INTO THE PASSENGER COMPARTMENT.

STEP 4: Tighten all mounting screws on the panel.



WARNING

This product can reduce the driver's ability to clearly see roadways, vehicular or pedestrian traffic and other objects through the rear and side windows of the vehicle, which can cause an accident. Extra precautions should be taken when driving a vehicle with this product. Make all adjustments necessary to ensure maximum visibility, including but not limited to, changing mirror and seating positions. State and local laws may prohibit obstruction of windows in a moving vehicle.

These instructions are to be followed using the parts and fasteners supplied for proper installation. Any modifications or improper installation of this product will create a hazardous condition that could result in death, serious personal injury and/or property damage.



CAUTION

Prior to drilling, so as not to cut electric wires, fuel lines, brake lines, etc., check behind and underneath drilling and mounting locations. To keep debris out of your eyes when checking the underside of the vehicle, or when drilling, always wear protective eye wear. Failure to heed this warning will result in death or serious injury.

– NOTICE –

Any modification or unintended use of this product shall immediately void all manufacturers warranties. Manufacturer disclaims all liability for injuries to persons or property resulting from any modification to, or unintended use of this product.