



VAN STORAGE SOLUTIONS
FOR THE WAY YOU WORK™

INSTALLATION MANUAL

TANK RACKS 9862-3-01, 9863-3-01, 9864-3-01

ATTENTION: PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS AND WARNINGS BEFORE ASSEMBLING, INSTALLING OR USING THIS PRODUCT.


IMPORTANT BEFORE YOU BEGIN

Read these instructions and warnings completely before installing.

BOLT KIT

Bolt Kit #32-8895 has been provided with your rack. Check this bolt kit to be sure the following parts are included:

Quan.	Description
2	1/4-20 x 1-1/4" Hex Head Bolt
3	1/4-20 x 3/4" Hex Washer Hd. Bolt
6	1/4" Flat Washer
5	1/4-20 Nylon Lock Nut
2	1/4" Lock Washer
2	1/4-20 Blind Fastener
1	1/4-20 x 2-1/4" Bolt (Black Oxide)
1	Installation Tool
1	12" Mounting Strap
1	Mounting Angle

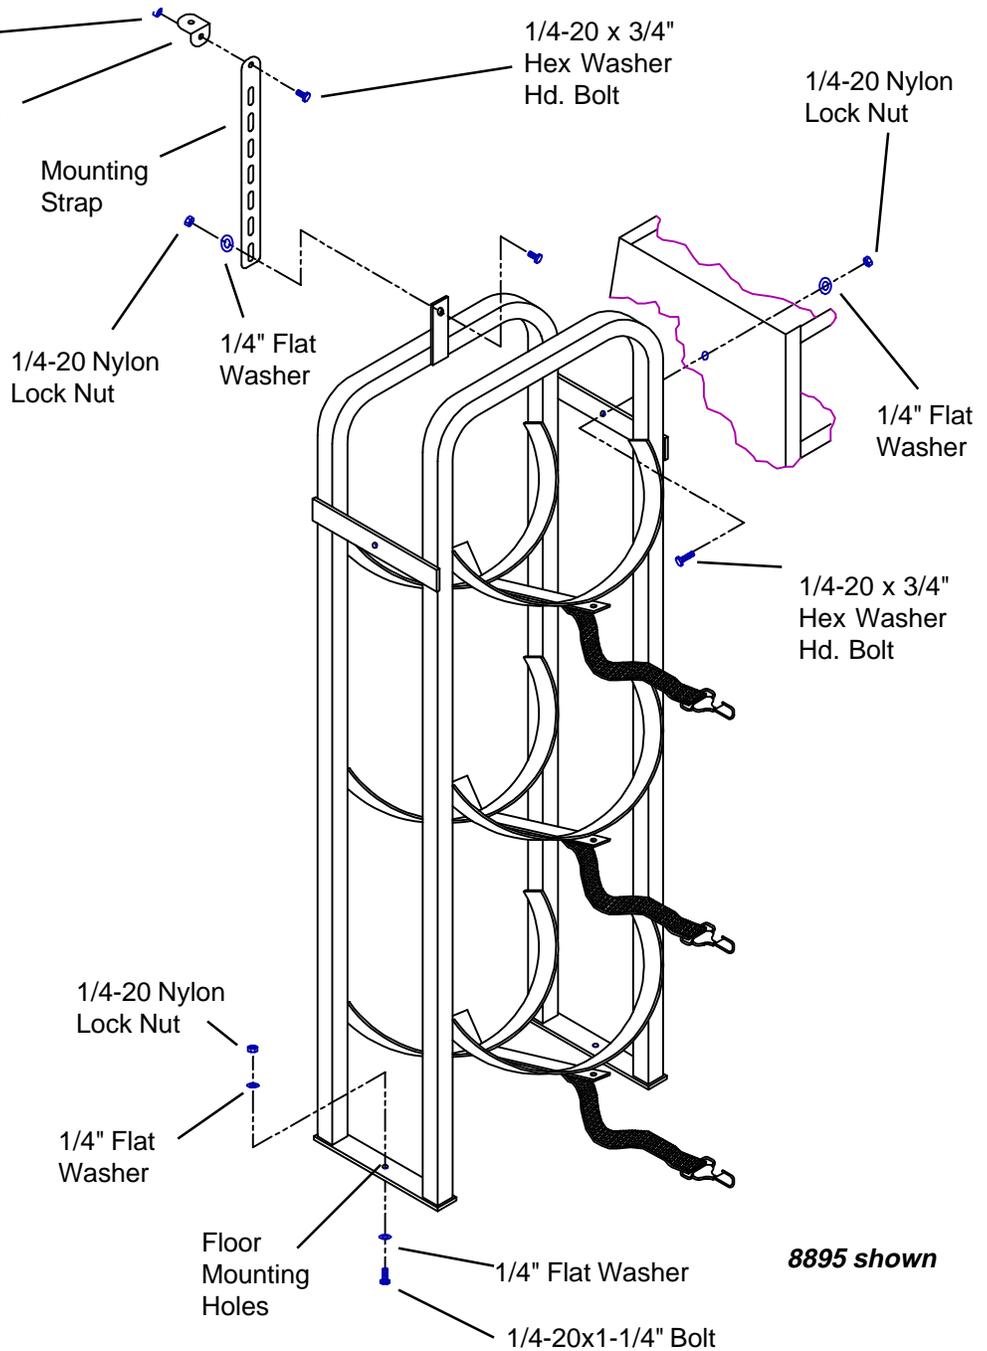

TOOLS REQUIRED

- Electric Drill
- 9/32" & 13/32" Drill Bits
- 7/16" Wrenches (2)
- 9/16" Wrench

PARTS LIST

- 1- Tank Rack
- 1- Bolt Kit

INSTALLATION INSTRUCTIONS

1. Place a freon tank in the top cradle, and set the Rack into position. If a freon tank is not available, place the Rack 4-1/2" away from the van wall at the top of the rack, or any other obstruction at the rear of the Rack. Mark the two floor mounting holes. If positioning the Rack next to another unit, mark the side hole in the bracket on the Rack. Remove the tank.

2. A wall Mounting Strap and a Mounting Angle are provided. The Mounting Strap may be bent to any shape and/or used with the Mounting Angle. The Mounting Strap should be attached to the upper portion of the unit in a manner that would minimize movement of the unit both front to rear and side to side.

CAUTION

To keep debris out of your eyes when checking the underside of the vehicle, or when drilling, always wear protective eyewear.

CAUTION

Prior to drilling, so as not to cut or puncture fuel tanks, fuel lines, brake lines, electric wires, etc., check under vehicle for locations.

3. Drill all marked holes (9/32"), except the hole for the mounting strap (13/32"), which will use a Blind Fastener for mounting. See Blind Fastener installation instructions.


WARNING

All floor mounting bolts near the gas tank area should be installed from the underside of the vehicle, to guard against the gas tank being punctured in the event of a collision.

4. Once holes are drilled, fasten the tank rack to the floor.

NOTE: One extra Blind Fastener and one extra lock washer have been provided for use in areas where standard fasteners can't be used, such as heat shields and support channels.

5. Bolt the Rack to the unit beside it (if applicable) then bolt the Mounting Strap to the vehicles channel.

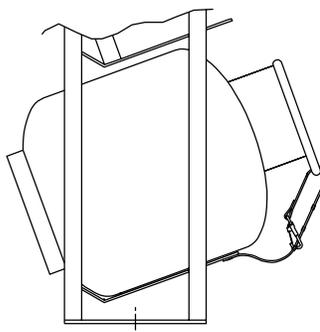


WARNING

Freon tanks must be strapped in place, so as not to become a projectile during sharp turns, or in the event of a collision. If the straps are not used, it could result in serious personal injury or property damage.

INSTALLATION PROCEDURE USING BLIND FASTENERS

Place a drop of oil on the black oxide bolt before assembling as shown below. Place the Blind Fastener in the hole and use a 1/2" or 7/16" wrench to tighten black hex bolt until the blind fastener is fully seated. When setting black hex bolt, it will start out hard. As the Blind Fastener "bulbs" out it will get easier, until it bottoms out or sets. Make sure the Blind Fastener and Installation Tool do not turn during installation.

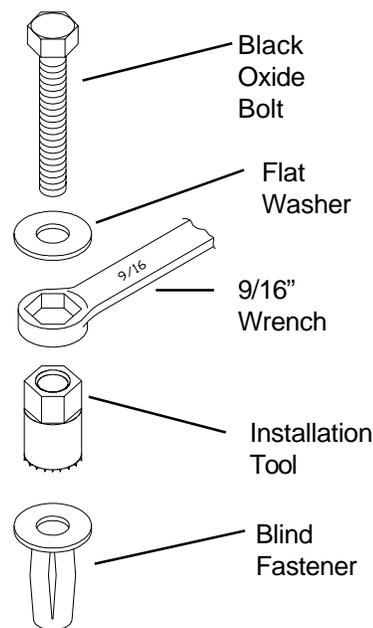

- NOTICE -

Any modification or unintended use of this product shall immediately void all manufacturers warranties. Manufacturer disclaims all liability for injuries to persons or property resulting from any modification to, or unintended use of this product.

 **DANGER**

Danger of explosion. Do not use this product for storing or transporting flammables, explosives, hazardous materials, or hazardous waste, such as containers of gasoline, solvents, gun powder, dynamite, propane tanks, acetylene tanks and cutting torches. Failure to heed this warning will result in death or serious injury.

 **WARNING**

This product is only intended and safe for use in storing and transporting small tools, equipment and other similar materials. These instructions are to be followed using the parts and fasteners supplied for proper installation. Any modifications or improper installation of this product will create a hazardous condition that could result in death, serious personal injury and/or property damage.

All floor mounting bolts near the fuel tank area should be installed from the underside of the vehicle, to guard against the fuel tank being punctured in the event of a collision. This would mean not using Blind Fasteners in this area. Holes in this area should be 5/16". Ensure ample space in roof ribs and sidewall ribs for mounting screws so as not to puncture exterior roof or wall.

Do not install this product where it could interfere with deployment of air bags. Failure to comply could result in death or serious body injury.

 **CAUTION**

Prior to drilling, so as not to cut electric wires, fuel lines, brake lines, etc., check behind and underneath drilling and mounting locations. To keep debris out of your eyes when checking the underside of the vehicle, or when drilling, always wear protective eye wear. Failure to heed this warning will result in death or serious injury.

– NOTICE –

Any modification or unintended use of this product shall immediately void all manufacturers warranties. Manufacturer disclaims all liability for injuries to persons or property resulting from any modification to, or unintended use of this product.

