

# WeatherTech®


## Easy-On™ Stone & Bug Deflectors

### Important Safety Information




- CAUTION - Before driving, ensure that the hood shield is properly anchored to vehicle.
- Do not use automatic "brush-style" car washes.
- Do not use cleaning solvents of any kind.
- Periodically check all components for tightness.


### Contents **NOTE:** Actual product may vary from illustration.




Hood Shield



2-Piece Fastener Receptacle x6



2-Piece Fastener Screw x6

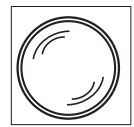

Bump On x4


### Tools Required



Car Wash Supplies



Clean Towel

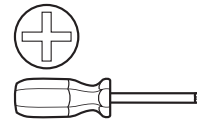


Phillips Screwdriver


### Preparation Before Painting / Installation

- A trial fit is recommended to ensure proper positioning and fit.
- Check fit of parts before painting as we will not accept the return of modified or painted parts.
- Wash your vehicle's hood to remove any debris and/or dirt.
- Dry the hood with a clean towel.



### Installation Steps **NOTE:** Actual application may vary slightly from illustrations.

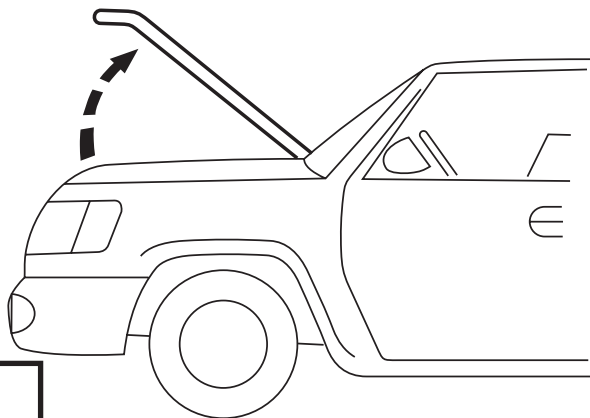

1







2

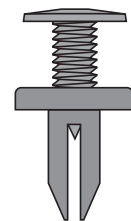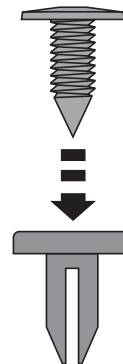

X6

## Installation Steps

**NOTE:** Actual application may vary slightly from drawings.

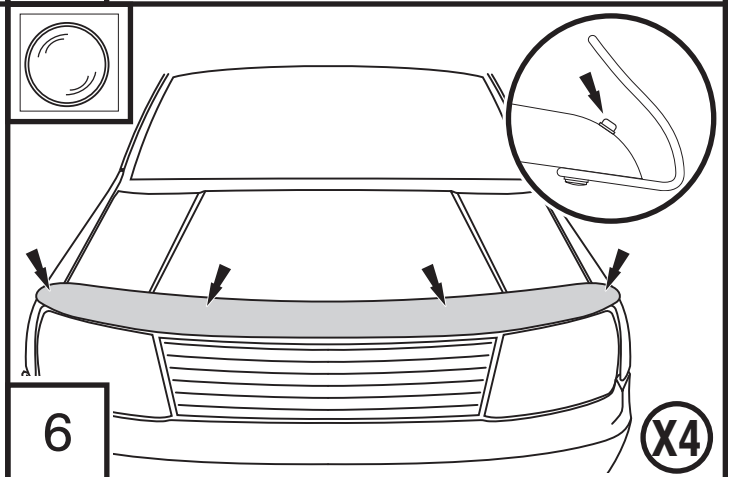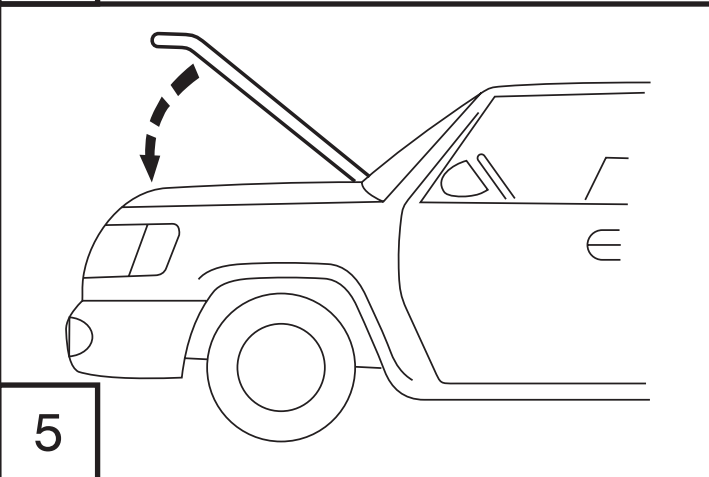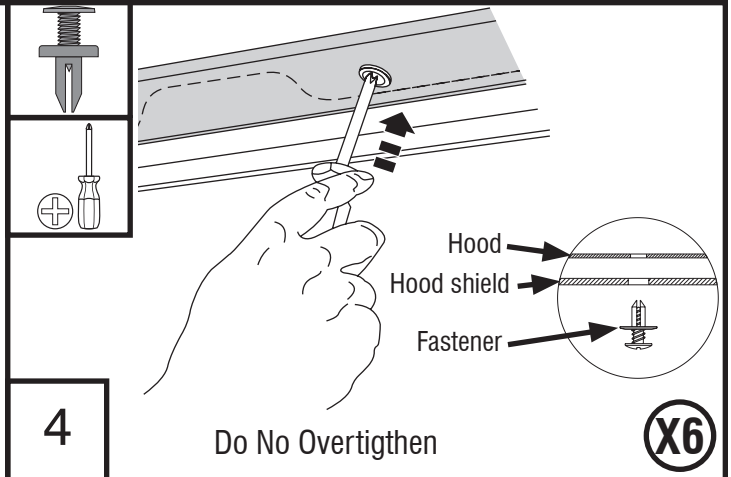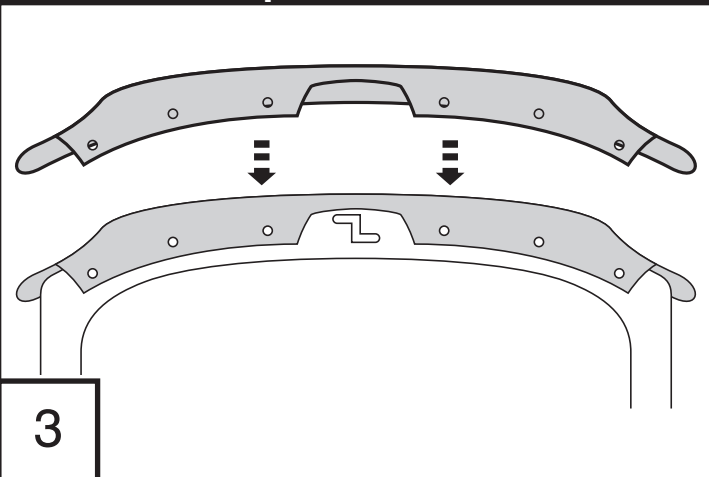

## Care and Cleaning

- Wash only with mild soap & dry with a clean cloth.