

# WeatherTech®


## Easy-On™ Stone & Bug Deflectors

### Important Safety Information




- CAUTION - Before driving, ensure that the hood shield is properly secured to vehicle.
- Do not use automatic “brush-style” car washes.
- Do not use cleaning solvents of any kind.
- Periodically check all components for tightness.

### Contents **NOTE:** Actual product may vary from illustration.

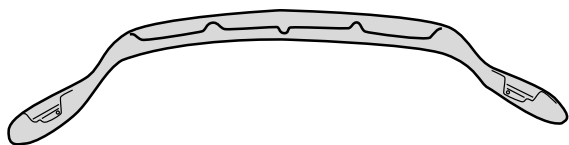

Hood Shield



Phillips Screw x2



Plastic Washer x2



Fastener x2



Bump On x4


### Tools Required



Car Wash Supplies



Clean Towel

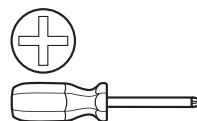


Phillips Screwdriver

### Preparation Before Painting / Installation


- A trial fit is recommended to ensure proper positioning and fit.
- Check fit of parts before painting as we will not accept the return of modified or painted parts.
- Wash and dry your vehicle to remove any debris and/or dirt from the installation area.

### Installation Steps **NOTE:** Actual application may vary slightly from illustrations.

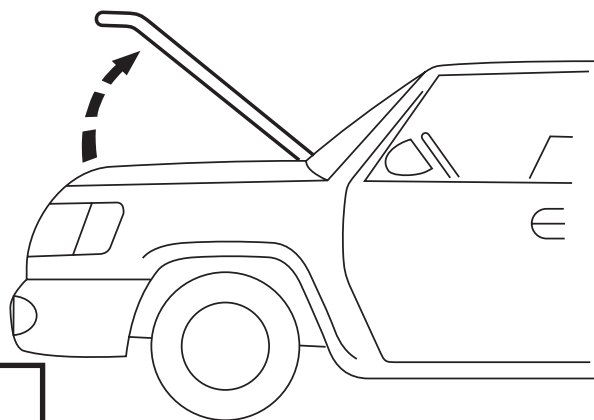

1

Locate (4) mounting positions on underside of hood.

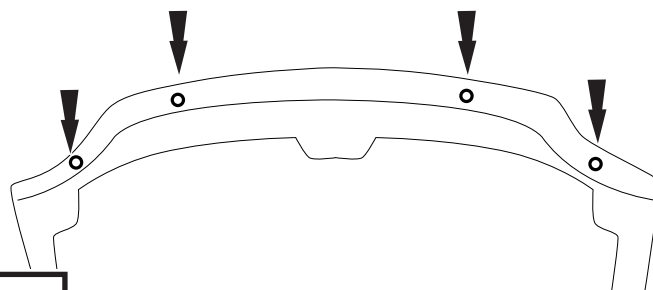


2

# Installation Steps


**NOTE:** Actual application may vary slightly from drawings.

Remove (2) fasteners which attach rubber trim to hood.

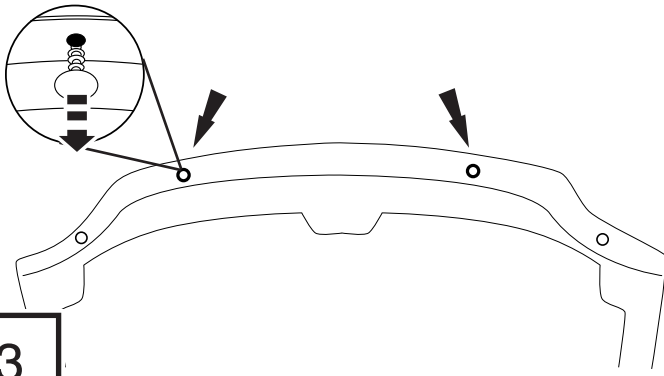



3

Align Hood Shield with holes in hood. The mounting flange of the hood shield is positioned **OVER** the rubber trim.

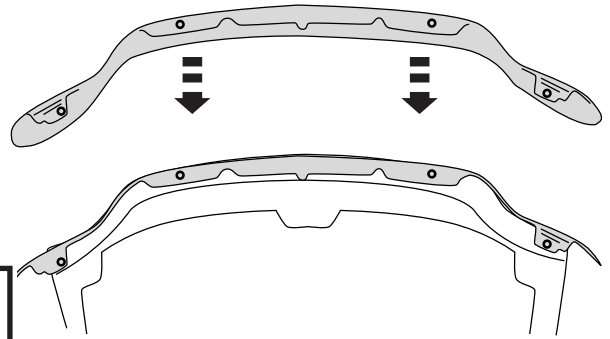

4



Install (2) screws with washers in the outboard mounting holes.

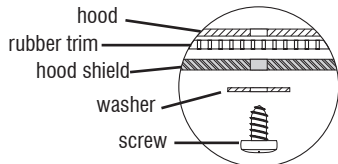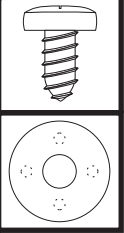

5

Do not overtighten



Install (2) plastic fasteners in the inboard mounting holes.

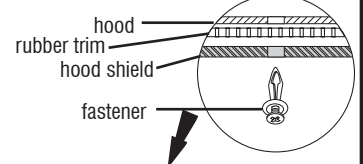

6


Do not overtighten

Install (4) bump ons.

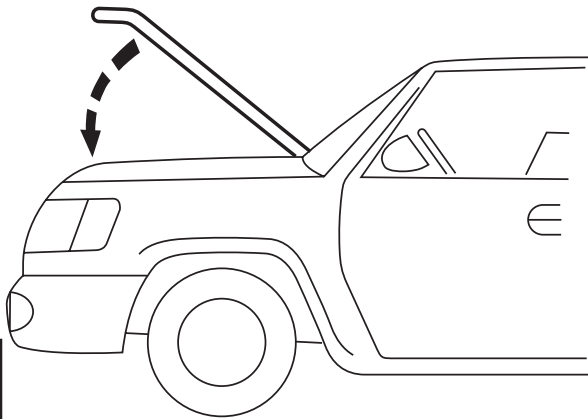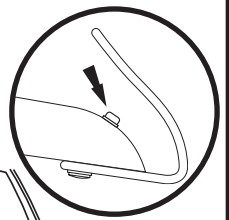

7

8

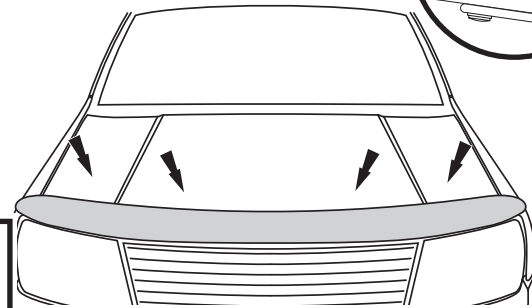

X4

# Care and Cleaning

- Wash only with mild soap & dry with a clean cloth.