

WeatherTech®

Easy-On™ Stone & Bug Deflectors

Important Safety Information



- CAUTION - Before driving, ensure that the hood shield is properly secured to vehicle.
- Do not use automatic “brush-style” car washes.
- Do not use cleaning solvents of any kind.
- Periodically check all components for tightness.

Contents


NOTE: Actual product may vary from illustration.



Hood shield



Bump On x4

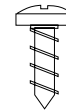

Screw x4



Washer x4

Tools Required




Car Wash Supplies



Clean Towel



Phillips screwdriver

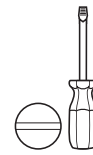


Flathead screwdriver

Preparation Before Painting / Installation


- A trial fit is recommended to ensure proper positioning and fit.
- Check fit of parts before painting as we will not accept the return of modified or painted parts.
- Wash and dry your vehicle to remove any debris and/or dirt from the installation area.

Installation Steps

NOTE: Actual application may vary slightly from illustrations.

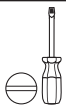


Open hood. Locate (2) fasteners that attach the rubber seal to the underside of the hood. Remove and discard.

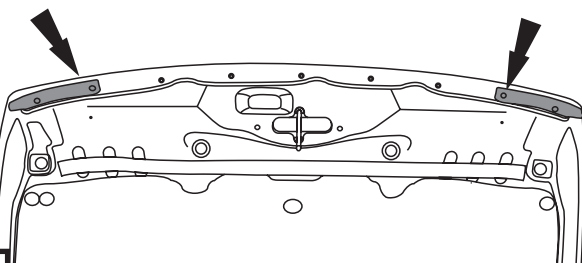

1

Position the hood shield with the tabs sliding **between** the hood and rubber seal. Align with holes in hood.

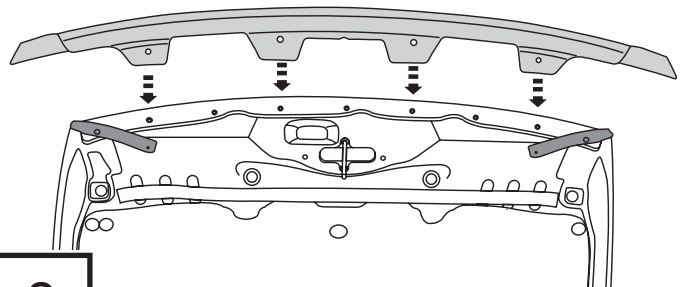


2

Installation Steps

NOTE: Actual application may vary slightly from illustrations.

Rotate rubber seal back into position over hood shield flange and align with holes in hood shield.


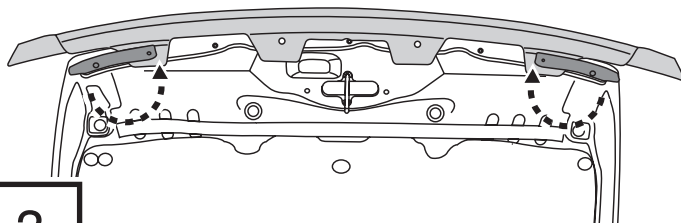


3



4


Install (1) washer and screw and tighten until snug. Repeat for remaining (3) fasteners.

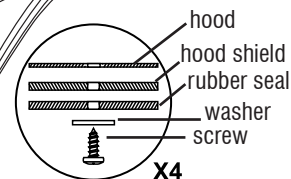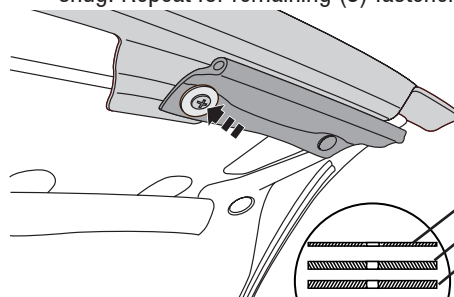

DO NOT OVER TIGHTEN



Install bump ons at pre-cleaned locations on the hood surface where the hood shield may contact.

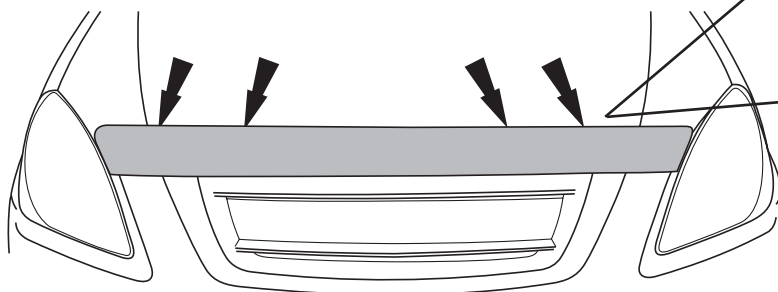

5

Care and Cleaning

- Wash only with mild soap & dry with a clean cloth.