

WeatherTech®

Easy-On™ Stone & Bug Deflectors


Important Safety Information



- CAUTION - Before driving, ensure that the hood shield is properly secured to vehicle.
- Do not use automatic "brush-style" car washes.
- Do not use cleaning solvents of any kind.
- Periodically check all components for tightness.

Contents

NOTE: Actual product may vary from illustration.



Hood shield



Bump Ons x4

Tools Required



Car Wash Supplies



Clean Towel



Nut driver


Preparation Before Painting / Installation

- A trial fit is recommended to ensure proper positioning and fit.
- Check fit of parts before painting as we will not accept the return of modified or painted parts.
- Wash and dry your vehicle to remove any debris and/or dirt from the installation area.

Installation Steps


NOTE: Actual application may vary slightly from illustrations.

Open hood.

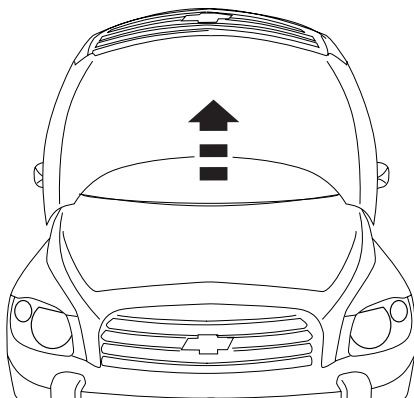

1

Locate and remove (2) rubber caps covering out-board grill mounting screws.

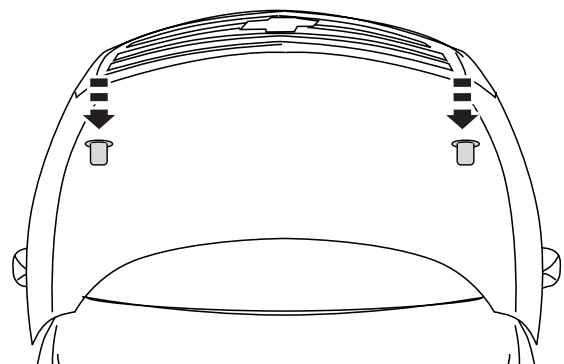

2


Installation Steps

NOTE: Actual application may vary slightly from illustrations.




Remove (5) nuts from the backside of the grill that secure it to the hood. Carefully set grill aside.

3

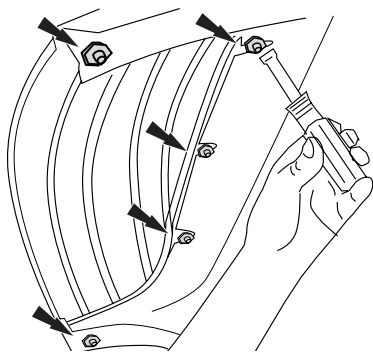

Align hood shield in place along the center of the hood edge.

4

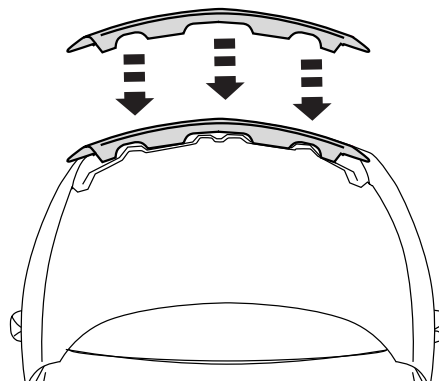


Replace grill assembly. The hood shield should be positioned **between** the hood and the grill.




Reinstall (5) previously removed nuts on the backside of grill.

5

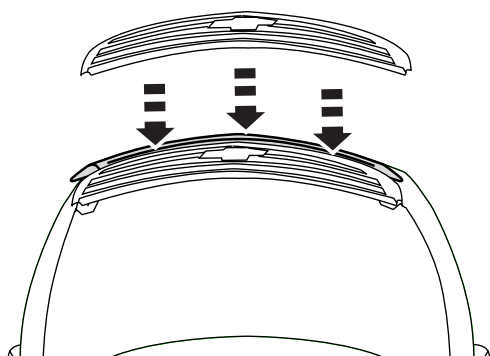


6

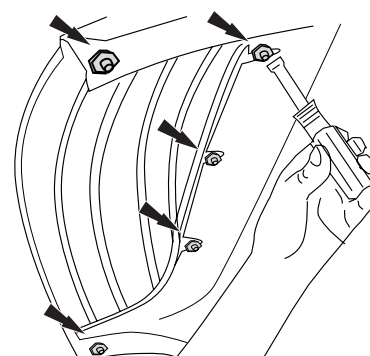


Replace (2) previously removed rubber caps on end nuts.

7

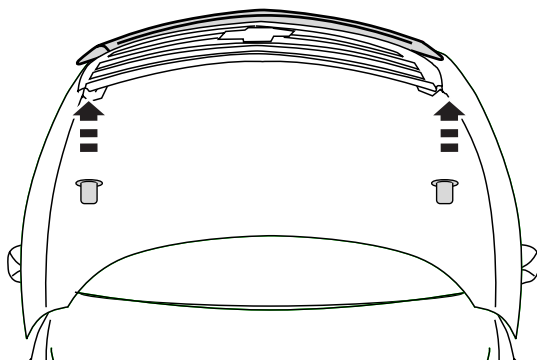

Close hood and install bump ons.

8

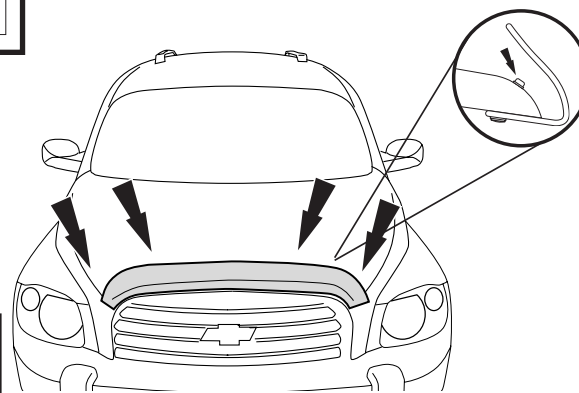

Care and Cleaning

- Wash only with mild soap & dry with a clean cloth.

Looking for dependable stone & bug deflectors?
Rely on Weathertech for quality and long-lasting products.