

WeatherTech®

Easy-On™ Stone & Bug Deflectors

Important Safety Information



- CAUTION - Before driving, ensure that the hood shield is properly secured to vehicle.
- Do not use automatic "brush-style" car washes.
- Do not use cleaning solvents of any kind.
- Periodically check all components for tightness.

Contents

NOTE: Actual product may vary from illustration.



Hood shield



Bump Ons x4



Fasteners x6


Tools Required



Car Wash Supplies



Clean Towel



Phillips Screwdriver


Preparation Before Painting / Installation

- A trial fit is recommended to ensure proper positioning and fit.
- Check fit of parts before painting as we will not accept the return of modified or painted parts.
- Wash and dry your vehicle to remove any debris and/or dirt from the installation area.

Installation Steps


NOTE: Actual application may vary slightly from illustrations.

Open hood.

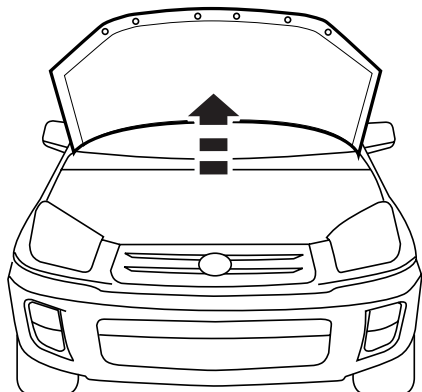

1

Locate (6) holes on underside of hood.

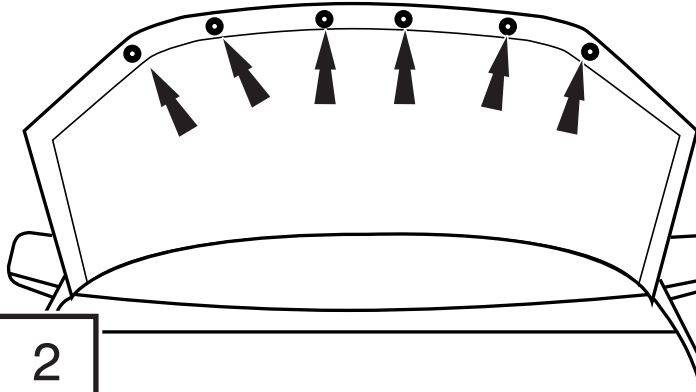


2

Installation Steps

NOTE: Actual application may vary slightly from illustrations.


Align pre-drilled holes in hood shield with holes in hood.

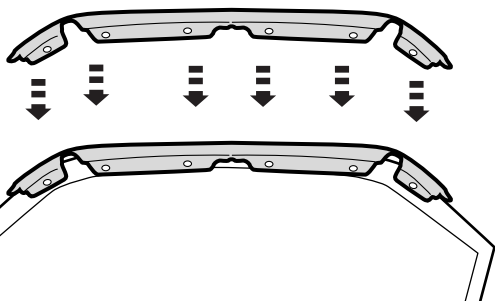

3




Insert (1) fastener and push firmly through hole in hood shield and into hood to secure. Repeat for remaining (5) fasteners.

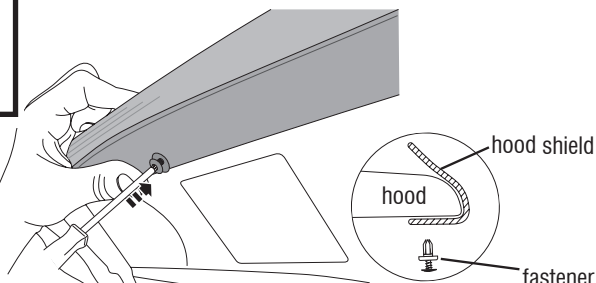

4



Close hood, and install bump ons at pre-cleaned locations on the painted hood surface.

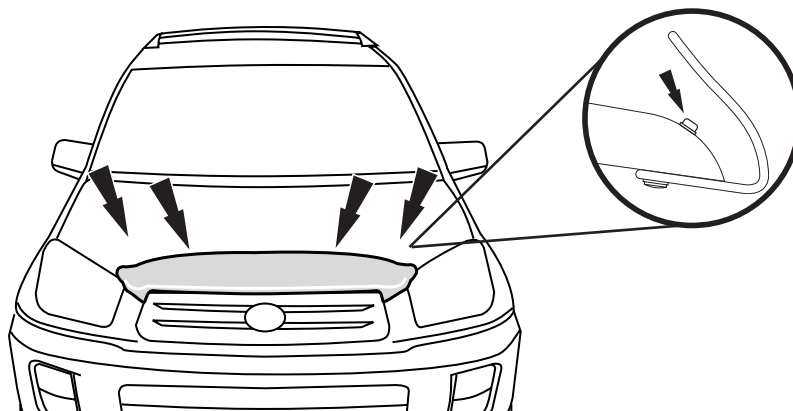

5

Care and Cleaning

- Wash only with mild soap & dry with a clean cloth.

Looking for dependable stone & bug deflectors?
Rely on Weathertech for quality and long-lasting products.