I - Sheet Number WTBF107 Rev.A

WeatherTech®

Easy-On™ Stone & Bug Deflectors

Important Safety Information



- CAUTION Before driving, ensure that the hood shield is properly secured to vehicle.
- Do not use automatic "brush-style" car washes.
- · Do not use cleaning solvents of any kind.
- · Periodically check all components for tightness.



NOTE: Actual product may vary from illustration.











Well Nut x2

Hood shield




Bump On x4 Alcohol Pad



Tools Required







Clean Towel




Phillips screwdriver


Preparation Before Painting / Installation

- · A trial fit is recommended to ensure proper positioning and fit.
- Check fit of parts before painting as we will not accept the return of modified or painted parts.
- Wash and dry your vehicle to remove any debris and/or dirt from the installation area.

Installation Steps NOTE: Actual application may vary slightly from illustrations.

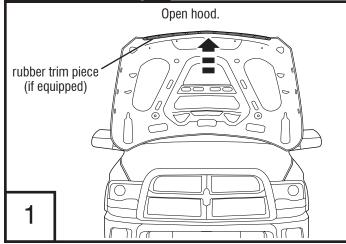

If equipped, remove and discard rubber trim piece from front edge of hood. rubber trim piece

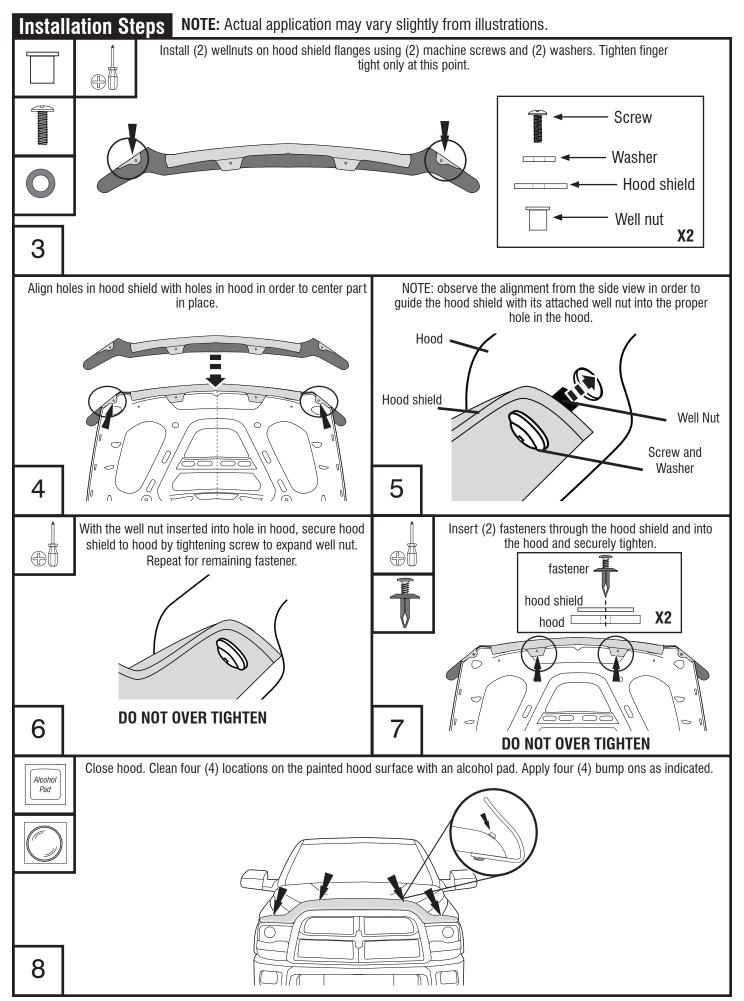

Page 2 of 3

Care and Cleaning
Wash only with mild soap & dry with a clean cloth.