

WeatherTech®

Easy-On™ Stone & Bug Deflectors

Important Safety Information



- CAUTION - Before driving, ensure that the hood shield is properly secured to vehicle.
- Do not use automatic “brush-style” car washes.
- Do not use cleaning solvents of any kind.
- Periodically check all components for tightness.

Contents

NOTE: Actual product may vary from illustration.



Hood shield



Scrivet x2
(#98030)



Screw x2
(#98037)



Washer x2
(#98038)



Well Nut x2
(#98039)




Bump On x4
(#98024)


Tools Required



Car Wash Supplies



Clean Towel



Phillips Head Screwdriver


Preparation Before Painting / Installation

- A trial fit is recommended to ensure proper positioning and fit.
- Check fit of parts before painting as we will not accept the return of modified or painted parts.
- Wash and dry your vehicle to remove any debris and/or dirt from the installation area.

Installation Steps


NOTE: Actual application may vary slightly from illustrations.

Raise Hood.

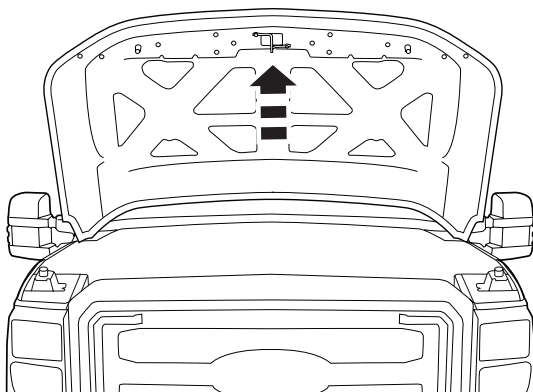

1


Clean the area around the leading edge of the hood with a clean cloth.

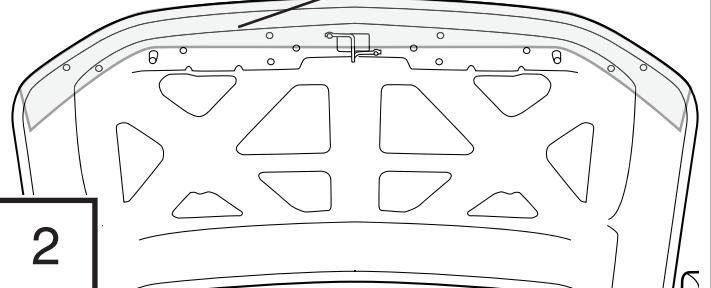




2

Installation Steps

NOTE: Actual application may vary slightly from illustrations.


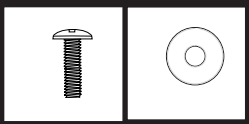


Attach fasteners to the (2) outboard hoodshield flanges by inserting screw with washer through the hood shield, and into well nut. **Partially** thread screw into well nut.

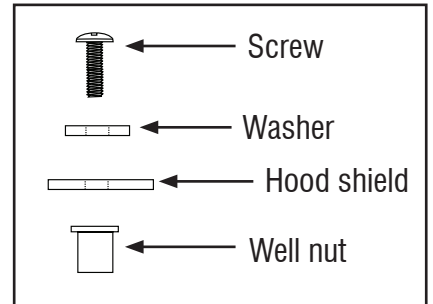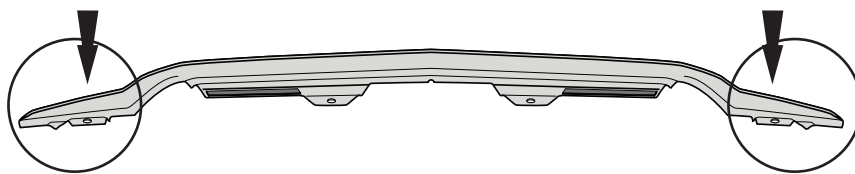


3

Expose 2" (5 cm) of tape liner from each end of the center flanges on the hood shield. Ensure that free ends are accessible.

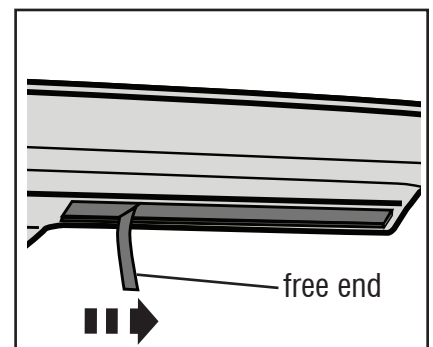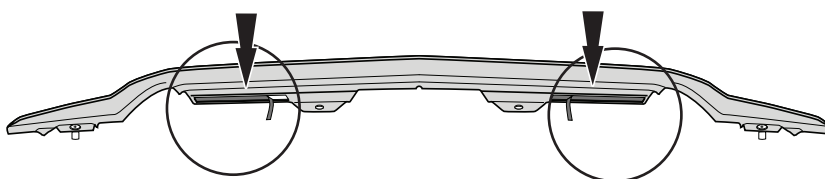


4

Center part on front edge of hood and align holes.

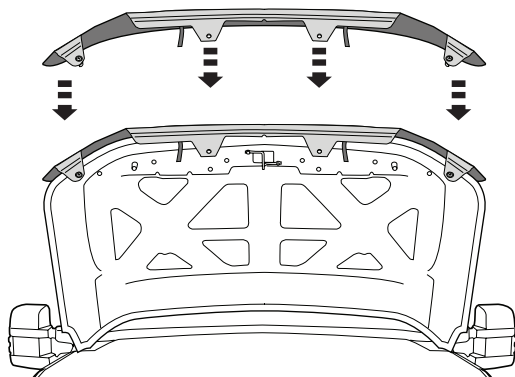


5


NOTE: Observe the alignment from the side view in order to guide the hood shield with its attached fastener into the proper hole in the hood.

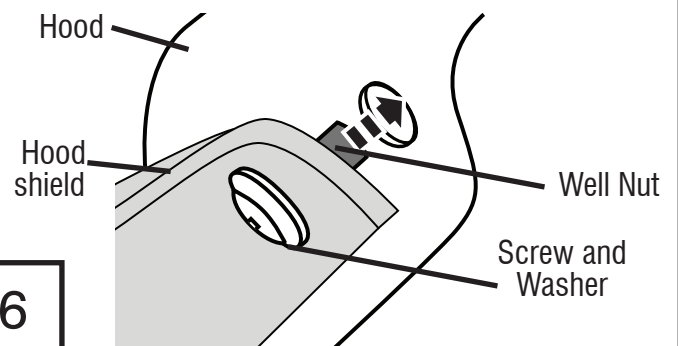

6




With the fastener assembly inserted into hole in hood, secure hood shield to hood by tightening screw to expand well nut. Repeat for remaining fastener.

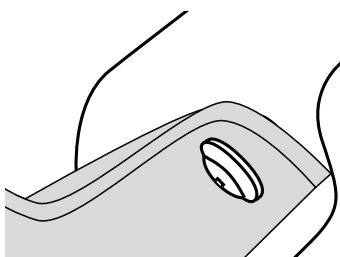

7

NOTE: DO NOT OVER TIGHTEN

Note the (2) inboard hole locations.

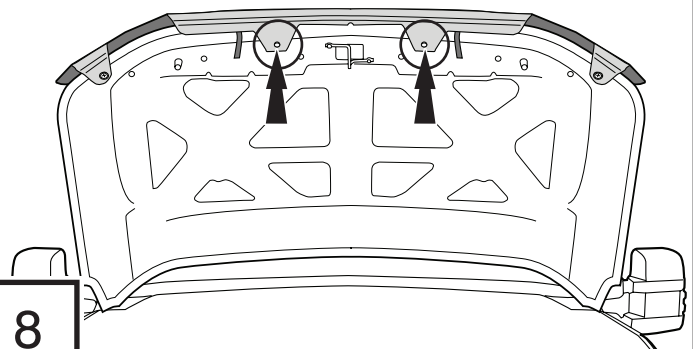


8

Installation Steps

NOTE: Actual application may vary slightly from illustrations.




Install (2) Scrivet fasteners with phillips head screwdriver at the inboard holes.

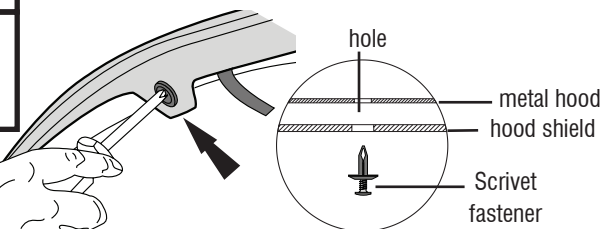

9


DO NOT OVERTIGHTEN.

Press and hold hood shield against underside lip (leading edge) of hood while peeling backing off tape.

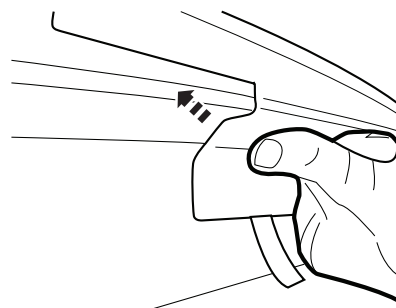


10

Remove remaining tape liner by pulling on the free ends.

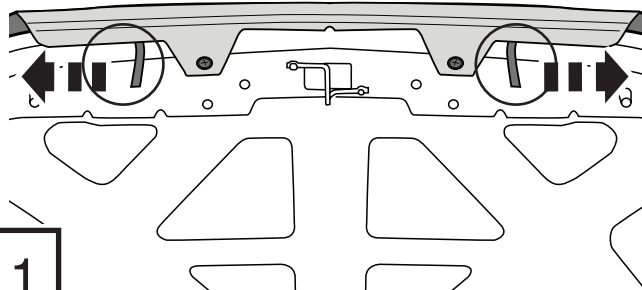


11

Apply pressure to flange to ensure proper adhesion of tape.

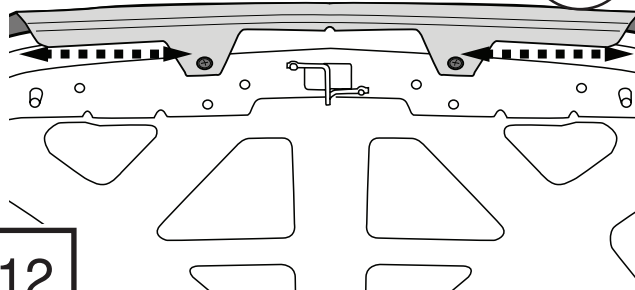


12

Turn out (counter clockwise) both hood bumpers as needed to clear grille.

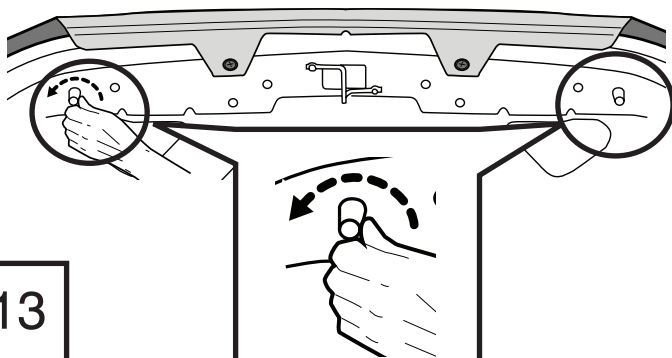


13

Turn out (counter clockwise) both fender bump stops as needed to clear grille.

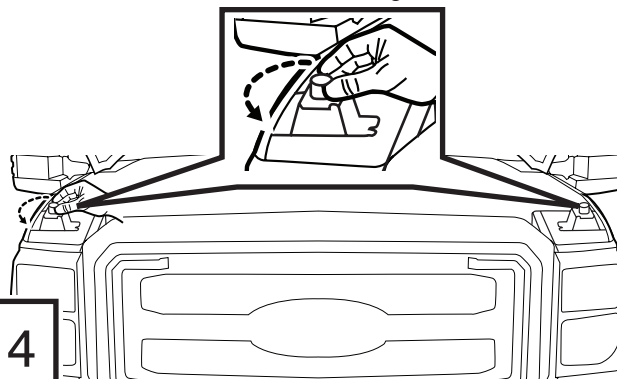


14

Close hood slowly.

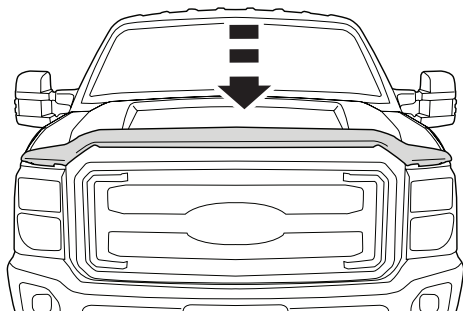

15

Check hood clearance by sliding a credit card sized item between hood shield and grille. If necessary, open hood and repeat **Steps 13-15** until card can slide easily between hood shield and grille while hood is closed.


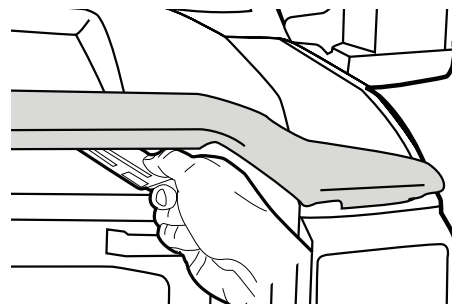


16

Installation Steps NOTE: Actual application may vary slightly from illustrations.



Apply (4) bump ons to hood surface.

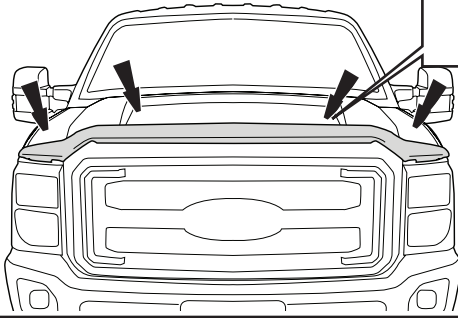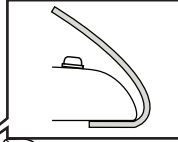

17

Care and Cleaning

- Wash only with mild soap & dry with a clean cloth.