WeatherTech®

Easy-On™ Stone & Bug Deflectors

Important Safety Information



- CAUTION Before driving, ensure that the hood shield is properly anchored to vehicle.
- Do not use automatic "brush-style" car washes.
 Do not use cleaning solvents of any kind.
- Periodically check all components for tightness.

Contents NOTE: Actual product may vary from illustration.









Hood Shield


Bump On x4

Plastic Washer x4 (98032)

Screw x4 (98046)


Tools Required







Clean Towel



Appropriate hand tools


Preparation Before Painting / Installation

- A trial fit is recommended to ensure proper positioning and fit.
- Check fit of parts before painting as we will not accept the return of modified or painted parts.
- Wash your vehicle's hood to remove any debris and/or dirt.
- Dry the hood with a clean towel.
- Do NOT install hood shield if vehicle does NOT have a factory installed hood seal / gasket.

Installation Steps NOTE: Actual application may vary slightly from illustrations.

NOTE: Do **NOT** install hoodshield if vehicle does **NOT** have a factory installed front hood seal / gasket.

Open Hood.

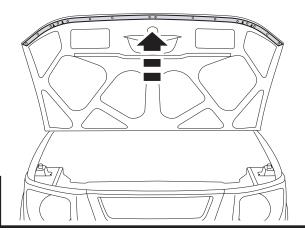

Remove (4) plastic seal retaining fasteners that align with the pre-drilled holes in the hood shield.



