I - Sheet Number WTBF111 Rev.A

WeatherTech®

Easy-On™ Stone & Bug Deflectors

Important Safety Information



- CAUTION Before driving, ensure that the hood shield is properly anchored to vehicle.
- Do not use automatic "brush-style" car washes.
- Do not use cleaning solvents of any kind.
- · Periodically check all components for tightness.

Contents NOTE: Actual product may vary from illustration.







Bump On x4



Plastic Washer x6



Screw x6


Tools Required



Car Wash Supplies



Clean Towel




Appropriate hand tools

Preparation Before Painting / Installation


- · A trial fit is recommended to ensure proper positioning and fit.
- · Check fit of parts before painting as we will not accept the return of modified or painted parts.
- · Wash your vehicle's hood to remove any debris and/or dirt.
- · Dry the hood with a clean towel.
- Do NOT install hood shield if vehicle does NOT have a factory installed hood seal / gasket.

Installation Steps NOTE: Actual application may vary slightly from illustrations.

Remove (6) plastic seal retaining fasteners that align with the predrilled holes in the hood shield. Next, carefully separate the hood seal / gasket from the areas of the hood that align with the hood shield flange.

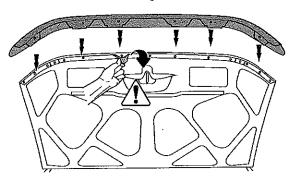

Reposition the hood shield with the tabs sliding between the hood and rubber seal and align with holes.

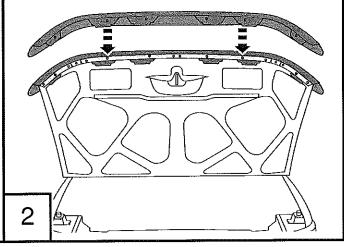

1

NOTE: Exercise extreme caution not to tear or damage the hood seal / gasket when seperating from hood.

