# WeatherTech®

Easy-On™ Stone & Bug Deflectors

## **Important Safety Information**



- CAUTION Before driving, ensure that the hood shield is properly anchored to vehicle.
- Do not use automatic "brush-style" car washes.
  Do not use cleaning solvents of any kind.
- Periodically check all components for tightness.

#### **Contents NOTE:** Actual product may vary from illustration.









Hood Shield


Bump On x4

Plastic Washer x4

Screw x4


## **Tools Required**







Clean Towel




Appropriate hand tools

## **Preparation Before Painting / Installation**

- A trial fit is recommended to ensure proper positioning and fit.
- Check fit of parts before painting as we will not accept the return of modified or painted parts.
- Wash your vehicle's hood to remove any debris and/or dirt.
- Dry the hood with a clean towel.

Installation Steps NOTE: Actual application may vary slightly from illustrations.

Open Hood.

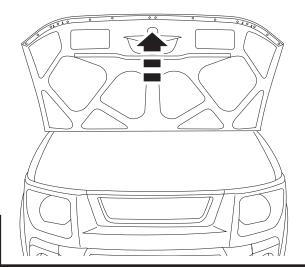

Remove (4) rubber seal retaining fasteners that align with the pre-drilled holes in the hood shield.

