

WeatherTech®

Easy-On™ Stone & Bug Deflectors

Important Safety Information



- CAUTION - Before driving, ensure that the hood shield is properly secured to vehicle.
- Do not use automatic "brush-style" car washes.
- Do not use cleaning solvents of any kind.
- Periodically check all components for tightness.

Contents **NOTE:** Actual product may vary from illustration.



Hood Shield



Short Fasteners x4



Bump On x4




Alcohol Pad x2


Tools Required



Car Wash Supplies



Clean Towel




Phillips Screwdriver

Preparation Before Painting / Installation

- A trial fit is recommended to ensure proper positioning and fit.
- Check fit of parts before painting as we will not accept the return of modified or painted parts.
- Wash and dry your vehicle to remove any debris and/or dirt from the installation area.

Installation Steps **NOTE:** Actual application may vary slightly from illustrations.


Open hood.

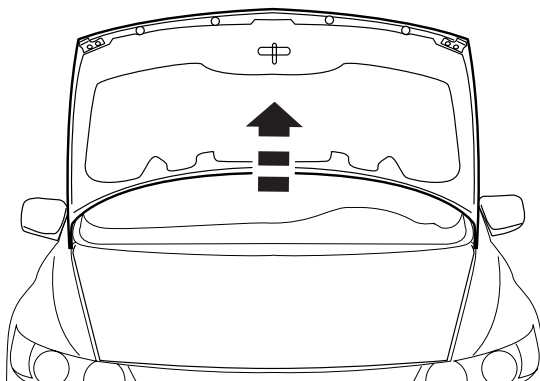

1



Locate (4) holes on underside of hood. Clean this area with an alcohol pad.

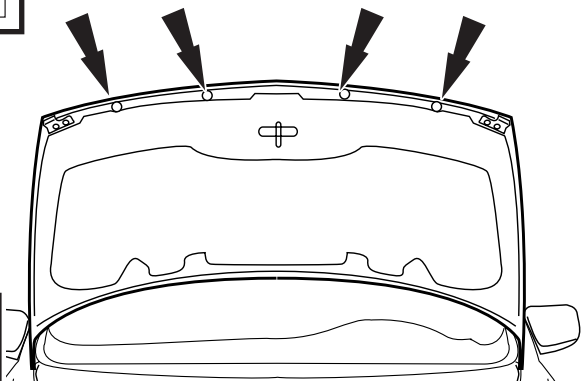


2

Installation Steps


NOTE: Actual application may vary slightly from drawings.

Remove tape liner from hood shield flanges.

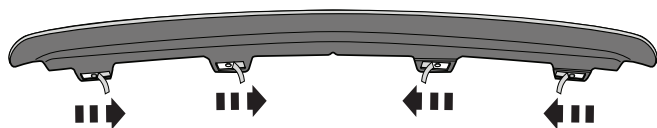


3

Align holes in hood shield with holes in hood.

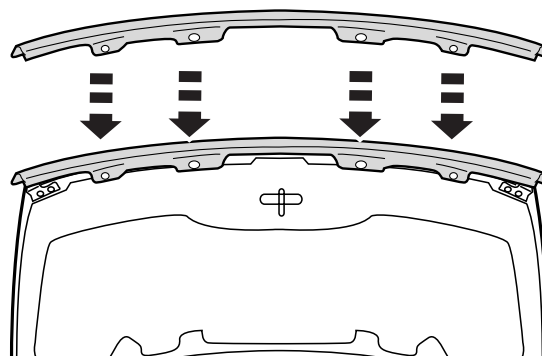


4

Using a phillips screwdriver, install (4) fasteners.

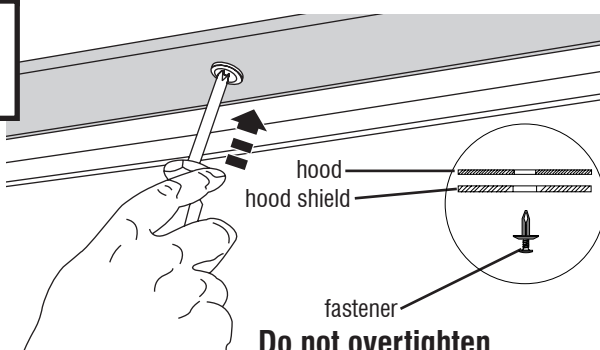


5

Apply pressure to adhere tape to hood surface.

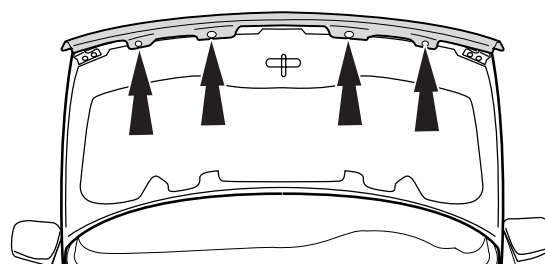


6

Close hood.

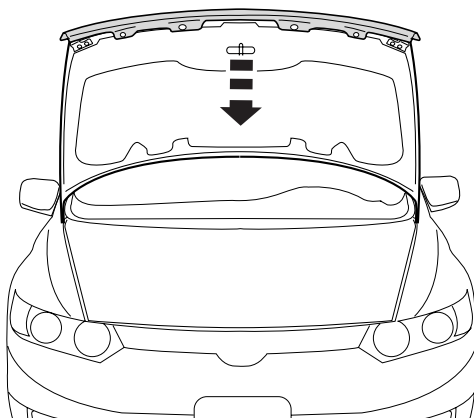

7

Install (4) bump ons.

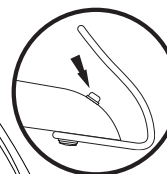

8

Care and Cleaning

- Wash only with mild soap & dry with a clean cloth.