

# WeatherTech®

## Easy-On™ Stone & Bug Deflectors

### Important Safety Information



- CAUTION - Before driving, ensure that the hood shield is properly secured to vehicle.
- Do not use automatic "brush-style" car washes.
- Do not use cleaning solvents of any kind.
- Periodically check all components for tightness.

### Contents **NOTE:** Actual product may vary from illustration.



Hood Shield



Short Fasteners x4




Bump On x4


### Tools Required



Car Wash Supplies



Clean Towel




Phillips Screwdriver

### Preparation Before Painting / Installation

- A trial fit is recommended to ensure proper positioning and fit.
- Check fit of parts before painting as we will not accept the return of modified or painted parts.
- Wash and dry your vehicle to remove any debris and/or dirt from the installation area.


### Installation Steps **NOTE:** Actual application may vary slightly from illustrations.

Open hood.

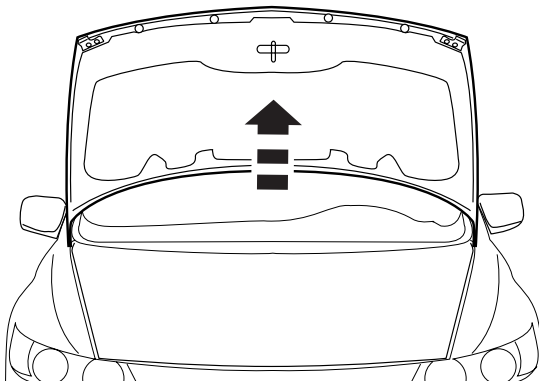

1

Locate (4) holes on underside of hood. Clean this area with a soft cloth

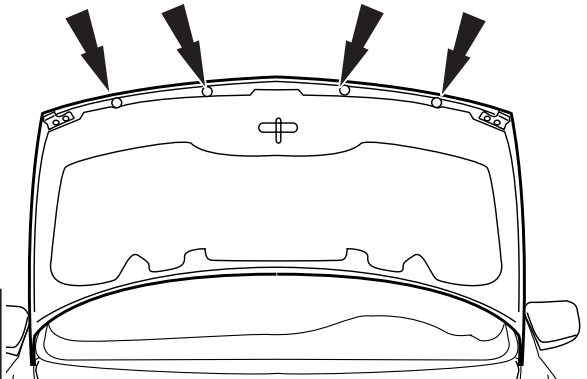


2



## Installation Steps

**NOTE:** Actual application may vary slightly from drawings.


Align holes in hood shield with holes in hood.

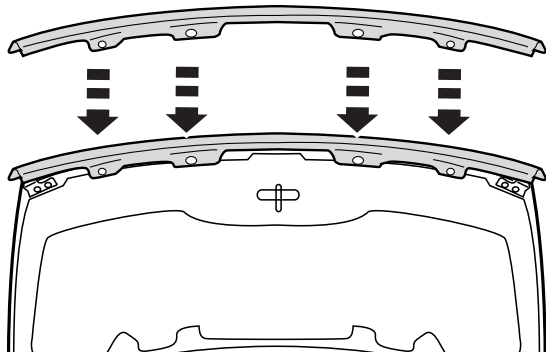

3




Using a phillips screwdriver, install (4) fasteners.

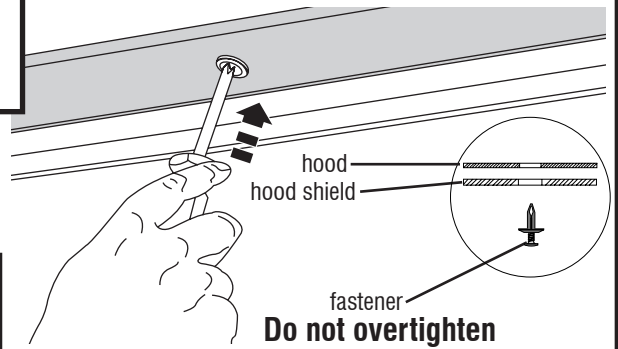

4


Close hood.

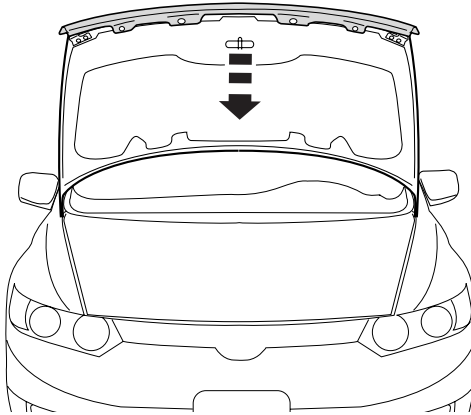

5



Install (4) bump ons.

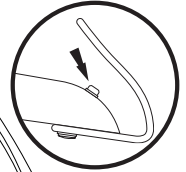

6

## Care and Cleaning

- Wash only with mild soap & dry with a clean cloth.