

WeatherTech®


Easy-On™ Stone & Bug Deflectors

Important Safety Information



- CAUTION - Before driving, ensure that the hood shield is properly anchored to vehicle.
- Do not use automatic “brush-style” car washes.
- Do not use cleaning solvents of any kind.
- Periodically check all components for tightness.

Contents **NOTE:** Actual product may vary from illustration.



Hood Shield



Bump On x4



Metal Washer x4



Screw x4



Well Nut x4


Tools Required



Car Wash Supplies



Clean Towel




Appropriate hand tools

Preparation Before Painting / Installation

- A trial fit is recommended to ensure proper positioning and fit.
- Check fit of parts before painting as we will not accept the return of modified or painted parts.
- Wash your vehicle’s hood to remove any debris and/or dirt.
- Dry the hood with a clean towel.


Installation Steps **NOTE:** Actual application may vary slightly from illustrations.

Open Hood.

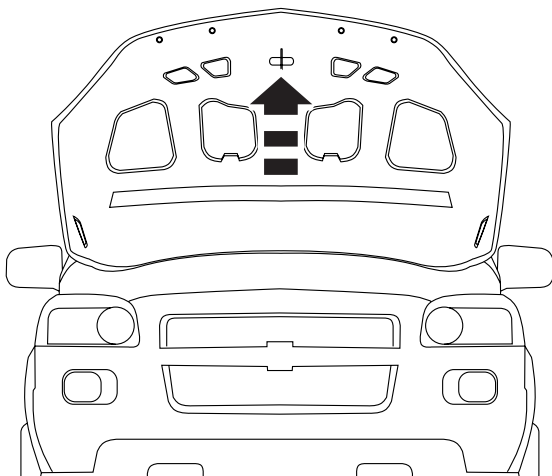

1

Assemble fasteners by inserting screw through hood shield and into well nut. Hand tighten.

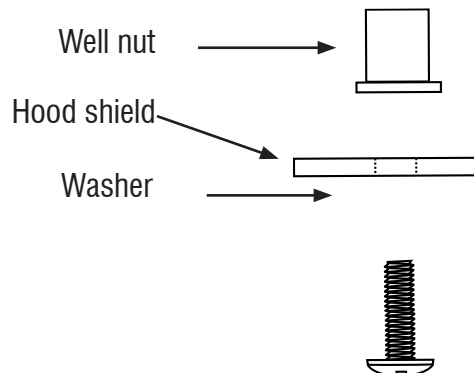


2


Installation Steps

NOTE: Actual application may vary slightly from illustrations.


Center part on front edge of hood and align holes

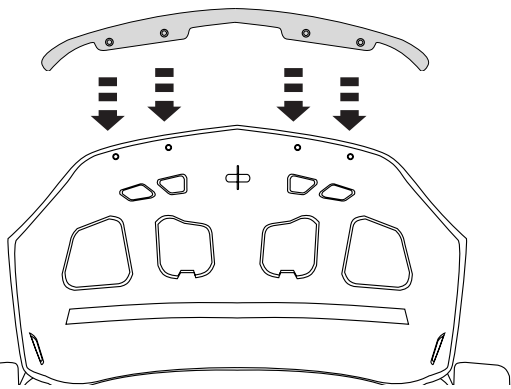

3




With well nut inserted into hole in hood, secure hood shield to hood by tightening screw to expand well nut. Repeat for remaining fasteners.

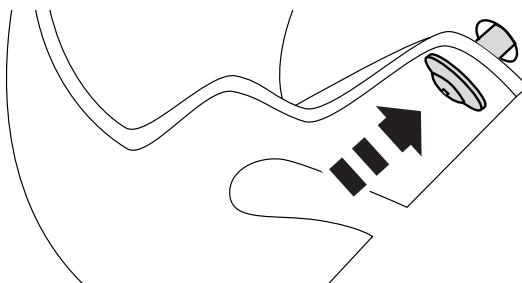

4

NOTE: DO NOT OVER TIGHTEN


Close Hood.

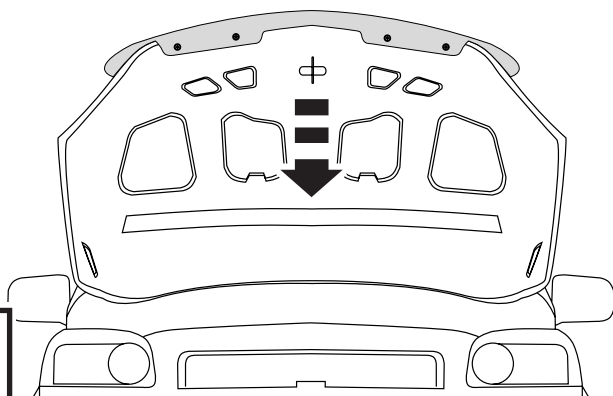

5



Apply bump ons to surface of hood

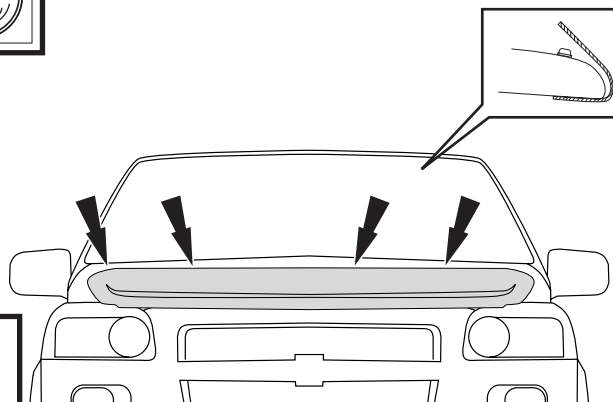

6

Care and Cleaning

- Wash only with mild soap & dry with a clean cloth.