I - Sheet Number WTBF119 Rev.A

WeatherTech®

Easy-On™ Stone & Bug Deflectors

Important Safety Information



- CAUTION Before driving, ensure that the hood shield is properly secured to vehicle.
- Do not use automatic "brush-style" car washes.
- . Do not use cleaning solvents of any kind.
- · Periodically check all components for tightness.

Contents

NOTE: Actual product may vary from illustration.



Hood shield



Screw x 6



Receptacle x 6



Bump On x4

Tools Required



Car Wash Supplies



Clean Towel



Phillips screwdriver




Grease Pencil

Preparation Before Painting / Installation

- · A trial fit is recommended to ensure proper positioning and fit.
- Check fit of parts before painting as we will not accept the return of modified or painted parts.
- Wash and dry your vehicle to remove any debris and/or dirt from the installation area.

Installation Steps

NOTE: Actual application may vary slightly from illustrations.

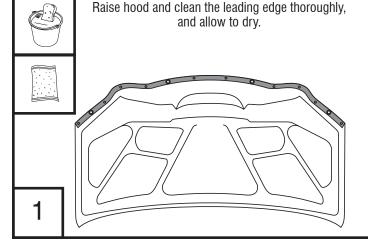

Test fit hood shield by centering it on the hood edge.

Note where the mounting holes in the hood shield flange
will be and mark with a grease pencil.

