

WeatherTech®

Easy-On™ Stone & Bug Deflectors

Important Safety Information



- CAUTION - Before driving, ensure that the hood shield is properly secured to vehicle.
- Do not use automatic "brush-style" car washes.
- Do not use cleaning solvents of any kind.
- Periodically check all components for tightness.

Contents

NOTE: Actual product may vary from illustration.



Hood shield




Bump Ons x4



Hood Insert x6
(39-4150)



Washer x6
(98022)



Screws x6
(98023)


Tools Required




Car Wash Supplies



Clean Towel



Phillips Screwdriver



Tape


Preparation Before Painting / Installation

- A trial fit is recommended to ensure proper positioning and fit.
- Check fit of parts before painting as we will not accept the return of modified or painted parts.
- Wash and dry your vehicle to remove any debris and/or dirt from the installation area.

Installation Steps


NOTE: Actual application may vary slightly from illustrations.

Open hood.

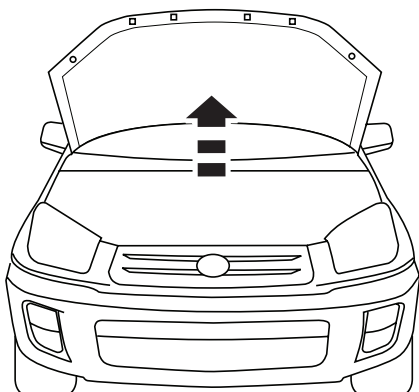

1


Locate (6) square holes on underside of hood.

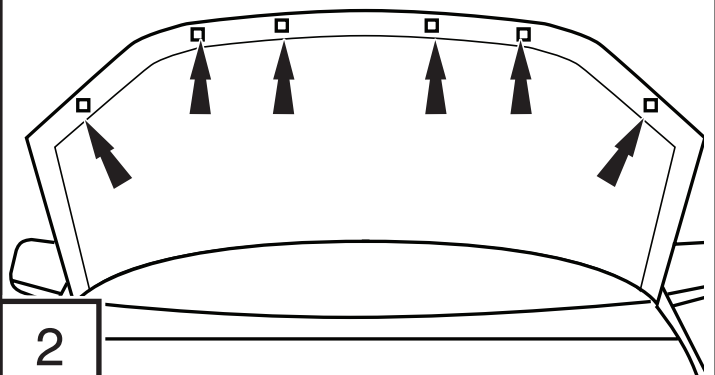


2

Installation Steps

NOTE: Actual application may vary slightly from illustrations.




Press (6) hood inserts into the (6) square holes. If necessary use tape to hold them firmly in place.

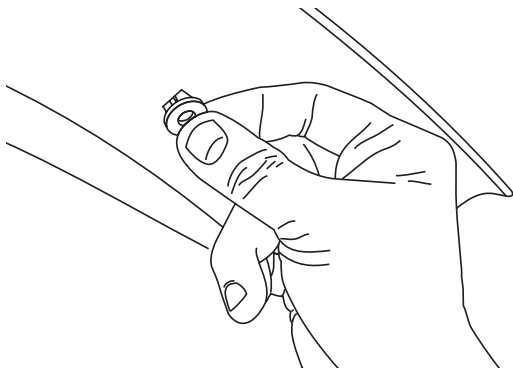


3


Align pre-drilled holes in hood shield with holes in hood. Place hood shield on hood.

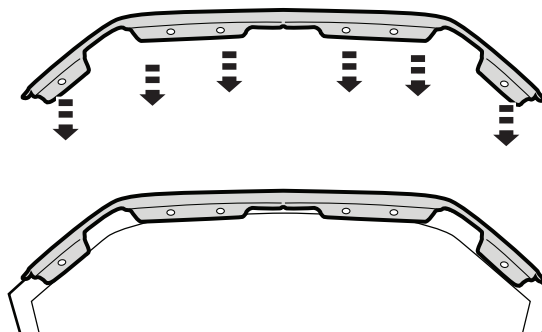

4



Using a phillips screwdriver install (6) screws with (6) washers at the locations noted in **Step 3**.

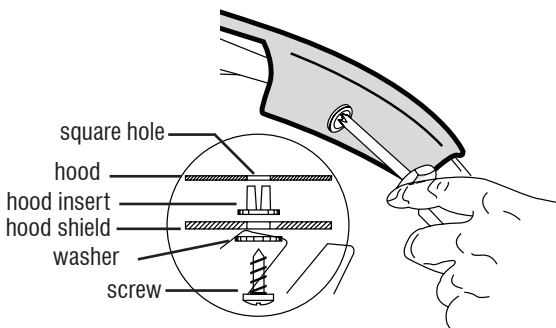


DO NOT OVER TIGHTEN

5



Close hood, and install bump ons at pre-cleaned locations on the painted hood surface.

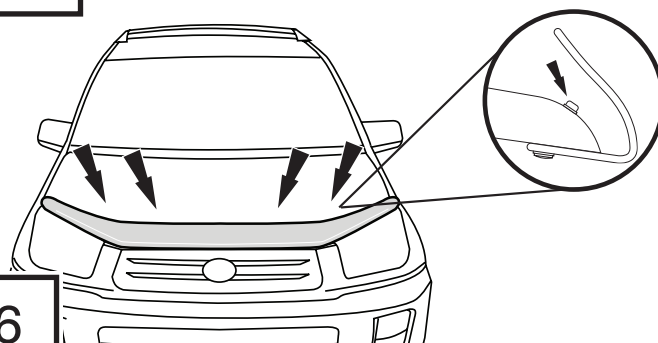

6

Care and Cleaning

- Wash only with mild soap & dry with a clean cloth.

Looking for dependable stone & bug deflectors?
Rely on Weathertech for quality and long-lasting products.