# WeatherTech®

Easy-On™ Stone & Bug Deflectors

### **Important Safety Information**



- CAUTION Before driving, ensure that the hood shield is properly secured to vehicle.
- Do not use automatic "brush-style" car washes.
- · Do not use cleaning solvents of any kind.
- · Periodically check all components for tightness.

#### Contents

**NOTE:** Actual product may vary from illustration.



Hood shield









Alcohol pad x2

Fastener Assembly x4

Machine Screw x2 (04-4128)

Bracket x2 (39-1956)



Protective Film x2 (45-3601)



**Black Plastic** 

Washer x2 (37-4106)



Bump On x4

### **Tools Required**



Car Wash Supplies



Clean Towel



**Phillips** screwdriver





Grease pencil

## **Preparation Before Painting / Installation**

- · A trial fit is recommended to ensure proper positioning and fit.
- Check fit of parts before painting as we will not accept the return of modified or painted parts.
- Wash and dry your vehicle to remove any debris and/or dirt from the installation area.

Installation Steps NOTE: Actual application may vary slightly from illustrations.

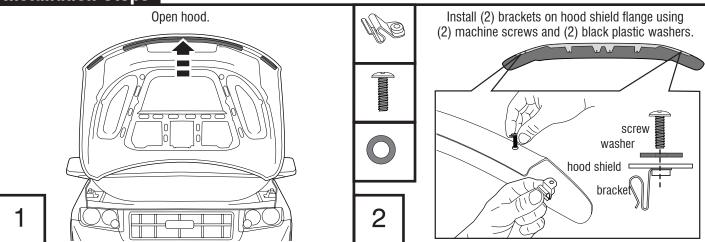

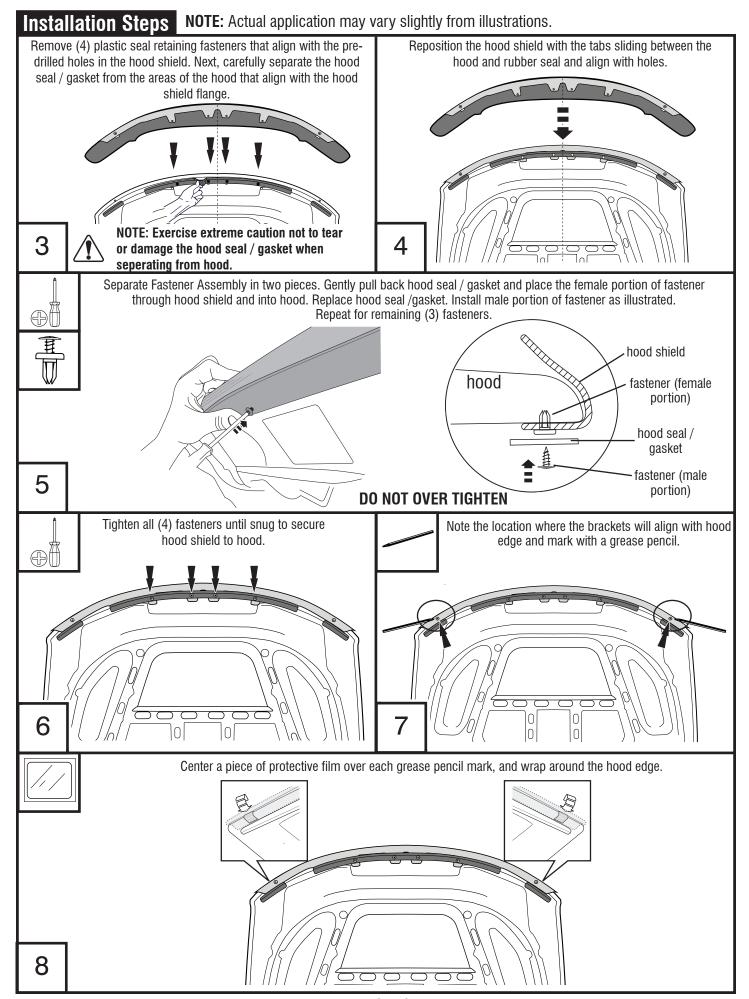

Page 2 of 3

