

WeatherTech®

BMW E71 X6 SAC Front Window Deflectors

Installation Note: Read all instructions before installing the side window deflectors. Incorrectly installed deflectors may result in damage to the deflectors and/or the window lift mechanisms.

Installation of this accessory is recommended at temperatures above 50° Fahrenheit.



1 Start with the driver-side front window and roll the window down completely.




2 Insert the rear edge of the deflector into the window channel as shown.



3 Insert the top of the deflector flange into the window channel, working towards the front of the vehicle.



4 Carefully flex the bottom of the deflector onto the outer window sill while inserting the front of the flange into the window channel.

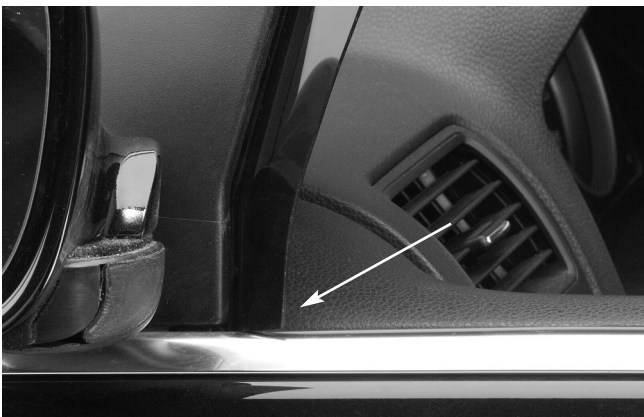

5 Ensure that the bottom of the deflector is seated on top of the window sill as shown.




6 Slowly and carefully close the window when installation is complete. It is also recommended that you leave the window closed for 24 hours to ensure the deflector is properly seated. Repeat steps 1-6 for passenger-side window installation.

BMW E71 X6 SAC Rear Window Deflectors



Installation Note: Read all instructions before installing the side window deflectors. Incorrectly installed deflectors may result in damage to the deflectors and/or the window lift mechanisms.

Installation of this accessory is recommended at temperatures above 50° Fahrenheit.

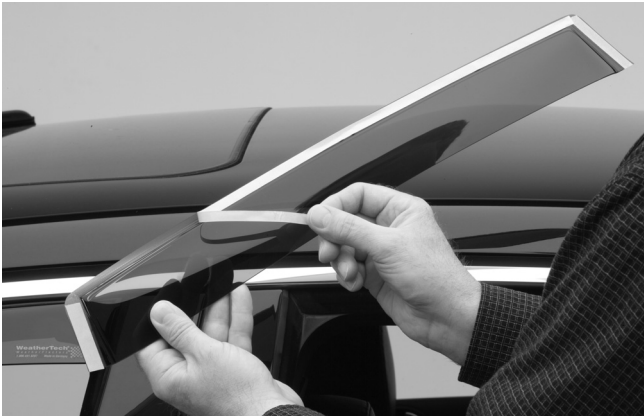

1 Start with the driver-side rear window. Open window completely. Remove the adhesive backing from the deflector.



2 Begin installation by inserting the rear edge of the deflector into the window channel as shown.



3 Using your fingertips to apply light outward pressure, pivot the left-hand side of the deflector up and into the window channel.



4 Once installation is completed, grasp the deflector at the base and tug gently outward. This will ensure that the deflector is properly seated into the window channel and will allow for adequate clearance for the window to pass behind it.



5 Slowly and carefully close your window. It is also recommended that you leave the window closed for 24 hours to ensure the deflector is properly seated. Repeat steps 1-5 for passenger-side window installation.

IMPORTANT! Prior to closing your vehicle windows for the first time; ensure that the thin machined mounting flange is fully and properly inserted into the window channel from front to rear.