

WeatherTech®

BumperTopper



Alcohol Pads



Masking Tape*

*Not included



BumperTopper



Install Video

NOTE: Please make sure vehicle surface and BumperTopper are at or above 60° F (16° C) for proper tape adhesion.


Installation Instructions



1 Wash the rear bumper of your vehicle and completely dry with a clean cloth. It is important that the bumper remains completely dry and free of any dirt and debris throughout the installation process.



2 Center the BumperTopper on the bumper using character lines of your bumper, aligning with the Center Indication Mark to help with proper placement.

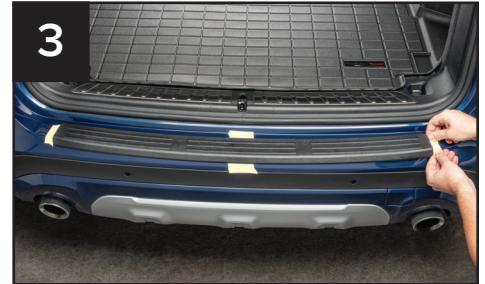

3 With the BumperTopper held in place on your bumper, outline the edges of it on your bumper with masking tape.



4 Once you outline it, remove the BumperTopper and use the included alcohol pads to deep clean the contact area, then let dry completely.



5 Prepare for installation by peeling back the adhesive liner from each section on the underside of the BumperTopper. Fold the adhesive liners back far enough to create pull tabs.




6 Carefully place the BumperTopper back into position, centered and within the outlined masking tape on your bumper. Remove the masking tape.



7 Remove the adhesive liner. Grasp the exposed portion of the adhesive liner and pull gently with one hand while applying light, even pressure to the BumperTopper with your opposite hand. Repeat this step until all adhesive liner has been removed.



8 Using the palm of your hand, apply additional pressure from the center out, pressing down firmly along all the adhesive lined edges to ensure proper adhesion.

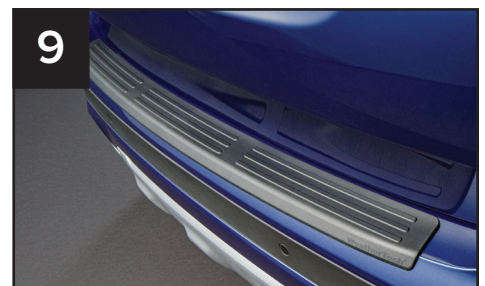

9 Congratulations on installing your WeatherTech BumperTopper! Your BumperTopper will be fully bonded within 24 hours. Do not wash your vehicle for 72 hours after installation.

LET'S TALK

800-441-6287

For warranty information, please visit www.WeatherTech.com/warranty



Made in USA

67BT001 © 2022 MacNeil IP LLC