


# WeatherTech®

## Side Window Deflector Instructions

*These instructions are specific to installation of Side Window Deflectors with an outer trim clip.*

**WARNING** Accessories that are not properly fitted can be dangerous. Read the instructions carefully before installation, and comply with the instructions at all times.

**NOTE** Deflector may take longer to acclimate below 60° F / 16° C

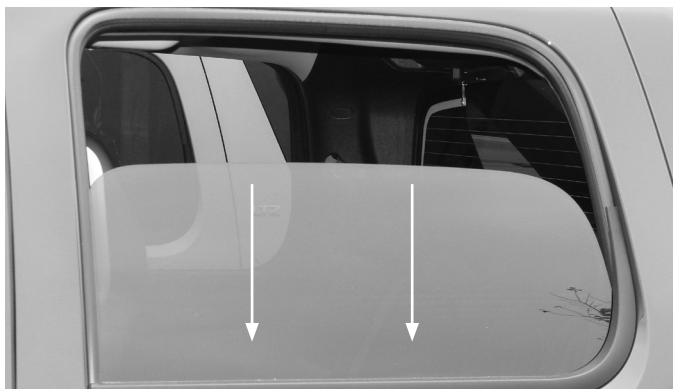


**1** Start with the left hand side of your clean vehicle. Completely roll down the rear windows. Remove the adhesive backing from the drivers side part.



**2** Insert the rear edge of the deflector into the window channel as shown. Next, align the front edge of the deflector in line with the window channel.




**3** Slide the front of the deflector upward until all the deflector's edges are fully seated into the window channel.

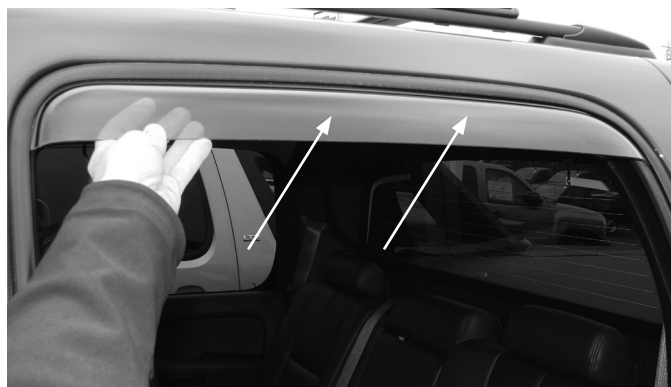

**4** Gently pull outward along the full length of the deflector to properly seat the adhesive.



**5** Slide the retention clip onto the outer window trim as shown. Ensure that the clip is touching the bottom edge of the deflector. Note that the clips included with your kit are black.

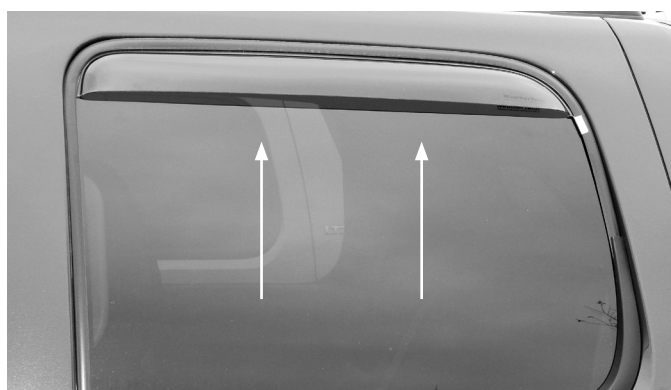

**6** Carefully roll up the window up. To complete installation, repeat steps 1-5 on the passenger side.  
**CONGRATULATIONS!** Your WeatherTech® Side Window Deflectors have been properly installed.