


WeatherTech®

Side Window Deflectors

Installation Instructions

Contents

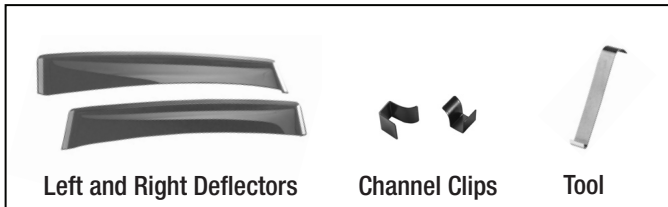

- (2) Side Window Deflectors
- (2) Channel Clips
- (1) Installation Tool

⚠ WARNING ⚠


Accessories which are not properly fitted can be dangerous. Read the instructions carefully before installation, and comply with the instructions at all times. If in doubt, contact WeatherTech® Customer Service.



- 1** To install retention clip, measure-down approximately 1" (25mm) from rear corner of window opening. Mark this location with a felt-tipped pen or pencil.



- 2** Using the small "hook end" of the installation tool, carefully pull-down the inner rubber weatherstrip material at the location determined in Step 1.

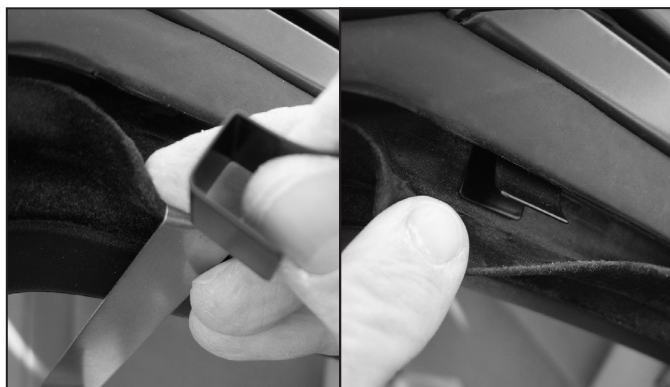

- 3** Place the retention clip into the exposed opening of the rubber window channel as shown, with the curved portion facing outward. Push it up, and fully into the window channel (you may push it with the installation tool if necessary).



- 4** Push the weatherstrip molding back into place as shown in the photo. Only a small portion of the metal retainer clip will be exposed.



- 5** Remove the protective film from the adhesive attached to the deflector.



- 6** Begin the deflector installation by inserting the machined flange of the deflector into the front-end of the window opening. Install from front to rear, slipping rear flange of deflector between clip and window frame. The clip will apply outward pressure against deflector to aid retention. Repeat Steps 1-6 for the passenger side installation.

Congratulations!

Your new WeatherTech® Side Window Deflectors have been installed!

Installation Tips:

1. When installed correctly, the bottom edge of the front deflector must rest on the door's outer weather stripping and only the thin flange is in the channel between the glass and inner seal.
2. Slowly raise the window up without activating the auto-up. If unable to fully close, have someone press the window between their hands upwards. Simultaneously raise the window up in small increments until fully closed.
3. If safety features cause the window to go down, reset the window by:
 - a. Roll the window down, hold the down button for 5 seconds.
 - b. Raise the window without activating the auto-up feature. Hold the up button for 3 seconds.
4. Leave windows closed fully for 12 hours. Deflector may take longer to acclimate below 60° F / 16° C.