


WeatherTech® Honda Accord Window Deflectors, 2003-

Installation Note: Read all instructions before installing deflectors.
Incorrectly installed deflectors may result in damage to the deflector and/or the window lift mechanism.

Installation of this accessory is recommended at temperatures above 50° Fahrenheit.



1
Please begin installation with driver-side.
Open driver-side window, and hang clip on the stainless belt molding in the gap between the outer belt molding and the inner dew wiper **(the rubber that is against the window glass.)**
Note: the clip should rest approximately 3/8" from the mirror bracket.

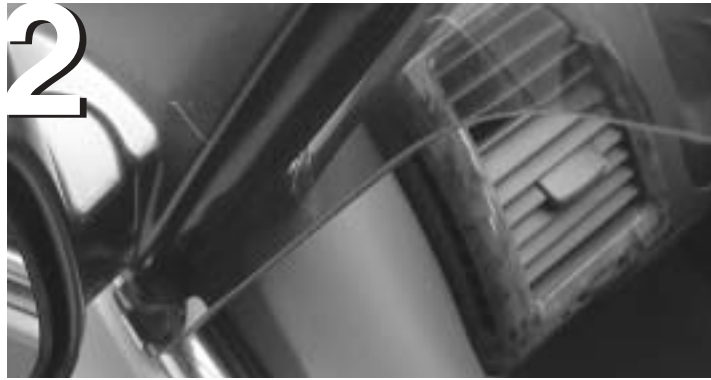

2
Begin the installation by inserting the tip of the deflector into the trough of the clip, while feeding the thin, opaque machined flange into the window channel behind the vertical mirror bracket only.



3
While holding the mirror end of the deflector in place with your left hand, grasp the opposite end with your right hand. Bow the deflector toward you while you insert the rear most portion of the deflector flange into upper right-hand corner of the window channel. Leave a gap of approximately 1/4" between the top edge of the deflector and the upper corner of the window frame, as this will ease the remainder of the installation.



4
Complete deflector installation by tucking the now bowed deflector flange into the window frame, from front-to-rear by pulling downward on the deflector with your fingertips until the flange of the deflector slips up into the window channel.

IMPORTANT:

Prior to closing your windows for the first time ensure that;

- A) The tip or end of the deflector is properly resting in the clip.
- B) The thin, opaque machined mounting-flange is fully and properly inserted into the window channel from front to rear.



5
Prior to closing the window, grasp the deflector firmly in the upper right hand corner to ensure the deflector is properly seated in the window channel, carefully and slowly close and open the window 2 to 3 times before installing the passenger side deflector.

Repeat steps one through five for passenger-side installation