

WeatherTech® Dual Pane Side Window Deflector Instruction

Installation Note: Read all instructions before installing deflectors. Incorrectly installed deflectors may result in damage to the deflector and/or the window lift mechanism.

Installation of this accessory is recommended at temperatures above 50° Fahrenheit.

1



Open the windows. Begin installation with part that fits on the left side of the vehicle.

2



Carefully insert the rear deflector's rear flange between the rubber seal and the window. This can be a tight fit on some vehicles, and it is usually beneficial to loosen the rubber in this area with something flat. DO NOT use a knife or other sharp object, as this can cause injury to you and your vehicle!

3




Insert the deflector's front flange into the window channel and slide the deflector upwards while taking care to guide the deflector's top flange into the window channel at the same time.

4



Continue to press upward on the deflector until it is fully seated along the edge of the window seals.

5

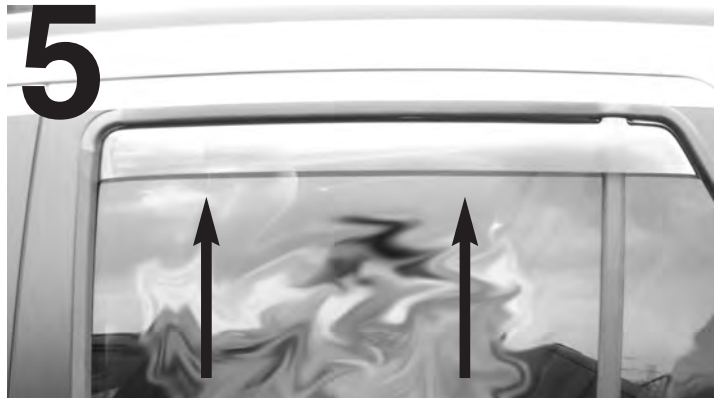

Finish the installation by gradually rolling up the window.

Repeat steps two through five for passenger-side installation