


WeatherTech®

Side Window Deflectors

Front with Channel Clips

Installation Instructions

Contents

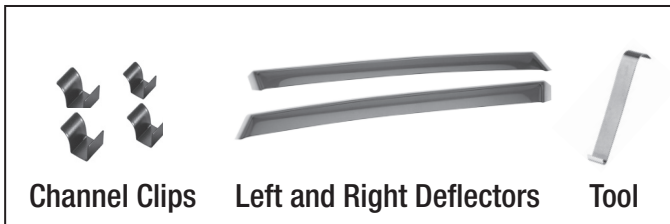

(4) Channel Clips, (2) Front Side Window Deflectors and (1) Tool included. If there is a WeatherTech® label, it should be positioned toward the rear of the vehicle.

⚠ WARNING ⚠


Accessories which are not properly fitted can be dangerous. Read the instructions carefully before installation, and comply with the instructions at all times. If in doubt, contact WeatherTech®.



1 Make sure that the window is clean and dry. Then pull down the weatherstripping in the first position, which is approximately 3" from the rear of the deflector.




2 Use the same tool to insert a channel clip.

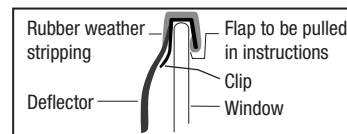


3 Push clip in, and replace weatherstripping.



4 Pull down the weatherstripping in the second position, which is approximately 4" from the front. Then, push clip in and replace weatherstripping.

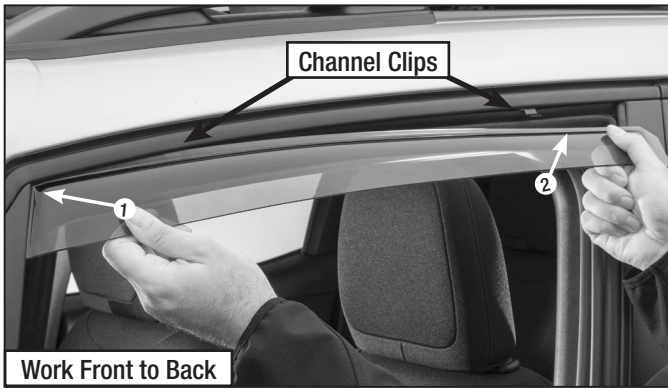

5 Working front to back, fully insert machined flange of deflector into window opening over the clips, while pressing inward against channel clips. If the deflector has hemispherical notches, center the clips under them prior to deflector installation.

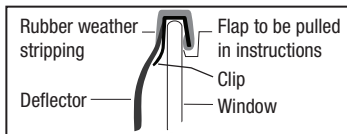

6 Inspect deflector to ensure that it is fully inserted into the window channel. The channel clips should match the contour on the backside of the deflector. Next, close your window fully and press firmly against weatherstripping from front to rear.

7 Repeat Steps 1-6 on the passenger side.

Congratulations!

Your new WeatherTech® Side Window Deflectors have been installed!

Installation Tips:

1. When installed correctly, the bottom edge of the front deflector must rest on the door's outer weather stripping and only the thin flange is in the channel between the glass and inner seal.
2. Some vehicles are equipped with 2 rubber window channels. If true for your vehicle, use the top rubber channel for clip placement.
3. Slowly raise the window up without activating the auto-up. If unable to fully close, have someone press the window between their hands upwards. Simultaneously raise the window up in small increments until fully closed.
4. If safety features cause the window to go down, reset the window by:
 - a. Roll the window down, hold the down button for 5 seconds.
 - b. Raise the window without activating the auto-up feature. Hold the up button for 3 seconds.
5. Leave windows closed fully for 12 hours. Deflector may take longer to acclimate below 60° F / 16° C.