


# WeatherTech®

## ScratchProtection Instructions

	<b>Items Needed</b>
	<ul style="list-style-type: none"><li>- Microfiber Towel</li><li>- 70% Isopropyl Alcohol</li><li>- Baby Shampoo</li><li>- Spray Bottle</li><li>- Scissors</li></ul>
	<b>Hardware</b>
	<ul style="list-style-type: none"><li>- Protection Film Sheet</li><li>- Squeegee</li></ul>

### Part 1: Prep

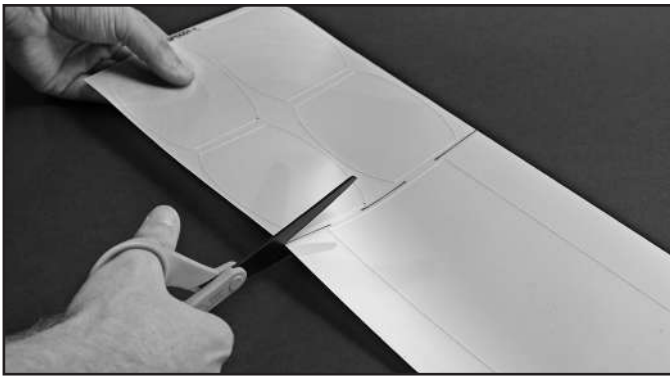

**1** Unroll Scratch Protection Kit. Cut along the dash markings to separate each of the pieces from the kit.



**2** Mix 1 part 70% Isopropyl alcohol to 3 parts water in a spray bottle, this will become your alcohol slip solution. In a separate spray bottle, mix 1 part baby shampoo to 3 parts water in a spray bottle, this will become your soap slip solution.



**3** Thoroughly clean all areas with the alcohol solution to remove any dirt, debris, grease or oil. Dry with a clean, lint-free cloth.

**You're now ready to move  
on to Part 2: Install**

## **Part 2: Install**

### *Door Cup*



- 1** Spray alcohol solution on the door cup area, fingers and protection film before and as the film is removed from the backing.



- 2** Apply the template centered in the area. Starting from the center use your fingers to slowly work the bubbles towards the edges with firm, gentle pressure.



- 3** Work the bubbles toward edges slowly until eliminated.



- 4** Protection Film will adhere after just 20 minutes and be fully cured after 24 hours.

## **Part 2: Install**


### ***Door Edge***



- 1** Locate desired starting point for the film; body lines are an excellent guide. Peel back 3-4" of film from backing. Apply half the film width on the front edge and firmly press it down. Continue application until the end of film is reached.



- 2** With half of the film adhered to the door, now press firmly down on the rolled edge of the door, rolling the rest of the film inward, working toward the end of film. Press remaining film width on the inside of the door working from top to bottom.

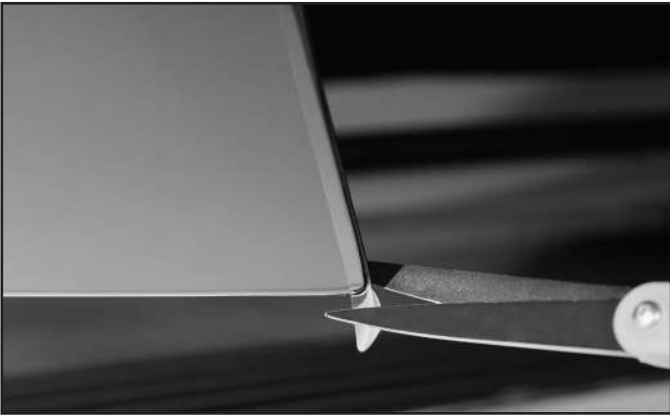


- 3** Trimming the excess material may be required depending on starting point chosen. Use a squeegee or your hand to set any remaining film into place.



- 4** Protection Film will adhere after just 20 minutes and be fully cured after 24 hours.

## **Part 2: Install**

### *Door Sill*

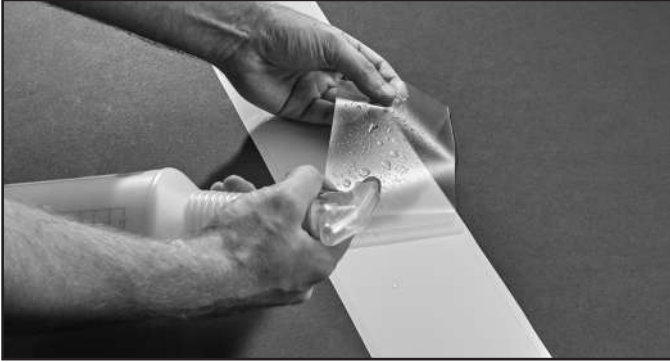

**1** Locate desired spot for film application. Spray soap solution on your fingers and protection film as you remove it from the backing.



**2** Using the top edge as a guide, apply the template to the door sill. Starting from the top and working down, use your fingers to apply slow, gentle strokes to force the solution and air bubbles down and out.




**3** Use the squeegee as needed to finish the application, aggressive use of the squeegee can damage the film.



**4** Protection Film will adhere after just 20 minutes and be fully cured after 24 hours.

## **Part 2: Install** *Trunk Ledge*

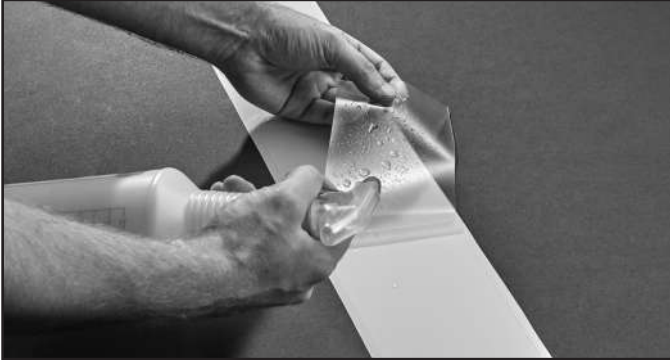

**1** Locate desired spot for film application. Spray soap solution on your fingers and protection film as you remove it from the backing.



**2** Using the top edge as a guide and centering the film as best you can, apply the template to the trunk ledge. Starting from the top and working down, use the squeegee to apply slow, gentle strokes to force the solution and air bubbles down and out.



**3** Continue to use the squeegee to work bubbles toward the edges until eliminated, aggressive use of the squeegee can damage the film.



**4** Protection Film will adhere after just 20 minutes and be fully cured after 24 hours.

Check out the collection of car wraps we offer.