

INSTALLATION INSTRUCTIONS

PRO TRAXX 4 NERF STEP BARS



APPLICATION:

2022 Toyota Tundra Crew Max, Double Cab


PART NUMBER:

21-24230, 21-24235, 21-24220, 21-24225


ITEM	QUANTITY	DESCRIPTION	TOOLS NEEDED
1	2	PRO TRAXX STEP BAR ASSEMBLY (1 DRIVER, 1 PASSENGER)	10MM SOCKET
2	1	DRIVER FRONT MOUNTING BRACKET	10MM WRENCH
3	2	DRIVER CENTER/REAR MOUNTING BRACKETS	12MM SOCKET
4	1	PASSENGER FRONT MOUNTING BRACKET	12MM WRENCH
5	2	PASSENGER CENTER/REAR MOUNTING BRACKETS	13MM SOCKET
6	6	BRACKET COVER	13MM WRENCH
7	12	M6 HEX HEAD BOLT	RATCHET
8	24	M6 FLAT WASHER	TORQUE WRENCH
9	12	M6 NYLON NUT	ALLEN WRENCH
10	12	M8 HEX HEAD BOLT	
11	12	M8 SPLIT LOCK WASHER	
12	12	M8 FLAT WASHER	
13	12	M10 BUTTON HEAD HEX SOCKET BOLT	
14	12	M10 TOOTHED LOCK WASHER	
15	12	M10 FLAT WASHER	

ANTI-SEIZE LUBRICANT MUST BE USED ON ALL STAINLESS STEEL FASTENERS TO PREVENT THREAD DAMAGE AND GALLING






ITEM 1 (Pro Traxx 4) Crew Max Shown

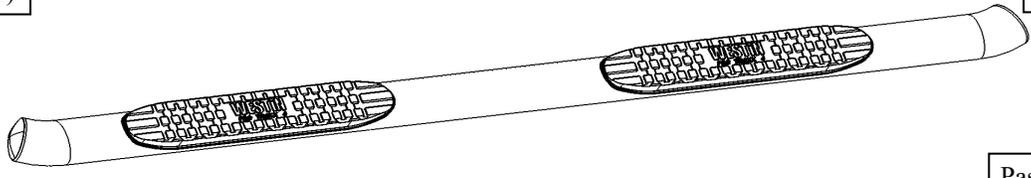

ITEM 1 (Pro Traxx 4) Passenger Side Opposite
Double Cab Shown



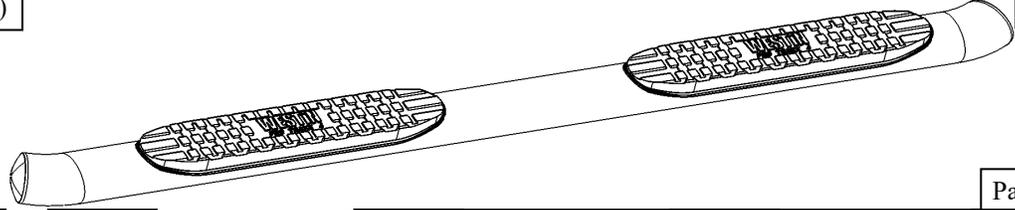


ITEM 2 ITEM 3 ITEM 4 ITEM 5 ITEM 6

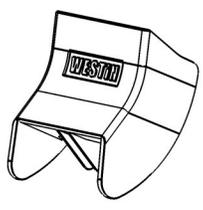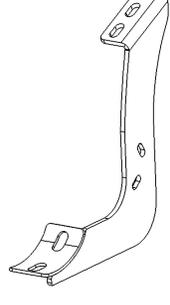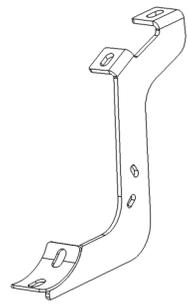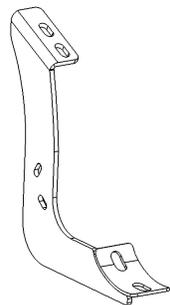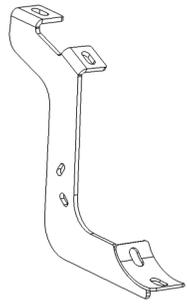

PROCEDURE

1. Remove contents from box, verify if all parts listed are present and free from damage. Carefully read and understand all instructions before attempting installation.
Failure to identify damage before installation could lead to a rejection of any claim.
2. Starting on the driver side of the vehicle, locate the mounting locations with factory bolts preinstalled in them. Remove the factory bolts from the threaded holes. See **Figures 1 & 2** for reference. **Note:** *The factory bolts will not be reused.*
3. Locate (1) Driver Front Mounting Bracket (Item 2) and loosely install it to the driver front mounting location on the rocker panel using the supplied M8 hardware (Items 10-12). See **Figure 3** for reference.

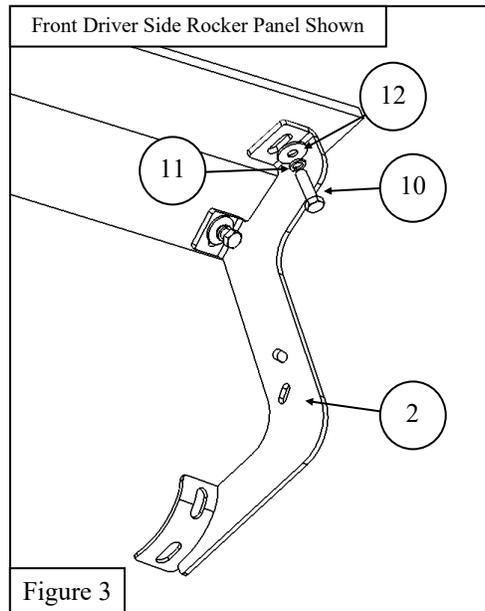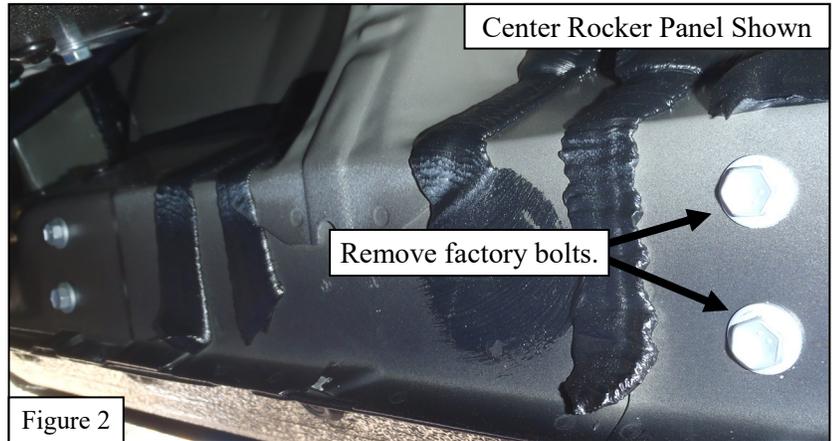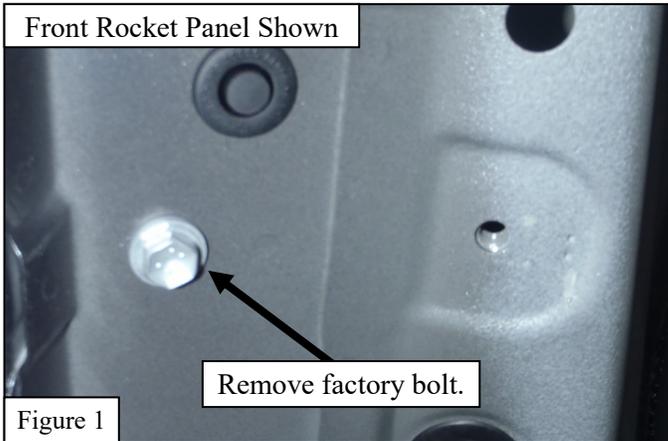

4. Locate (2) Driver Center and Rear Mounting Brackets (Item 3) and loosely secure the brackets onto the driver center and rear rocker panel mounting locations with the supplied M8 hardware (Items 10-12). See **Figure 4** for reference.
5. Repeat **Steps 3 & 4** for the passenger's side mounting locations with the Passenger Side Mounting Brackets (Items 4-5).
Note: See **Figures 5 & 6** for the correct bracket orientation.

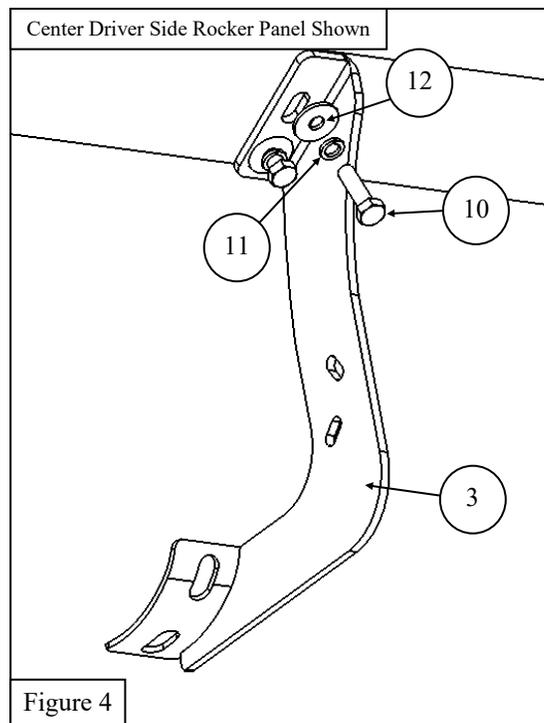


Figure 4

Note: Crew Max Pro-Traxx Step Bar is Shown in **Figures 5 & 6**, Double Cab Bracket Orientation is Similar.

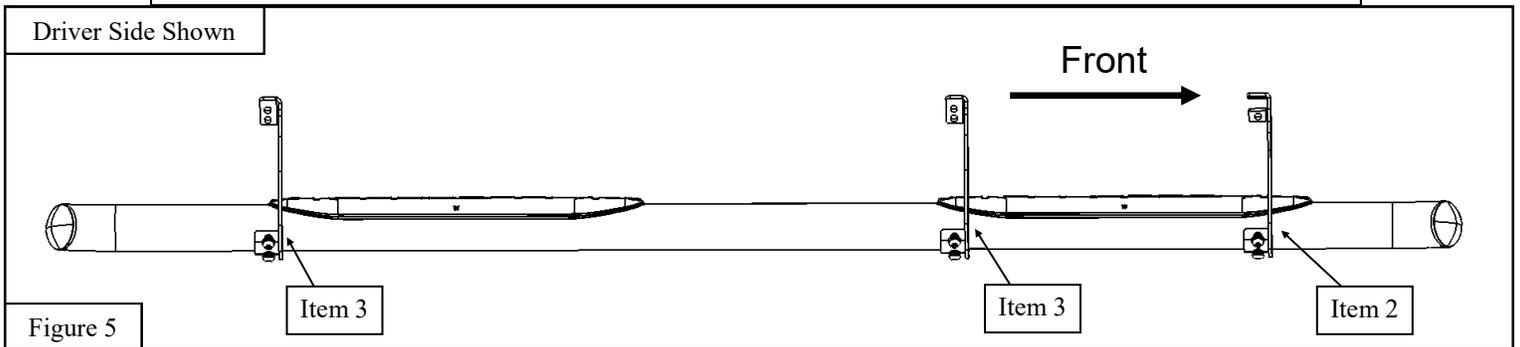


Figure 5



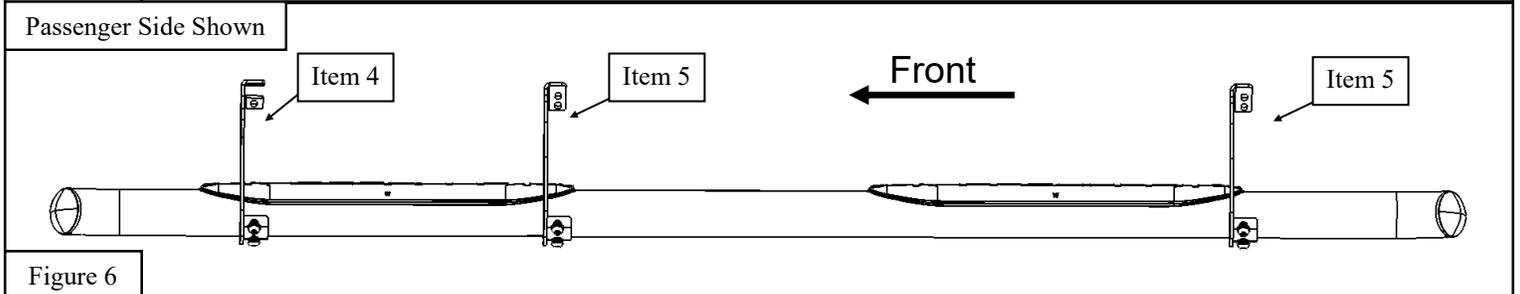


Figure 6

6. Use the supplied M6 Hardware (Items 7-9) to attach the Bracket Covers (Item 6) to the corresponding Mounting Brackets. See **Figure 7** for reference.
7. Use the supplied M10 Hardware (Items 13-15) to loosely secure the Pro Traxx 4 Step Bars (Item 1) to the corresponding Mounting Brackets. See **Figure 8** for reference.
8. Align and adjust the Pro Traxx 4 Step Bars and Mounting Brackets as necessary. Tighten and torque all hardware as specified: M6 to 7 ft-lbs, M8 to 17 ft-lbs, M10 to 38 ft-lbs.

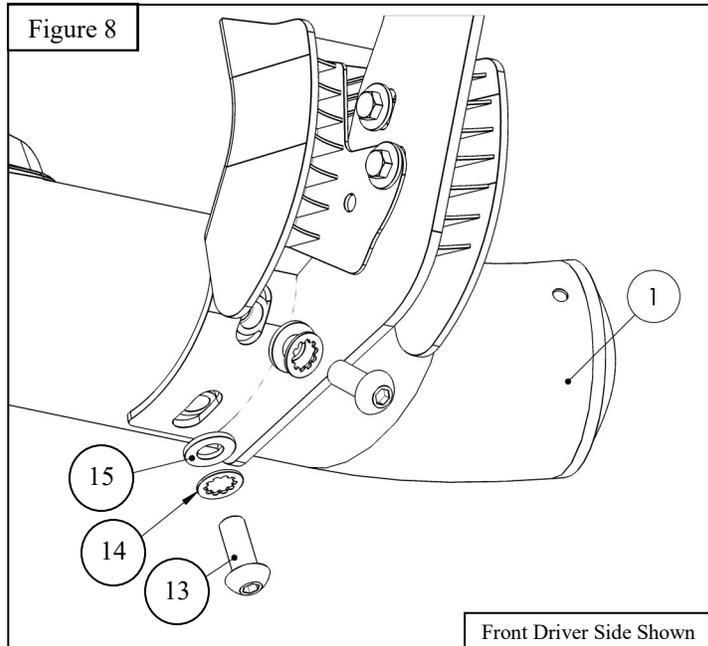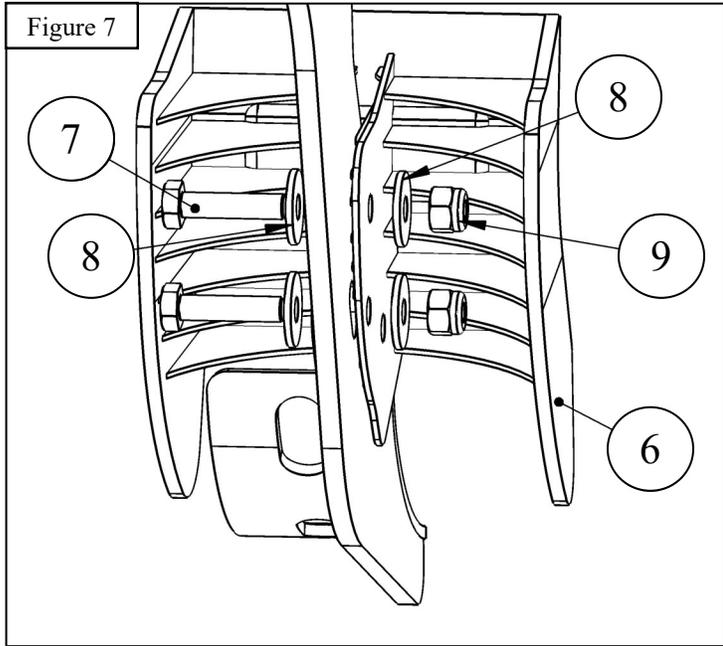

Front Driver Side Shown

INSTALLATION COMPLETE



CARE INSTRUCTIONS

- REGULAR WAXING IS RECOMMENDED. DO NOT USE ANY TYPE OF POLISH OR WAX THAT MAY CONTAIN ABRASIVES.
- STAINLESS STEEL PRODUCTS CAN BE CLEANED WITH MILD SOAP AND WATER. STAINLESS STEEL POLISH SHOULD BE USED TO POLISH SMALL SCRATCHES.
- GLOSS BLACK FINISHES SHOULD BE CLEANED WITH MILD SOAP AND WATER.

