

INSTRUCTIONS

APPLICATION: 1998-2001 OLDSMOBILE BRAVADA; 1998-2002 GMC JIMMY; 1998-2003 ISUZU HOMBRE; 1998-2004 CHEVY BLAZER/S-SERIES PICKUP

AUTOMOTIVE PRODUCTS, INC.

SAFARI BAR ASSEMBLY 30-0000 30-0005 MOUNT KIT 30-1065		30-0005 JNT KIT		
ITEM	QTY	CONTE	NTS	TOOLS
1 2,3	1 2		EMBLY (PURCHASED SEPARATELY) ENGER (2) AND DRIVER (3)	3/4" SOCKET 15MM SOCKET
4	2			17MM SOCKET
5	2	1/2" FLAT WASHER RATCHET		
6	2	1/2" LOCK WASHER TORQUE WRENCH		
7	4	M10-1.50 X 30MM HEX HEAD BOLT		
8	4	10MM FLAT WASHER		
9	4	10MM LOCK WAS	SHER	

- STEP 1. Remove the contents from box and check for damage. Verify all parts are present. Read instructions completely before beginning.
- STEP 2. Remove two 10MM bumper brace bolts located on back side of front body mount. **SEE FIGURE 1. NOTE:** If bumper brace bolts are not present, proceed to Step 4.
- STEP 3. Determine passenger and driver brackets. **SEE FIGURE 2.** Attach brackets to back side of body mount using 10mm bolts previously removed. **NOTE:** Vehicles without existing bolts use 10mm fasteners provided. **SEE FIGURE 1.** Hand tighten.
- STEP 4. Attach Safari Bar using 1/2" fasteners. Hand tighten. SEE FIGURE 1.
- STEP 5. Level and adjust Safari Bar as desired and tighten all fasteners. Recommended torque values are 64 Ft. Lbs. for 1/2" fasteners and 32 Ft. Lbs. for 10MM fasteners.

FINISH PROTECTION

Westin products have a high quality finish that must be cared for like any other exposed finish on the vehicle. Protect the finish with a non-abrasive automotive wax, (e.g. Pure Carnauba) on a regular basis. The use of any soap, polish or wax that contains an abrasive is detrimental, as the compounds scratch the finish and open it to corrosion.


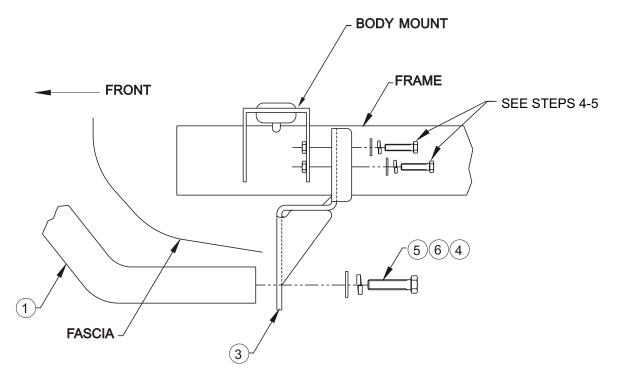


FIGURE 1 INSTALLATION VIEW OF DRIVER SIDE SHOWN, PASSENGER SIDE OPPOSITE

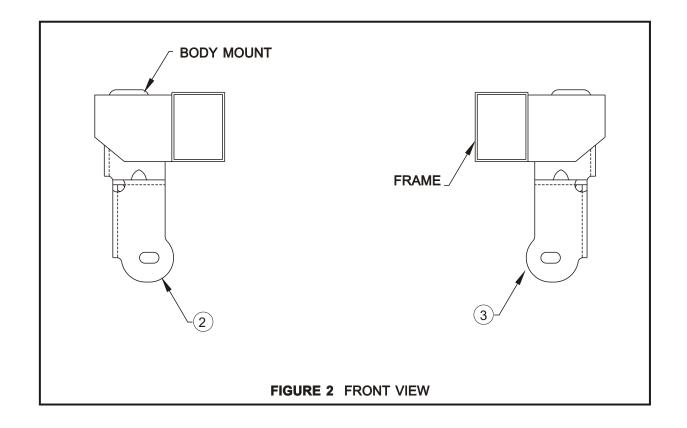

Shop for quality Westin products on our website.

Thank You for choosing Westin products.

Buy grille guards and bull bars in our online store.