

INSTRUCTIONS

APPLICATION: 1998-03 HONDA PASSPORT 1998-04 ISUZU RODEO


AUTOMOTIVE PRODUCTS. INC.

SAFARI BAR ASSEMBLY

30-0010 30-0015

MOUNT KIT

30-1075

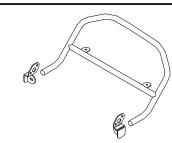


ITEM	QTY	CONTENTS	TOOLS
1 2,3 4 5 6 7 8 9	1 2 2 2 2 4 8 4	SAFARI BAR ASSEMBLY (PURCHASED SEPARATELY) BRACKET, PASSENGER (2) AND DRIVER (3) 1/2-13 X 2.00" HEX HEAD BOLT 1/2" FLAT WASHER 1/2" LOCK WASHER 3/8-16 X 1.25" HEX HEAD BOLT 3/8" FLAT WASHER 3/8" LOCK WASHER 3/8-16 HEX NUT	3/4" SOCKET 9/16" SOCKET 9/16" WRENCH RATCHET TORQUE WRENCH

- STEP 1. Remove the contents from box and check for damage. Verify all parts are present. Read instructions completely before beginning.
- STEP 2. Place bracket up to tie down loop located on bottom edge of frame, just behind the front bumper. **SEE FIGURES 1 AND 2.**
- STEP 3. Attach brackets to tie down loop using 3/8" fasteners. Hand tighten. SEE FIGURE 2.
- STEP 4. Attach Safari Bar using 1/2" fasteners. Hand tighten. SEE FIGURE 1.
- STEP 5. Level and adjust Safari Bar as desired and tighten all fasteners. Recommended torque values are 64 Ft. Lbs. for 1/2" fasteners and 26 Ft. Lbs. for 3/8" fasteners.

FINISH PROTECTION

Westin products have a high quality finish that must be cared for like any other exposed finish on the vehicle. Protect the finish with a non-abrasive automotive wax, (e.g. Pure Carnauba) on a regular basis. The use of any soap, polish or wax that contains an abrasive is detrimental, as the compounds scratch the finish and open it to corrosion.

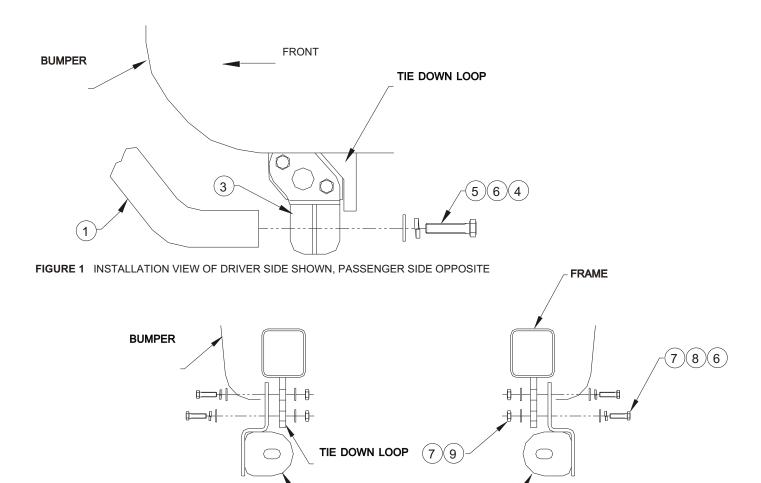

3