



SIGNATURE OF QUALITY

INSTRUCTIONS

APPLICATION: 1997-04 DODGE DAKOTA
1998-03 DODGE DURANGO


AUTOMOTIVE PRODUCTS, INC.

SAFARI BAR ASSEMBLY

30-0000 30-0005

MOUNT KIT

30-1085

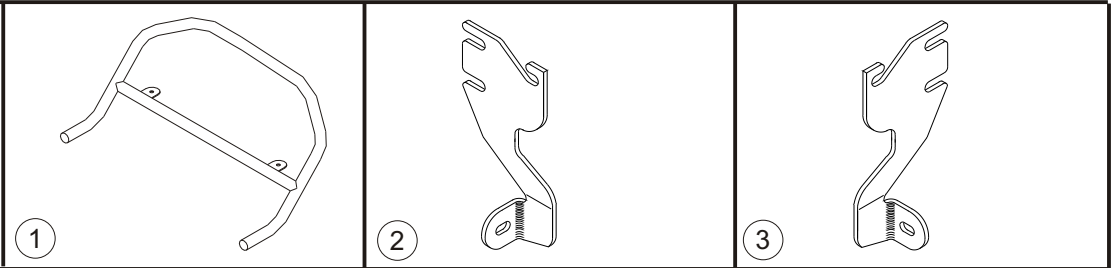

ITEM	QTY	CONTENTS	TOOLS
1	1	SAFARI BAR ASSEMBLY (PURCHASED SEPARATELY)	3/4" SOCKET
2,3	2	BRACKET, PASSENGER (2) AND DRIVER (3)	17MM SOCKET
4	2	1/2-13 X 2.00" HEX HEAD BOLT	18MM SOCKET
5	2	1/2" FLAT WASHER	RATCHET
6	2	1/2" LOCK WASHER	TORQUE WRENCH

- STEP 1. Remove the contents from box and check for damage. Verify all parts are present. Read instructions completely before beginning.
- STEP 2. Remove plastic trim that attaches cover under and behind front bumper. Remove cover.
- STEP 3. Loosen five bolts attaching bumper mount.
- STEP 4. Attach brackets between frame and triangular form of bumper mount. Hand tighten. **SEE FIGURE 1.**
- STEP 5. Remove factory license plate bracket. Reinstall license plate without bracket using factory fasteners. Attach license plate by aligning bottom two plate holes with two upper holes in bumper.
- STEP 6. Attach Safari Bar to mount brackets using 1/2" stainless steel fasteners. Level and adjust Safari Bar as desired and tighten all fasteners. **SEE FIGURE 2.** Recommended torque values are 64 Ft. Lbs. for 1/2" fasteners and 60 Ft. Lbs. for bumper fasteners.
- STEP 7. Replace cover and trim clips.

FINISH PROTECTION

Westin products have a high quality finish that must be cared for like any other exposed finish on the vehicle. Protect the finish with a non-abrasive automotive wax, (e.g. Pure Carnauba) on a regular basis. The use of any soap, polish or wax that contains an abrasive is detrimental, as the compounds scratch the finish and open it to corrosion.

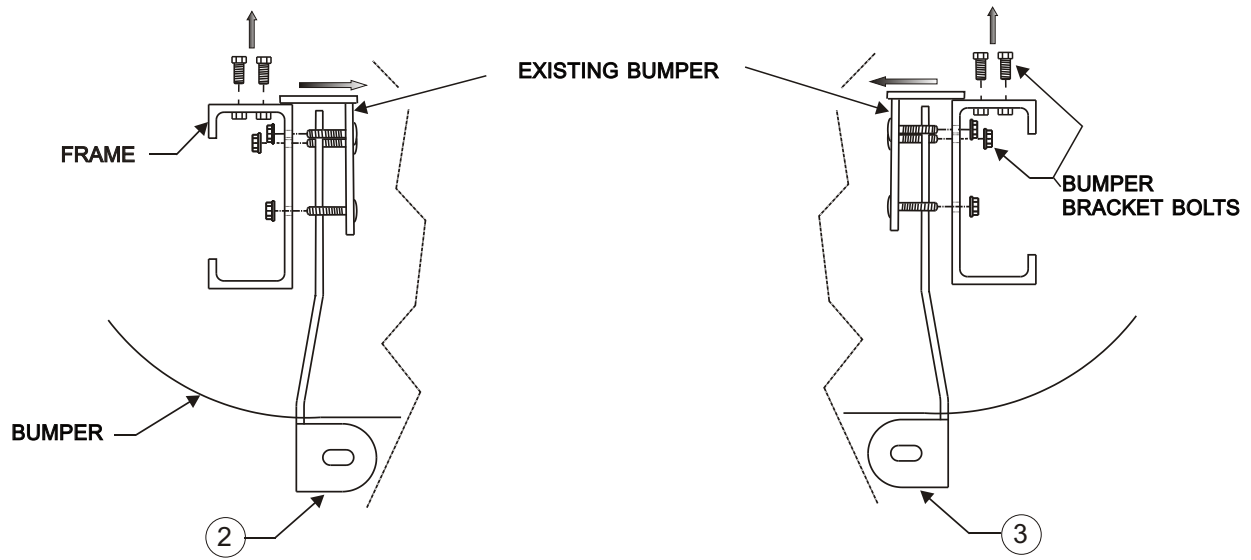


FIGURE 1 FRONT VIEW

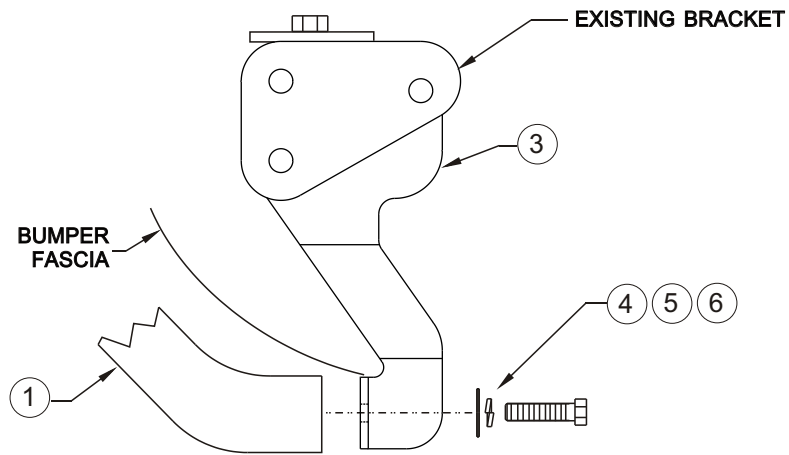


FIGURE 2 DRIVER SIDE



AUTOMOTIVE PRODUCTS, INC.

Thank You for choosing Westin products.

Shop for quality Westin products on our website.

Buy grille guards and bull bars in our online store.