




SIGNATURE OF QUALITY

AUTOMOTIVE PRODUCTS, INC.

# INSTRUCTIONS

APPLICATION: 1999-04 JEEP GRAND CHEROKEE/LAREDO

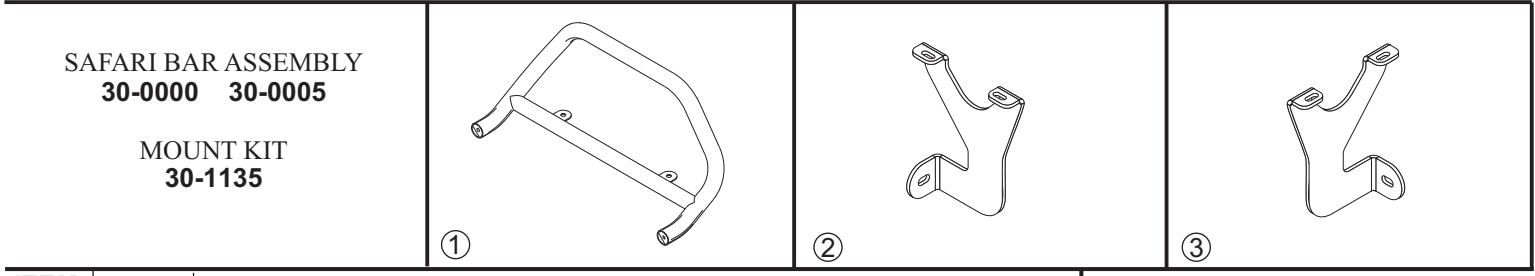

ITEM	QTY	CONTENTS	TOOLS
1	1	SAFARI BAR ASSEMBLY (PURCHASED SEPARATELY)	3/4" SOCKET 17MM SOCKET FLAT SCREWDRIVER RATCHET SOCKET EXTENSION TORQUE WRENCH
2,3	2	BRACKET, PASSENGER (2) AND DRIVER (3)	
4	2	1/2-13 X 2.00" HEX HEAD BOLT	
5	2	1/2" FLAT WASHER	
6	2	1/2" LOCK WASHER	
7	4	M10-1.50 X 30MM HEX HEAD BOLT	
8	4	10MM FLAT WASHER	
9	4	10MM LOCK WASHER	

- STEP 1. Remove the contents from box and check for damage. Verify all parts are present. Read instructions completely before beginning.
- STEP 2. Determine passenger and driver brackets.
- STEP 3. Remove plastic sway-bar shroud from underneath vehicle with a flat screwdriver. Shroud is held in place with four plastic "push-in" style pins that secure it to the bottom part of the frame. **NOTE:** Reinstallation of shroud is optional.
- STEP 4. Attach mount brackets using metric fasteners. Leave loose.
- STEP 5. Attach Safari Bar to mount brackets using 1/2" fasteners. Level and adjust Safari Bar as desired and tighten all fasteners. Recommended torque values are 64 Ft. Lbs. for 1/2" fasteners and 45 Ft. Lbs. for 10mm fasteners.

### FINISH PROTECTION

Westin products have a high quality finish that must be cared for like any other exposed finish on the vehicle. Protect the finish with a non-abrasive automotive wax, (e.g. Pure Carnauba) on a regular basis. The use of any soap, polish or wax that contains an abrasive is detrimental, as the compounds scratch the finish and open it to corrosion.